




## OPERATING INSTRUCTIONS


---

# DensFlow HP

---

FLOW MEASUREMENT FOR HIGH PRESSURE DENSE PHASE CONVEYING

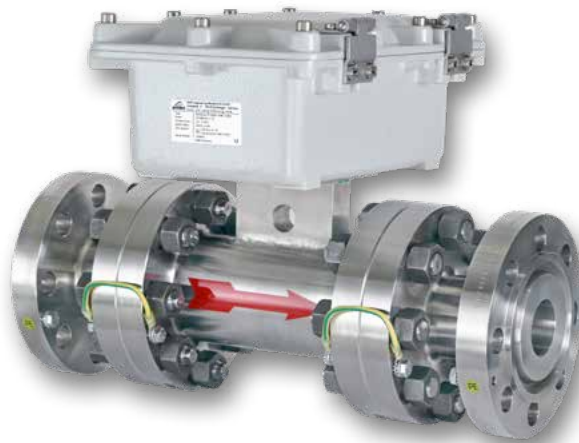

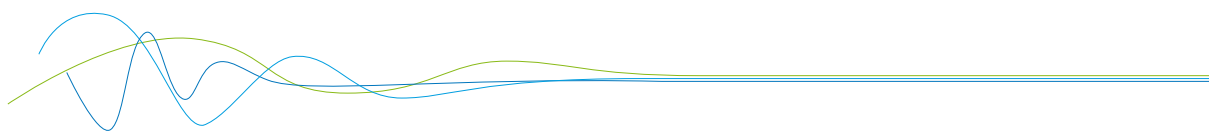

## CONTENTS

	Page
1. System overview . . . . .	3
2. Function . . . . .	4
3. Safety. . . . .	5
3.1 Normal use . . . . .	5
3.2 Identification of hazards . . . . .	5
3.3 Operational safety. . . . .	5
3.4 Technical statement. . . . .	5
4. Mounting and installation . . . . .	6
4.1 Supplied equipment. . . . .	6
4.2 Required tools. . . . .	6
4.3 Mounting of the sensor. . . . .	6
4.4 Mounting the Evaluation unit. . . . .	8
4.5 Use in Ex hazardous areas . . . . .	10
5. Electrical connection . . . . .	11
5.1 Terminal layout MSE 300-FH . . . . .	11
5.2 Terminal layout MSE 300-DR. . . . .	12
5.3 Electrical connection C1-Box. . . . .	13
5.4 Electrical connection sensor . . . . .	13
6. Operator interface . . . . .	14
6.1 Differences between the DIN Rail and field housing Evaluation unit . . . . .	14
6.2 Display. . . . .	15
6.3 PC interface . . . . .	17
6.4 Menu structure . . . . .	19
7. Start-up procedure . . . . .	31
7.1 EasyFlow calibration . . . . .	32
7.2 EasyFull calibration . . . . .	32
7.3 Separate calibration. . . . .	32
7.4 Datalogger function in the software . . . . .	33
7.5 Adjusting the measurement values . . . . .	34
8. Error signalling. . . . .	35
9. Maintenance . . . . .	36
10. Warranty . . . . .	36
11. Troubleshooting . . . . .	36
11.1 Error codes system . . . . .	37
11.2 Error codes density . . . . .	37
11.3 Error codes velocity . . . . .	38
11.4 Error codes flow . . . . .	38
12. Connection example digital output . . . . .	39
13. Technical data . . . . .	40

## 1. System overview

**A measuring point consists of the following components:**

- MSE 300 in the DIN Rail housing or field housing
- Sensor for installation in the pipeline
- C1-Box (optional)

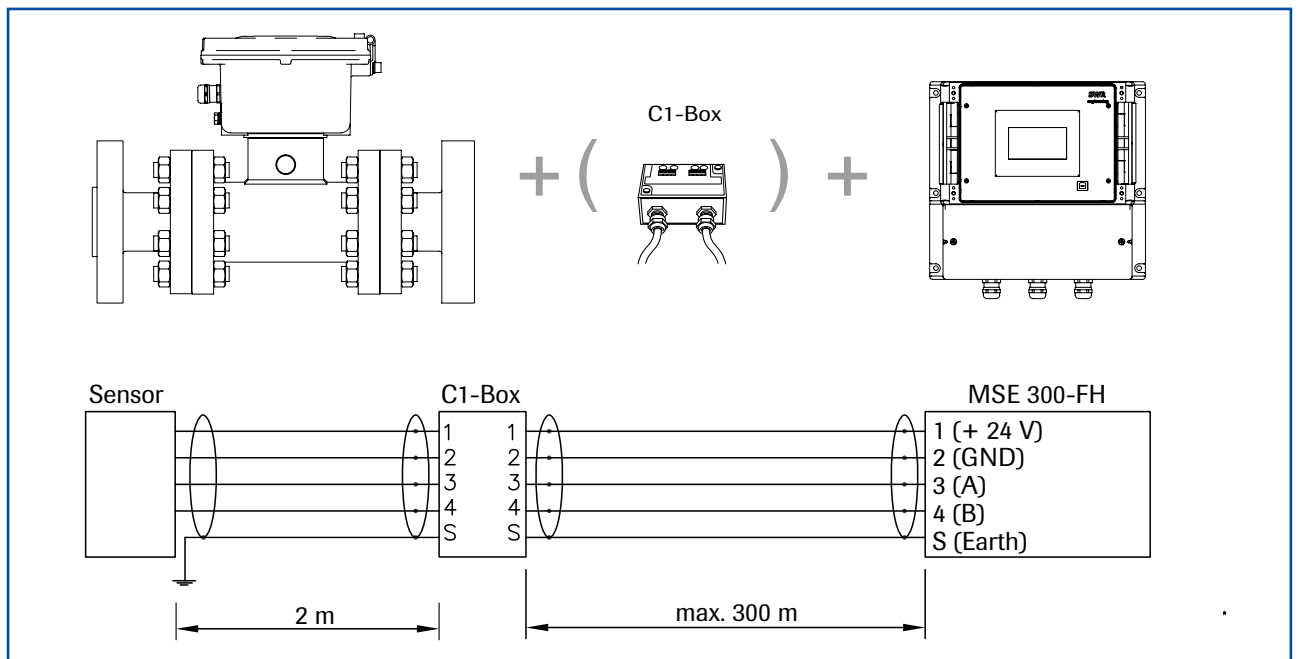


Fig. 1: Overview with C1-Box and MSE 300-FH

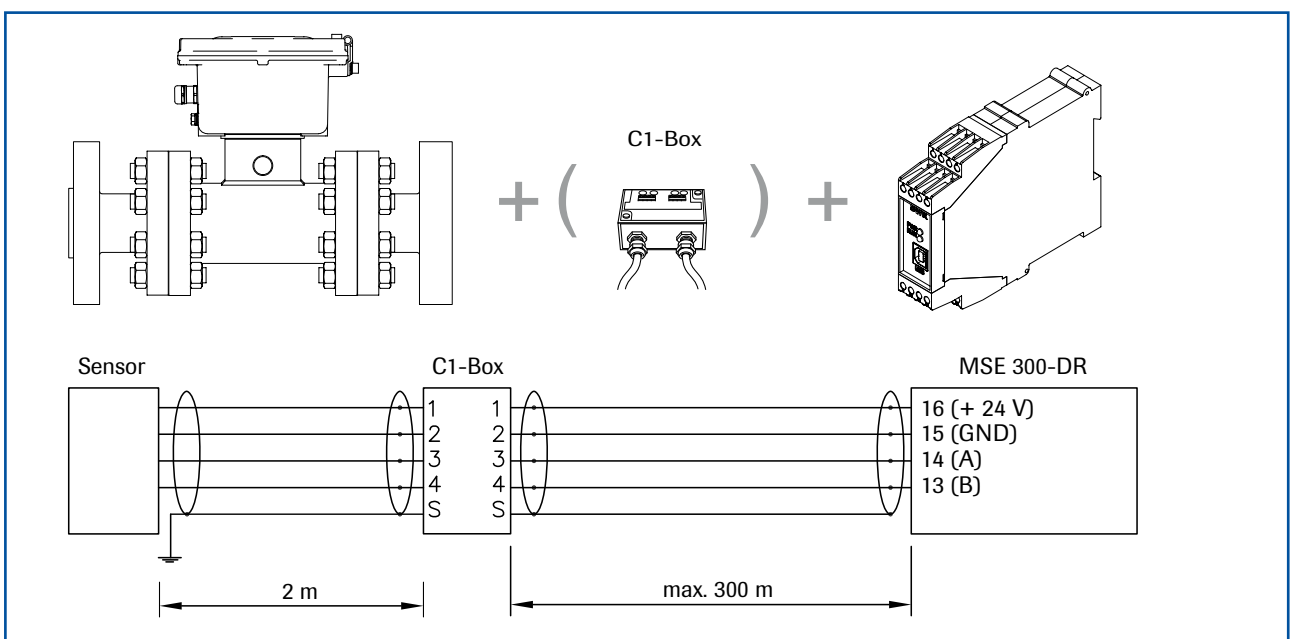
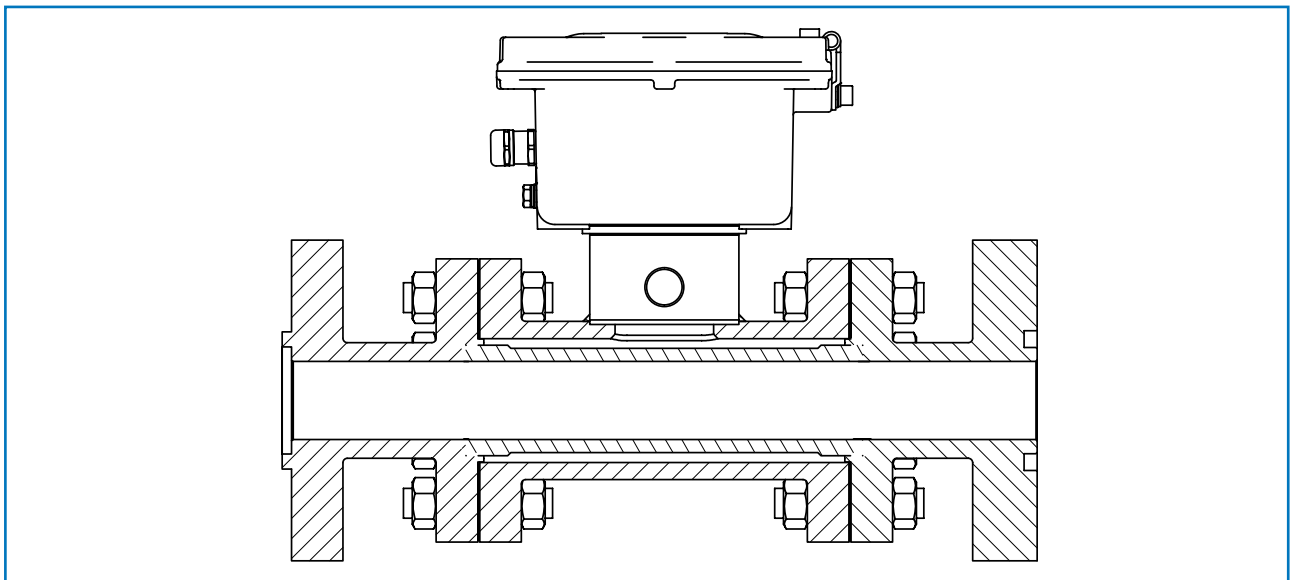


Fig. 2: Overview with C1-Box and MSE 300-DR

## 2. Function

- The DensFlow HP has been specially developed for the volume measurement of solids conveyed in dense flow under high pressure, especially for use in coal gasification plants.
- DensFlow HP is working according to the latest microprocessor technology. By special capacitive linking of an electromagnetic wave a homogeneous measuring field is produced in the pipe.
- The electromagnetic wave brought into the pipe is reciprocally acting with the solid particles. These signals are evaluated in frequency and amplitude.
- The measurement of the solid velocity is done by correlation. Two capacitive / triboelectric sensors are used to generate the correlation signals.
- A complete measuring unit consists of the sensor (measuring pipe) and the Evaluation unit.



*Fig. 3: Cross section sensor*

### 3. Safety

The DensFlow HP measuring system has a state of the art, reliable design. It was tested and found to be in a perfectly safe condition when leaving the factory. Nevertheless, the system components may present dangers to personnel and items if they are not operated correctly.

Therefore, the operating manual must be read in full and the safety instructions followed to the letter.

If the device is not used correctly for its intended purpose the manufacturer's liability and warranty will be void.

#### 3.1 Normal use

- The measuring system may only be installed in metallic pipes to measure the medium passing through them.  
It is not suitable for any other use or measuring system modifications.
- Only genuine spare parts and accessories from ENVEA Process may be used.

#### 3.2 Identification of hazards

- Possible dangers when using the measuring system are highlighted in the operating instructions with the following symbols:



##### **Warning!**

- This symbol is used in the operating manual to denote actions which, if not performed correctly may result in death or injury.



##### **Attention!**

- This symbol is used in the operating manual to denote actions which may result in danger to property.

#### 3.3 Operational safety

- The measuring system may only be installed by trained, authorised personnel.
- During all maintenance, cleaning and inspection work on the pipelines or sensor components, make sure that the system is in an unpressurised state.
- Switch off the power supply before performing any maintenance work, cleaning work or inspections on the pipelines or the sensor components. See the instructions in the section entitled Maintenance and care.
- The sensor must be taken out of the pipeline before any welding work is performed.
- The components and electrical connections must be inspected for damage at regular intervals. If any signs of damage are found, they must be rectified before the devices are used again.

#### 3.4 Technical statement

- The manufacturer reserves the right to adjust technical data concerning technical developments without notice. ENVEA Process will be delighted to provide information about the current version of the operating manual, and any amendments made.

## 4. Mounting and installation

### 4.1 Supplied equipment

- MSE 300 in the DIN Rail or field housing
- Sensor
- Operating Instructions
- C1-Box (optional)

### 4.2 Required tools

- Appropriately sized spanner or ring spanner
- Tools for electrical connections

### 4.3 Mounting of the sensor

The sensor has to be mounted as follows:

- Mounting in horizontal position is also possible. In this case, considerable measuring deviations may occur due to material deposits in the measuring system.
- Follow the necessary distances of valves, bows, fans or cellular wheel sluices etc. and also other measurement devices like temperature and pressure etc. to the sensor (see fig. 4).


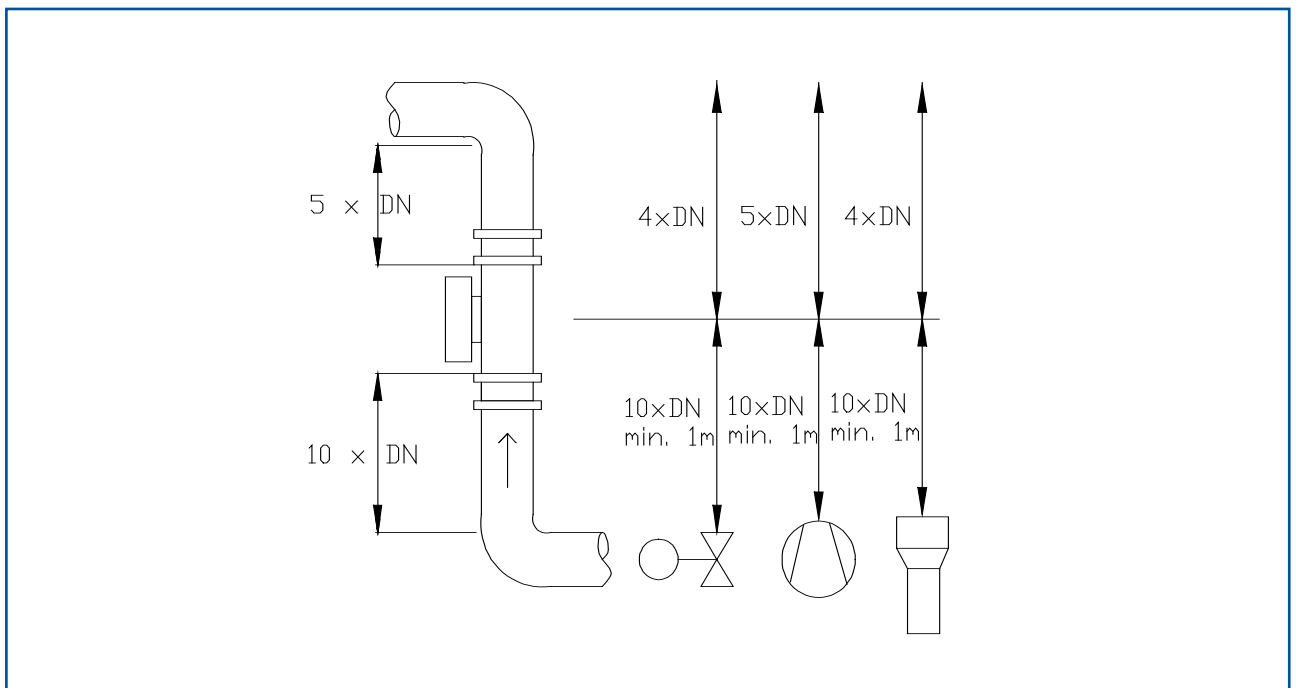


Fig. 4: Minimal distances of the sensor to pipe bends and baffles



### Attention!

- Before installing the sensor, it is essential to check whether in the transition range from pipe and measuring pipe a burr, offset or seal extends into the free area. Possibly any protrusions in the pipe must be removed before mounting the sensor. It is always to ensure that the material enters the measuring tube continuously. It must be ensured that the sensor is properly grounded.
- The screw connections between the sensor body (middle part) and the two mounting sockets may cannot be tightened or loosened any further. All screw connections are supplied ex works with a defined torque and guarantee the pressure resistance of the sensor.
- The sensor must not be subjected to any bending moment or excessive vibration must be exposed to the air (max. 2 x g). When installing, therefore, care must be taken to ensure appropriate interception.

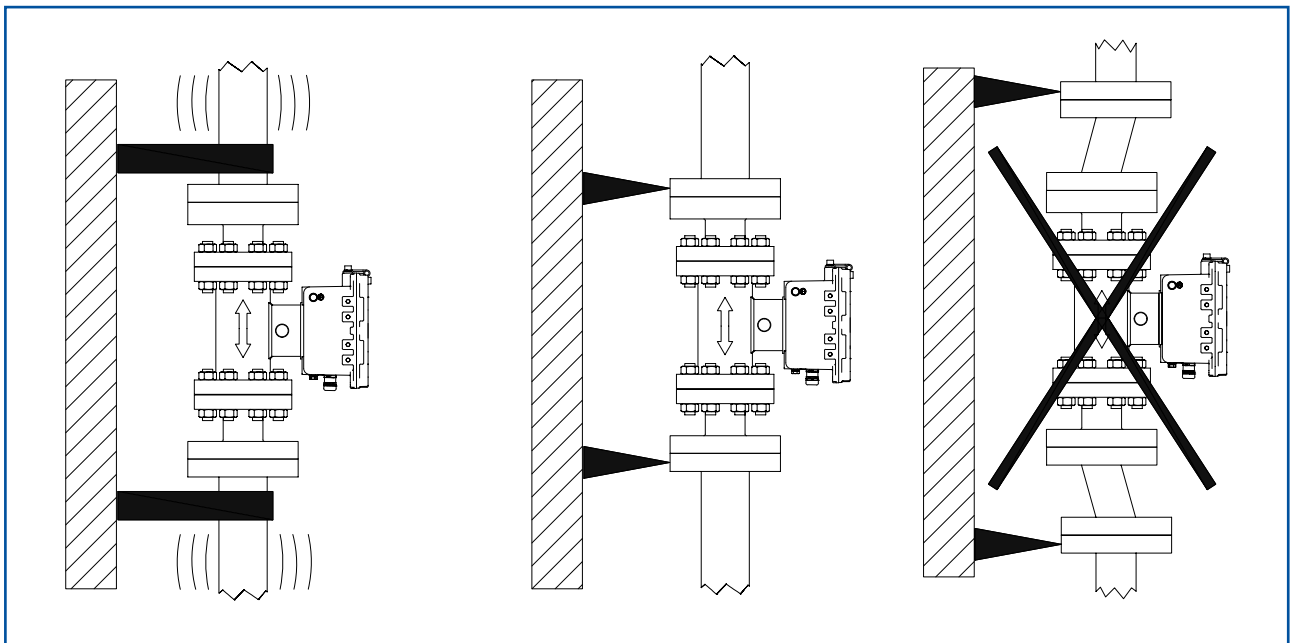

- If explosions occur within the pipeline, pressures higher than the design pressure of the sensor will be generated. If there is a risk of explosion, the sensor should be mounted with a bursting disc flange to protect it.

#### 4.4 Mounting of the Evaluation unit

The Evaluation unit can be installed at a maximum distance of 300 m from the sensor. A cable of type “Ölflex Classic 110 CY” is recommended. The cable should be four wired, twisted and shielded. A minimum cable cross-section of 0.75 mm<sup>2</sup> should be observed. For distances more than 150 m the cable cross-section should be adjusted.

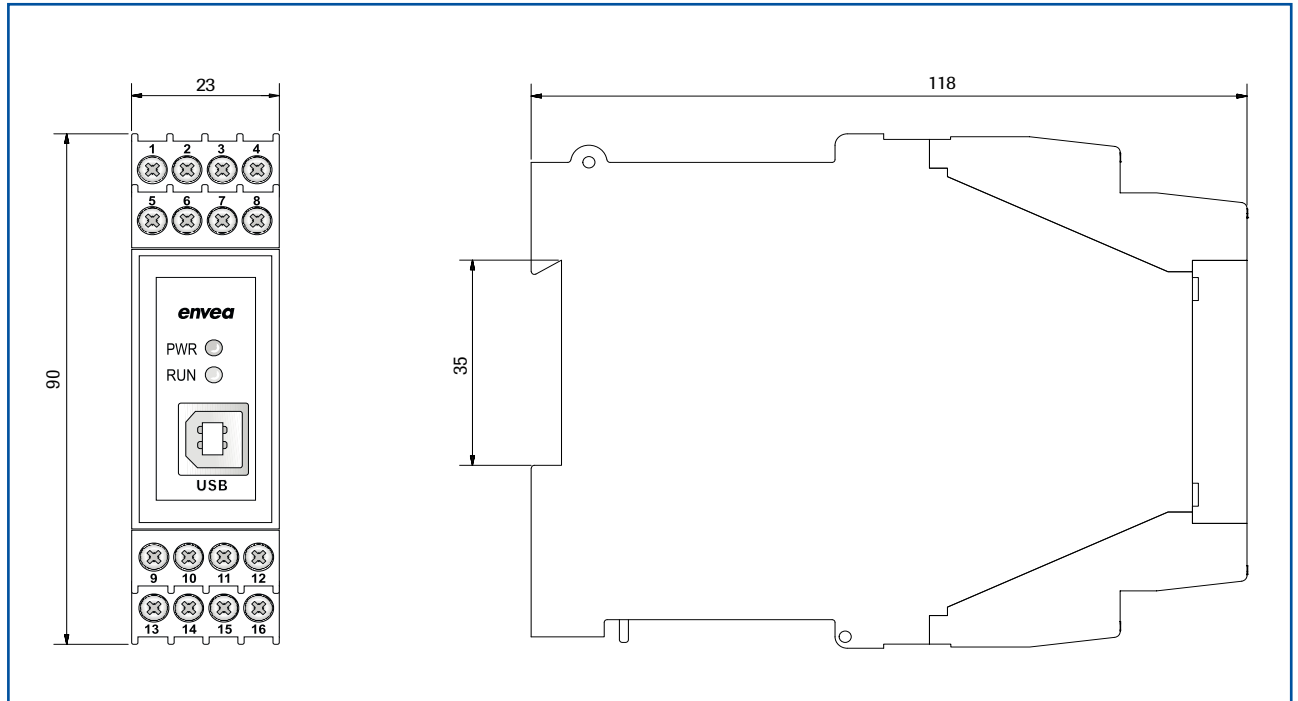


Fig. 6: Dimension of the MSE 300-DR

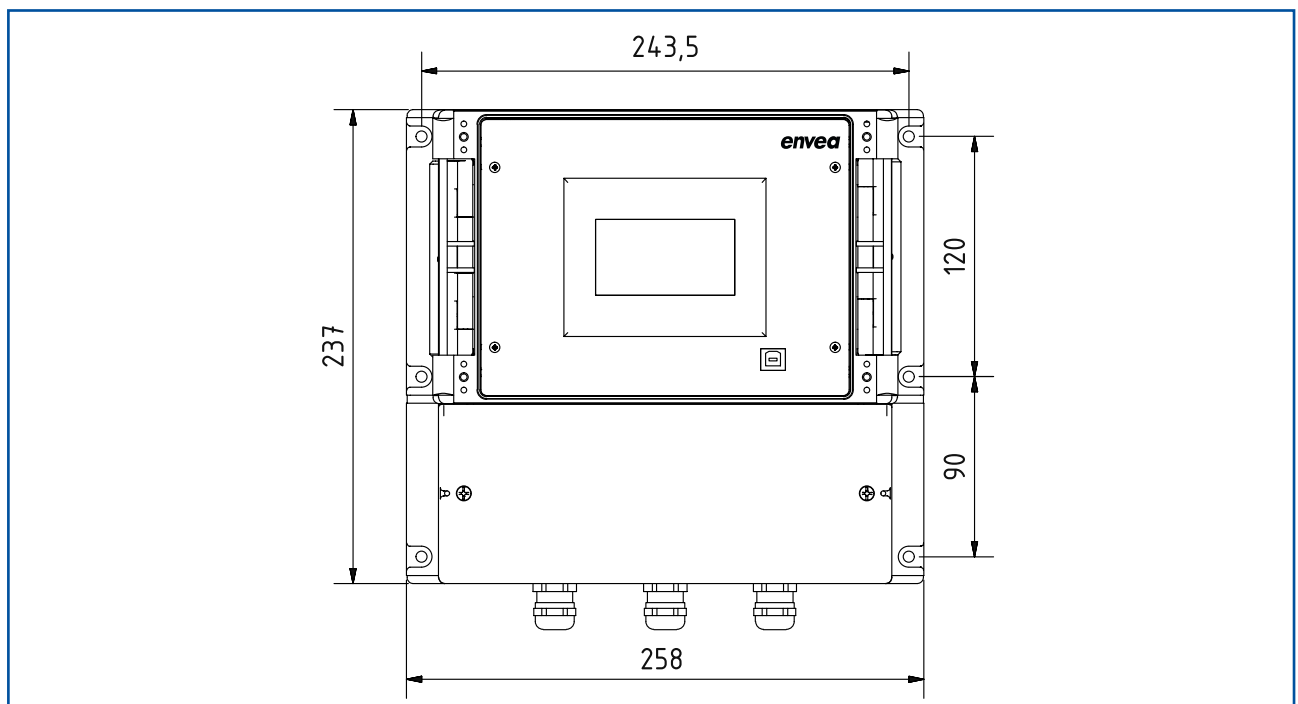


Fig. 7: Dimension of the MSE 300-FH (front view)



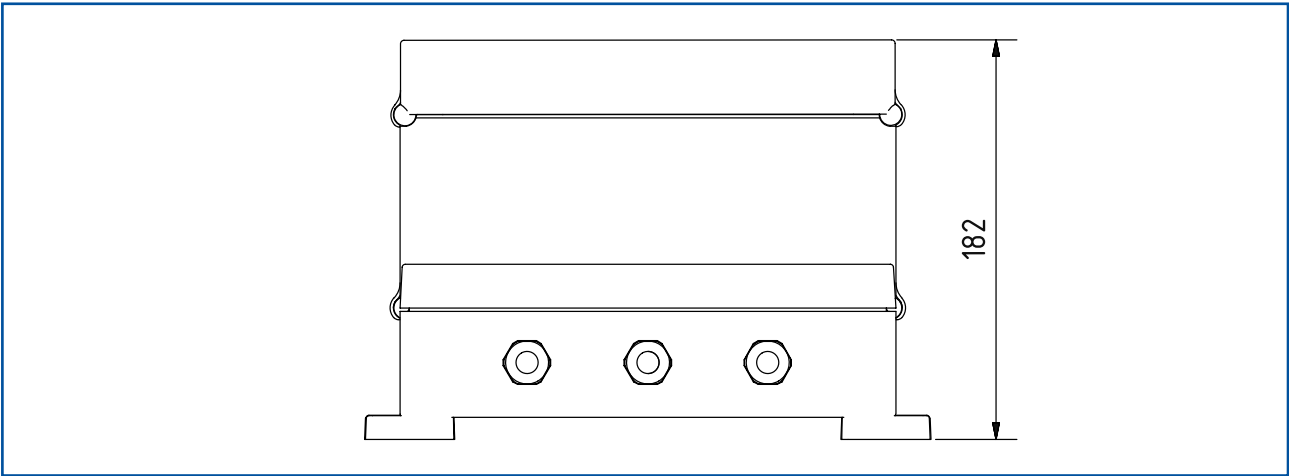


Fig. 8: Dimension of the MSE 300-FH (side view)

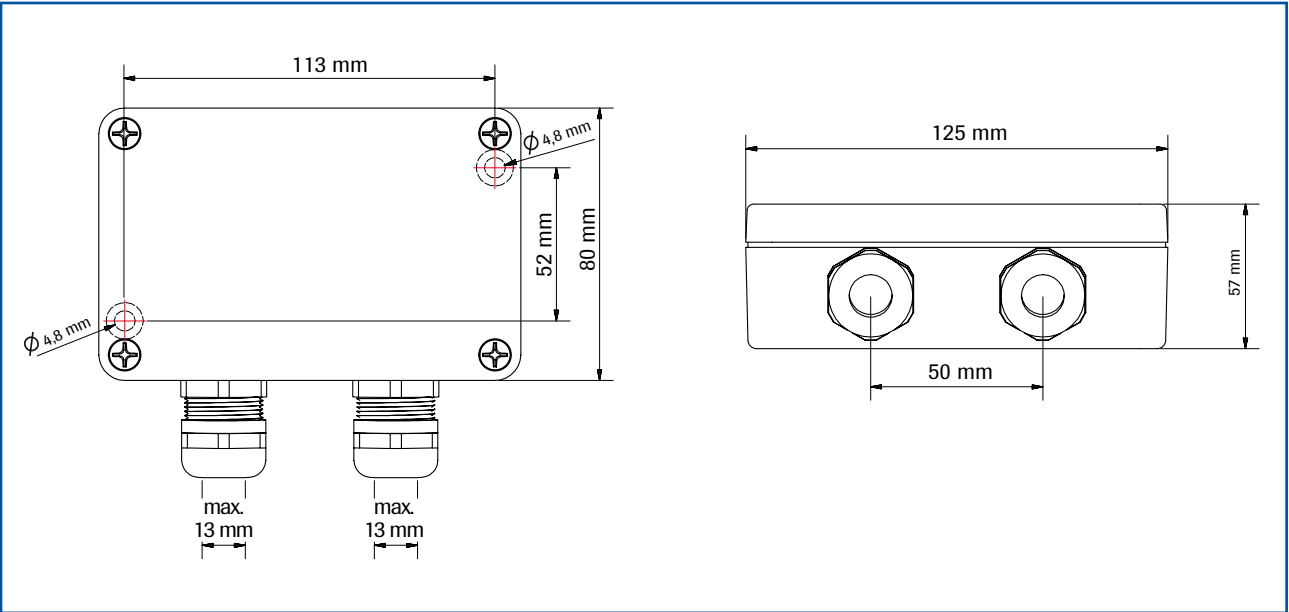


Fig. 9: Dimension of C1-Box


#### 4.5 Use in Ex hazardous areas

**Marking DustEx:**  **II 3D Ex tc IIIC Dc**

- Equipment group: 2
- Equipment category: 3
- For combustible mixtures of air and dust
- IP 65
- Maximum surface temperature 84 °C with  $T_a = 60\text{ °C}$

**Marking GasEx:**  **II 3G Ex dc IIB Gc**

- Equipment group: 2
- Equipment category: 3
- Zone 2
- For combustible mixtures of air and gas
- Allowable process temperature 0 to 80 °C
- Temperature class, T4
- Maximum surface temperature 84 °C with  $T_a = 60\text{ °C}$

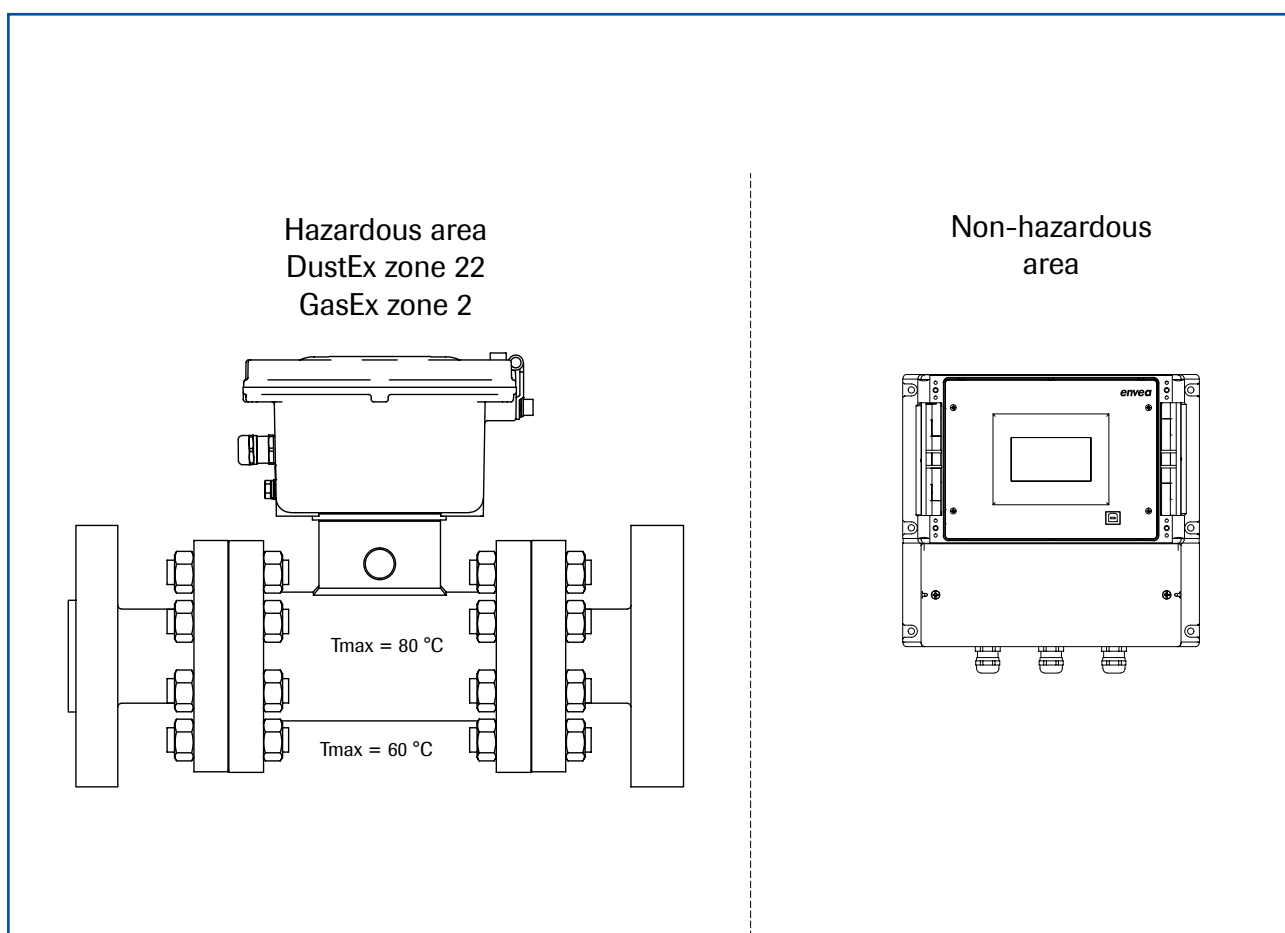

## 5. Electrical connection

### 5.1 Terminal layout MSE 300-FH

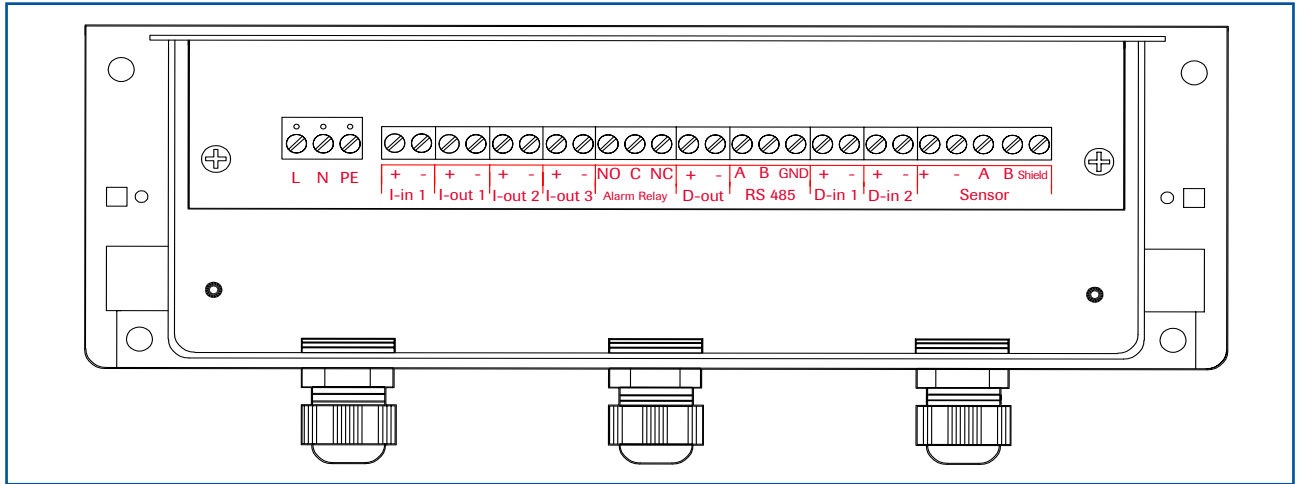


Fig. 11: Electrical connection of the MSE 300-FH

Evaluation unit			
Terminal No.		Connection	
Connection of the power supply			
L / +24 V		Input power supply 230 V/ 50 Hz, 110 V/60 Hz (optional 24 V DC)	
N / 0 V		Input power supply 230 V/ 50 Hz, 110 V/60 Hz (optional 24 V DC)	
PE		Protective Earth	
Connections			
I-in 1	+	Current Input (+)	
	-	Current Input (-)	
I-out 1	+	Current Output 4 ... 20 mA +	Flow
	-	Current Output 4 ... 20 mA - (GND)	
I-out 2	+	Current Output 4 ... 20 mA +	Density
	-	Current Output 4 ... 20 mA - (GND)	
I-out 3	+	Current Output 4 ... 20 mA +	Velocity
	-	Current Output 4 ... 20 mA - (GND)	
Alarm Relay	NO	Isolated Relay Contact NO (make contact)	
	C	Isolated Relay Contact COM (common contact)	
	NC	Isolated Relay Contact NC (break contact)	
D-out	+	Digital Output (+)	
	-	Digital Output (-)	
RS 485	A	RS 485 Interface Data A (+)	
	B	RS 485 Interface Data B (-)	
	GND	RS 485 Interface Ground	
D-in 1	+	NA	
	-	NA	
D-in 2	+	NA	
	-	NA	
Sensor	+	Power supply 24 V (+)	Cable No. 1
	-	Power supply GND	Cable No. 2
	A	RS 485 Data A	Cable No. 3
	B	RS 485 Data B	Cable No. 4
	Shield	Shield	Shield

## 5.2 Terminal layout MSE 300-DR

<b>1</b> Current output - 4 ... 20 mA	<b>2</b> Current output + 4 ... 20 mA	<b>3</b> Input Power supply 0 V DC	<b>4</b> Input Power supply + 24 V DC
<b>5</b> Not used	<b>6</b> Alarm relay NC (break contact)	<b>7</b> Alarm relay C	<b>8</b> Alarm relay NO (make contact)

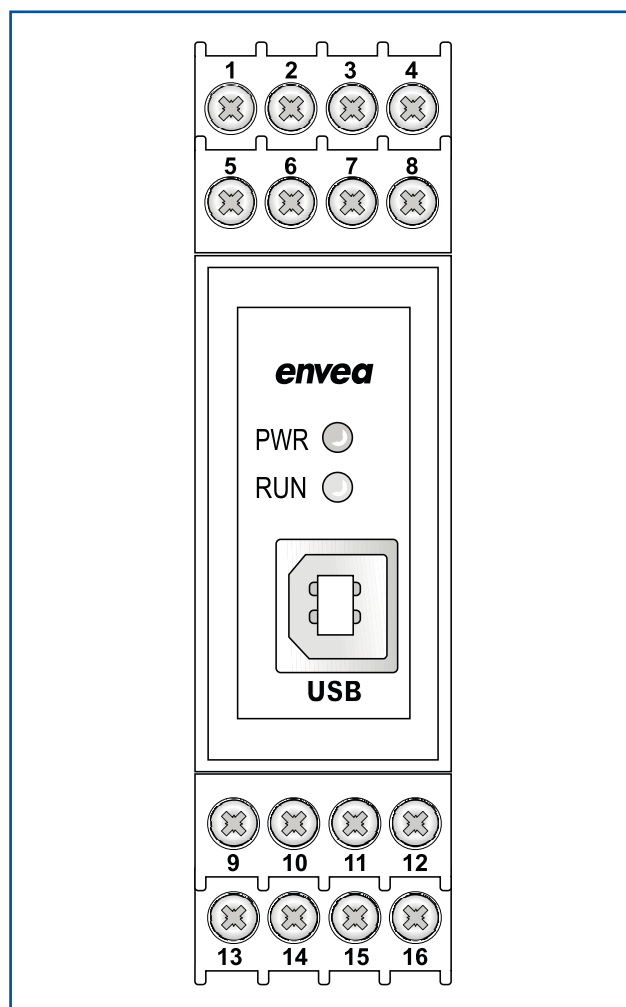


Fig. 12: Electrical connection of the MSE 300-DR

<b>9</b> Digital pulse output (-)	<b>10</b> Digital pulse output (+)	<b>11</b> RS 485 Interface Data B	<b>12</b> RS 485 Interface Data A
<b>13</b> Sensor connection Cable 4 RS 485 Data B	<b>14</b> Sensor connection Cable 3 RS 485 Data A	<b>15</b> <b>Sensor connection</b> <b>Cable 2</b> <b>Power</b> <b>supply 0 V</b>	<b>16</b> <b>Sensor connection</b> <b>Cable 1</b> <b>Power</b> <b>supply + 24 V</b>

### 5.3 Electrical connection C1-Box

#### Sensor 1

- 1** Power supply + 24 V
- 2** Power supply 0 V
- 3** RS 485, Data A
- 4** RS 485, Data B
- S** Shield

#### Evaluation unit

- 1** Power supply + 24 V
- 2** Power supply 0 V
- 3** RS 485, Data A
- 4** RS 485, Data B
- S** Shield

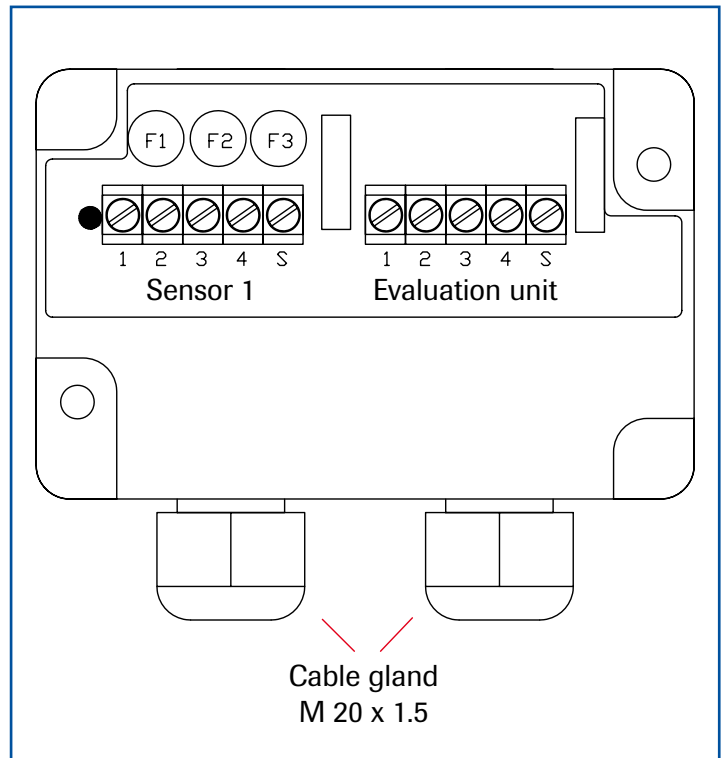


Fig. 13: Electrical connection C1-Box

### 5.4 Electrical connection sensor

- PIN 1:** +24 V DC
- PIN 2:** GND
- PIN 3:** ModBus A
- PIN 4:** ModBus B

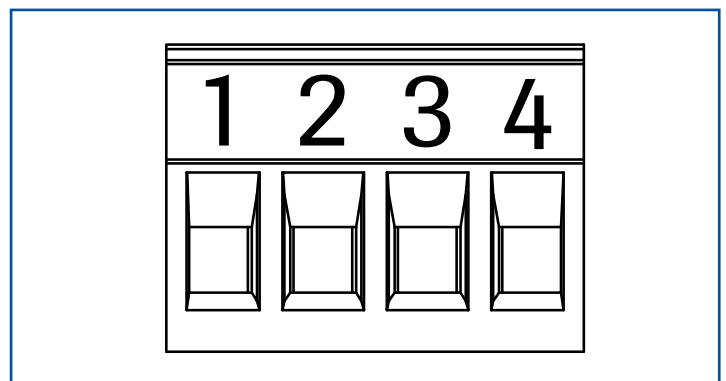


Fig. 14 Electrical connection plug connector

## 6. Operator interface

The MSE 300 is a multi-sensor Evaluation unit. It is therefore strongly recommended to check before commissioning whether the correct sensor is selected in menu **System**.

The operator interface differs depending on the system design:

- DIN Rail housing without touchscreen, operation via PC software
- Field housing with touchscreen, alternative operation via PC software

### 6.1 Differences between the DIN Rail and field housing Evaluation unit

The Evaluation unit in the DIN Rail housing is only a part of the functions available in the field housing. The following overview clarifies the differences between the two versions.


Function	Field housing	DIN Rail
Menu system		
• via PC software	yes	yes
• via display	yes	no
Multiple current outputs for density, velocity and throughput	yes	no
Pulse output for the control of solenoid valves or for measured value output	yes	yes
Alarm system relay output	yes	yes
Remote control digital input	yes	no
Autocorrect analogue input	yes	no
Totaliser display		
• via PC software	yes	yes
• via display	yes	no
Error output		
• on current output	yes	yes
• at relay	yes	yes
• via PC software	yes	yes
• via display	yes	no
• on status LED	no	yes

The Evaluation unit in the DIN Rail is configured exclusively via a USB connection and a PC program. For the Evaluation unit in the field housing, all functions can be configured via the touch-sensitive display. The PC configuration is also possible with the Evaluation unit in the field housing.

**The menu items on the display and in the PC software are numbered in a uniform manner so that they can be referred to later on.**


## 6.2 Display

The display is touch-sensitive. Available keys are displayed directly in context. When the measuring system is first started, a query is initiated to select the language and sensor. If no selection is made, the initialization disappears and the German language with a DensFlow HP sensor is selected.

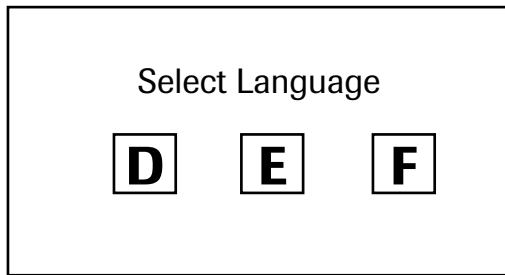

Initialization screen when the Evaluation unit in the field housing started first time.  
Selection of the menu language:

**D**eutsch, **E**nglish, **F**rançais

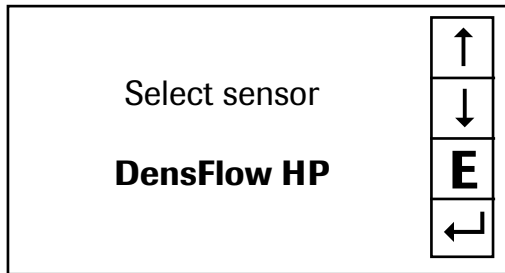


If a language has been selected, the sensor to be used must be selected.

To be available:


SolidFlow 2.0, Paddy, PicoFlow, MaxxFlow HTC, DensFlow, SpeedFlow 2.0, SlideControl 2.0, ProSens, M-Sens 2, M-Sens 3, M-Sens WR.

Afterwards the start page appears.

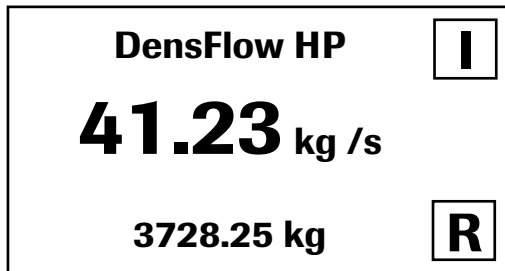

The start page display the following values:

- Tag No "DensFlow HP", freely selectable text which describes the material or the measuring point
- Measurement, here in [kg/s]
- Totaliser value since the last totaliser reset, here in [kg]
- [ I ] key for info
- [ R ] key for totaliser reset

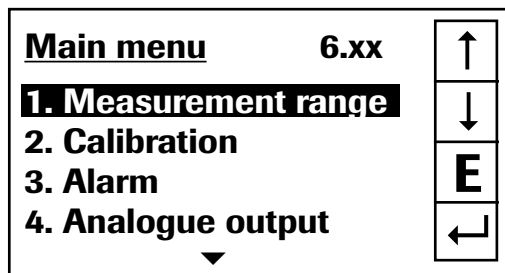

To access the menus, press and hold any area of the display for several seconds.

The sub-menu selection will be displayed:

In the menus and input fields, the displayed keys can be used to browse, select, edit or reject:

- [ Arrow ]: Scroll down the page, select an option, select a position in the input text
- [ E ] for ESC: Interrupt the function without making any changes
- [↵]: Select the function or confirm the input
- [ C ] for Clear: Delete a symbol or number.

Sensor status		
	Value	Qx
D:	82892	100
Q:	216787	99
V:	2.61	99
lout:	4.0/ 4.0/ 4.0	340 kg

With the key [ I ] you can choose between different information windows. In the first window the raw values for density [D] and flow rate [Q], the velocity [m/s], the current outputs [mA] and the quality [%] are displayed.

The second window displays the error memory. Recent error codes always come first. If an error code is repeated, it will appear first, but will not be listed multiple times. In the other windows, the stored sensor parameters are displayed in an overview.

Save changes?

Y

N

If any data has been changed, the change will only be taken into account when you exit the complete menu structure and answer [ Yes ] when asked if you wish to save the changes.

**For reasons of simplicity, a further display menu screen has been dispensed with. The display screens are directly derived from the menu structure in section 6.4.**

**Protection against unauthorised use:**

If a password has been entered in menu **7. System** in **7.6 Password**, which is different to the “0000” default setting, you will be asked to enter a password when attempting to access the menus.

After the password has been successfully entered, the menus will be unlocked for approx. 5 minutes (from the last menu entry).



### 6.3 PC interface

Communication with a laptop or PC is carried out on the DIN Rail as in the field housing version optionally on the terminals via an RS 485 or on the front side via a USB interface.

- ✓ The **RS 485 connection** is attached to the Evaluation unit in the field housing at the ModBus A (+) and ModBus B (-) terminals.

RS 485 is a bus connection; the ModBus address and the baud rate can be set on the device. Upon delivery, the communication parameters are set to:

- ModBus address 1
- Baud rate 9600, 8, E, 1


An RS 485 to USB adapter can be purchased from ENVEA Process.

- ✓ For the USB connection to the DIN rail version is a standard USB-A-B cable included. The USB connection is a point-to-point connection that is not BUS-capable. The ModBus address and the baud rate for the front-side connections cannot be changed and are always:

- ModBus address 1 (or the device answers to all addresses)
- Baud rate 9600, 8, E, 1

When connected to the PC for the first time, any interface drivers enclosed with the Evaluation unit must be installed.

After starting the software, the communication parameters must first be entered accordingly. These can be found in the top left of the program window. The COM port to be set is displayed in the device manager.

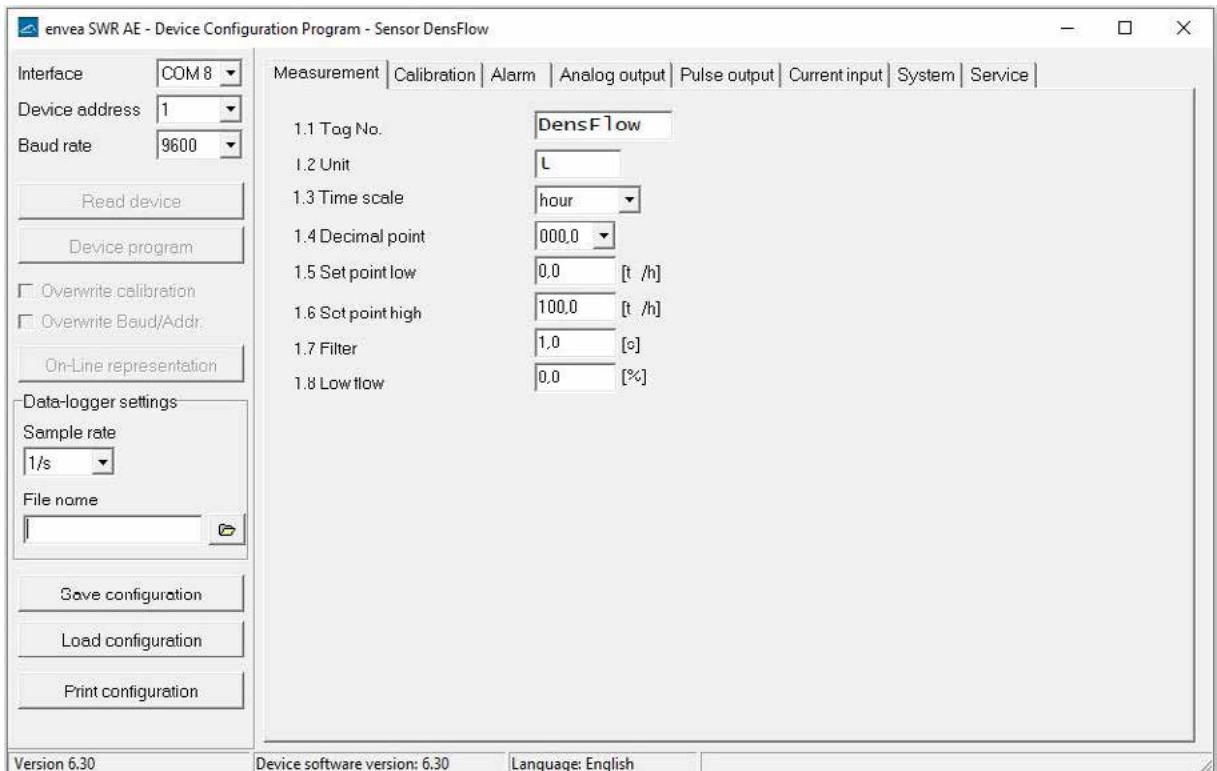

The screenshot shows the 'envea SWR AE - Device Configuration Program - Sensor DensFlow' window. The 'Measurement' tab is active. On the left, there are settings for the interface (COM 8), device address (1), and baud rate (9600). Below these are buttons for 'Read device', 'Device program', and 'On-Line representation'. There are also checkboxes for 'Overwrite calibration' and 'Overwrite Baud/Addr.'. The 'Data-logger settings' section includes a 'Sample rate' dropdown set to '1/s' and a 'File name' input field. At the bottom left are buttons for 'Save configuration', 'Load configuration', and 'Print configuration'. The main area on the right displays various parameters for 'DensFlow': 1.1 Tag No. (DensFlow), 1.2 Unit (L), 1.3 Time scale (hour), 1.4 Decimal point (000,0), 1.5 Set point low (0,0 [t /h]), 1.6 Set point high (100,0 [t /h]), 1.7 Filter (1,0 [s]), and 1.8 Low flow (0,0 [%]). The status bar at the bottom shows 'Version 6.30', 'Device software version: 6.30', and 'Language: English'.

Communication is established by clicking on “Read device”. The acknowledgement message “Parameter read in” is displayed. If an error message is displayed instead, check the communication parameters and cable connections between the PC and the Evaluation unit.

The edited data is transmitted to the Evaluation unit via “Device program”.

Critical data concerning the ModBus communication and the calibration must be confirmed before the parameters are transmitted to the Evaluation unit:

- ✓ If, when saving the parameters in the Evaluation unit, the system calibration data is changed, this action must be confirmed by checking “Overwrite calibration”.
- ✓ If, when saving the the parameters in the Evaluation unit, the system interface parameter are changed, this must be confirmed by checking the selection “Overwrite Baud/Addr.”.

In addition, with the PC software,

- the Evaluation unit parameters can be saved in a file (Save configuration)
- the Evaluation unit parameters can be loaded from a file (Load configuration)
- the Evaluation unit parameter can be printed via the windows standard printer (Print configuration)
- the measured values can be logged in a data logger file (enter the file name and storage rate, and activate the data logger on the online display)

The software language can be set by right-clicking the “Sprache/Language/Langue” field in the bottom program line on “German/English/Français”.

#### **Protection against unauthorised use:**


The PC interface does not have a password prompt as it is assumed that only authorised personnel will have access to the PC and the software. However, the password to operate the display can be read and changed in menu **7. System** in **7.6 Password**.

## 6.4 Menu structure


The menu structure supports the user when adjusting the measuring range, the calibration, the measurement values and the choice of additional functions. In this connection, the numbering both on the display and in the PC interface is identical:

### 1. Measurement

Set all relevant measuring range settings

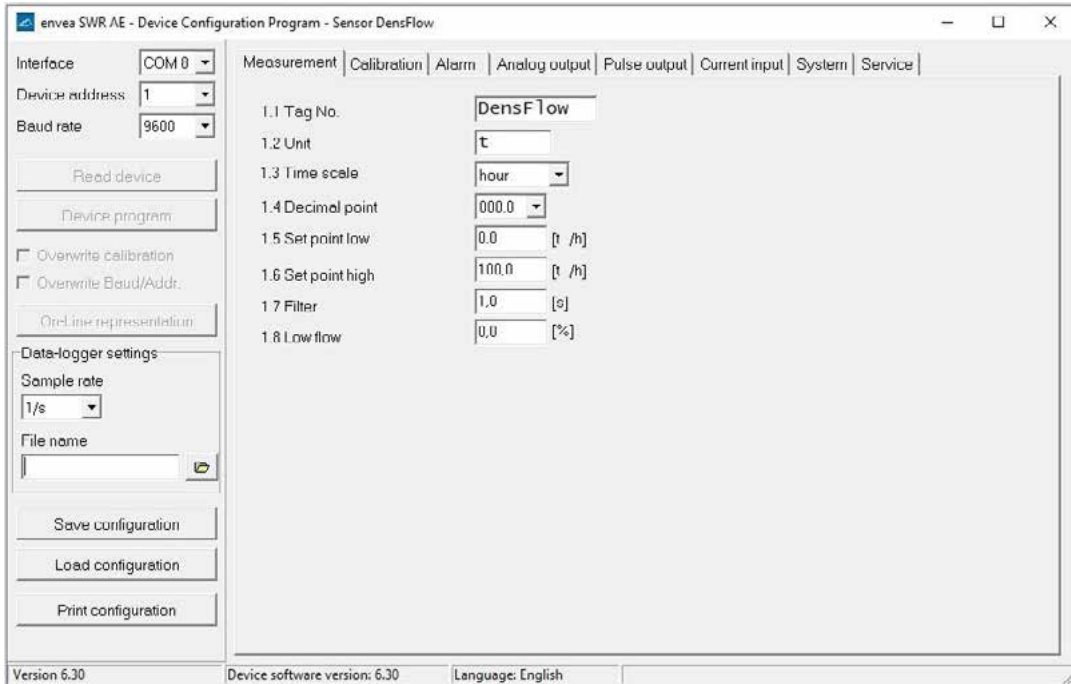

1.1 Tag No.	<b>Input:</b> Free text (10 characters)	Name of the measurement point or product.
1.2 Unit	<b>Input:</b> Unit text, e. g. kg	Required mass flow unit.
1.3 Time scale	<b>Selection:</b> hour / minute / second	Time base for the integration by the totaliser and the pulse output.
1.4 Decimal point	<b>Selection:</b> 0000, 0.000, 00.00, 000.0	Number representation and decimal point-accuracy in the measurement menu.
1.5 Set point low	<b>Input:</b> 0 ... 9999	Throughput rates under this value will not be displayed at the current output. This does not concern the display indicator, totaliser or pulse output.
1.6 Set point high	<b>Input:</b> 0 ... 9999	Throughput rates above this value will not be displayed at the current output. This does not concern the display indicator, totaliser or pulse output.
1.7 Filter	<b>Input:</b> 0.0 s ... 999.9 s	Filtering of measurement for the indicator and the output values.
1.8 Low flow	<b>Input:</b> 0.0 % ... 99.9 %	Throughput below this threshold are displayed as zero and are NOT totalised. Indication as % to measuring range end.

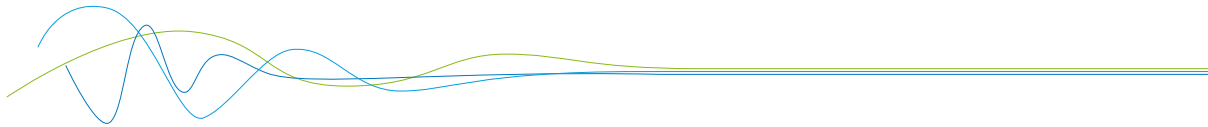

## 2. Calibration

Deposit a calibration curve.

Depending on the selection under **7.2.1 Calibration**, the parameters to be entered are changing.

envea SWR AE - Device Configuration Program - Sensor DensFlow

Interface: COM 8  
Device address: 1  
Baud rate: 9600

Read device  
Device program

☐ Overwrite calibration  
☐ Overwrite Baud/Addr.  
On-Line representation

Data-logger settings:  
Sample rate: 1/s  
File name:

Save configuration  
Load configuration  
Print configuration

Measurement Calibration Alarm Analog output Pulse output Current input System Service

2.1 Conveyor type: Pneumatic  
2.2 Calibration points: 5  
2.3 Calibration factor Kk (Kc, Kd): 1.00 1.000 1.000

2.6 Q-Limit: 50 [%]  
2.9 Ref. Sensor: ☐

EasyFlow


	Flow value [t / h]	QD [%]	QQ [%]	QV [%]	nD	nQ	nV	nTotal	V [m/s]	Raw value D	Raw value Q
1.Pt	1.0	55	60	65	0	0	0	0	0.000000	0.000000	0.000000
2.Pt	2.0	55	60	65	0	0	0	0	0.000000	0.000000	0.000000
3.Pt	3.0	55	60	65	0	0	0	0	0.000000	0.000000	0.000000
4.Pt	4.0	55	60	65	0	0	0	0	0.000000	0.000000	0.000000
5.Pt	5.0	55	60	65	0	0	0	0	0.000000	0.000000	0.000000

Version 6.30 Device software version: 6.30 Language: English

### EasyFlow calibration

2.1	Conveyor type	<b>Selection:</b> pneumatic	The DensFlow HP is only suitable for use in pneumatic lines.
2.2	Calibration points	<b>Selection:</b> 1 ... 5	Number of support points for a linearisation above the operating range.
2.3	Calibration factor [KK]	<b>Input:</b> 0.01 ... 9.99	Factor for the subsequent adjustment of the actual measurement. All measurements are measured with this factor.
2.4	Factor Kc	<b>Display</b>	Automatically entered correction value for the electrical behaviour of the material, supplied by a correction sensor installed in the process.
2.5	Factor Kd	<b>Display</b>	Automatically entered correction value for the density behaviour of the material, supplied by a correction sensor.
2.6	Q-Limit	<b>Input:</b> 0 ... 100 %	Limit for the quality threshold, for sensor signals to be used for calibration and measurement. 0 ... 99 % = active speed measurement 100 % = speed measurement deactivated


2.7	Calibration	<b>Submenu</b>	
2.7.1	Value P1	<b>Input:</b> Measurement value	Output measurement in the selected mass/time unit.
2.7.2	P1 - actual	<b>Display</b>	Display actually raw values for this calibration point.
2.7.3	P1-Cal.	<b>Input:</b> Raw values	Transfer of the current raw value (filtered) from the mass flow with the key [←]. The raw values of density, throughput and velocity are checked for quality and only values above the <b>2.6 Q limit</b> are used.
2.7.n	... (depending on the number of calibration points)		For additional support points (depending on <b>[2.2]</b> ), additional value pairs can be set.
2.8	Sensor measuring	<b>Submenu</b>	
2.8.1	Empty	<b>Input:</b> Raw value	Customer empty adjustment
2.8.2	Full	<b>Input:</b> Raw value	Customer full adjustment
2.8.3	No Flow	<b>Input:</b> Raw value	Customer adjustment: No Flow
2.8.4	Flow	<b>Input:</b> Raw value	Customer adjustment: Flow

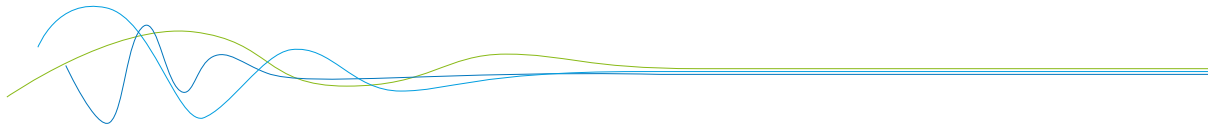

## EasyFull calibration

2.1	Conveyor type	<b>Selection:</b> pneumatic	The DensFlow HP is only suitable for use in pneumatic lines.
2.2	Calibration factor KK	<b>Input:</b> 0.01 ... 9.99	Factor for the subsequent adjustment of the actual measurement. All measurements are measured with this factor.
2.3	Factor Kc	<b>Display</b>	Automatically entered correction value for the electrical behaviour of the material, supplied by a correction sensor installed in the process.
2.4	Factor Kd	<b>Display</b>	Automatically entered correction value for different density behaviour with constant material - supplied by a correction sensor.
2.5	Bulk density	<b>Input:</b> 0.1 ... 9999.9	Density of the material in kg/m <sup>3</sup> .
2.6	Unit factor	<b>Input:</b> 0 ... 9999.9	Conversion factor between entered <b>1.2 Unit</b> to kg.
2.7	Fall height	<b>Input:</b> 1 ... 20.000 mm	Drop height above the sensor in millimeter.
2.8	Q-Limit	<b>Input:</b> 0 ... 100 %	Limit for the quality threshold, for sensor signals to be used for calibration and measurement. 0 ... 99 % = active speed measurement 100 % = speed measurement deactivated


2.9 Bulk density (raw)	<b>Input:</b> Raw value	Raw value at 100 % filled sensor
2.10 Sensor measuring	<b>Submenu</b>	
2.10.1 Empty	<b>Input:</b> Raw value	Customer empty adjustment
2.10.2 Full	<b>Input:</b> Raw value	Customer full adjustment
2.10.3 No Flow	<b>Input:</b> Raw value	Customer adjustment: No Flow
2.10.4 Flow	<b>Input:</b> Raw value	Customer adjustment: Flow

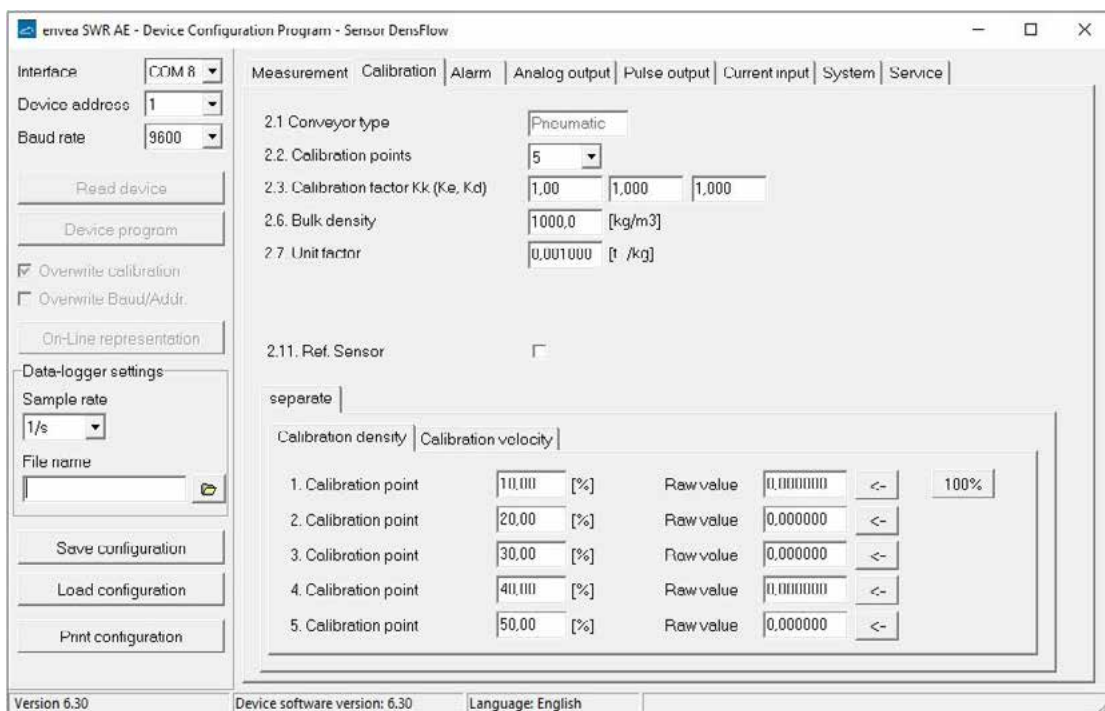

The screenshot shows the 'envea SWR AE - Device Configuration Program - Sensor DensFlow' window. The 'Calibration' tab is selected. On the left, there are settings for the interface (COM 8), device address (1), and baud rate (9600). Below these are buttons for 'Read device', 'Device program', 'Overwrite calibration', 'Overwrite Baud/Addr.', 'On-Line representation', 'Data-logger settings', 'Sample rate' (1/s), 'File name', 'Save configuration', 'Load configuration', and 'Print configuration'. The main area shows configuration for '2.1 Conveyor type' (Pneumatic), '2.2 Calibration points' (5), '2.3 Calibration factor Kk (Ke, Kd)' (1,00, 1,000, 1,000), '2.6 Bulk density' (1000,0 [kg/m3]), and '2.7 Unit factor' (0,001000 [t /kg]). Below this is a section for '2.11. Ref. Sensor' with a 'separate' checkbox. Under 'separate', there are two sub-sections: 'Calibration density' and 'Calibration velocity'. The 'Calibration density' section has five rows, each with a 'Calibration point' (10,00, 20,00, 30,00, 40,00, 50,00 [%]), a 'Raw value' (0,000000), and a '100%' button. The 'Calibration velocity' section is currently empty.


### Separate calibration

If the single calibration is selected, it is possible to set a linearisation on the bulk density and on the speed. This calibration option should only be performed by ENVEA Process trained personnel.

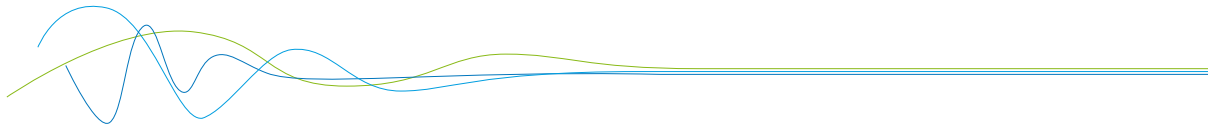


### 3. Alarm

Settings for relay contacts

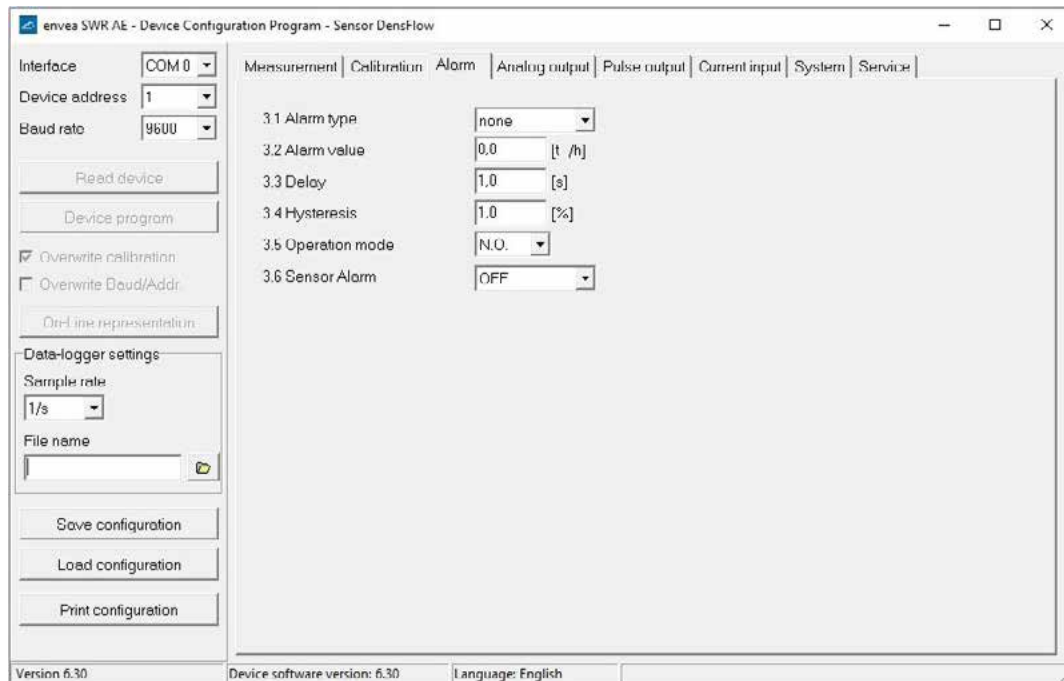

3.1	Alarm type	<b>Selection:</b> none / MIN / MAX / FLOW	<b>none:</b> no alarm output on relay output <b>MIN:</b> min. alarm on relay output <b>MAX:</b> max. alarm on relay output <b>FLOW:</b> flow detection on relay output
3.2	Alarm value	<b>Input:</b> 0 ... 999.9	Threshold for monitoring on selected alarm type: MIN, MAX, FLOW.
3.3	Delay	<b>Input:</b> 0.1 ... 99.9 s	The value must permanently exceed or fall below the set limit during this time.
3.4	Hysteresis	<b>Input:</b> 0,1 ... 99.9 %	The alarm continues for as long as the measurement is not smaller or larger than the limit value plus or minus hysteresis.
3.5	Operation mode	<b>Selection:</b> NC / NO	<b>NC:</b> the relay is closed while there is no alarm. <b>NO:</b> the relay is closed, if there is an alarm.
3.6	Sensor alarm	<b>Selection:</b> OFF / ERR / PROC	<b>OFF:</b> sensor or process errors will not activate the relay. <b>ERR:</b> serious sensor errors lead to an alarm on the relay. <b>PROC:</b> fatal sensor errors and process indicators lead to an alarm on the relay. More information about the ERR and PROC signals, will be found in section error flags.




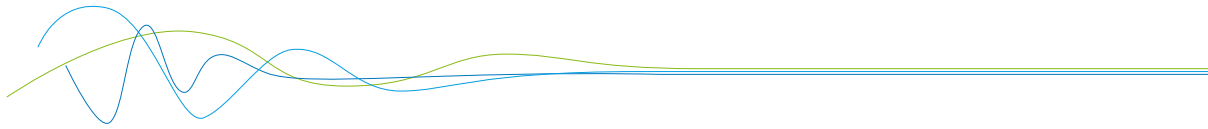

#### 4. Analog output

Settings and calibration of analog output

4.1	MIN limit	<b>Input:</b> 0 ... 22 mA	Default settings: 3.2 mA
4.2	MAX limit	<b>Input:</b> 0 ... 22 mA	Default settings: 21 mA
4.3	Alarm value	<b>Input:</b> 0 ... 22 mA	Output value for sensor alarm. Default settings: 2 mA
4.4	Alarm mode	<b>Selection:</b> Alarm / Freeze	<b>Alarm:</b> alarm value at output, during alarm measuring value is 0. <b>Freeze:</b> last measurement value would be freeze on Analogue output, till the error is fixed.
4.5	V-Min 4 mA	<b>Input:</b> 0 ... 99.99 m/s	Velocity at 4 mA
4.6	V-Max 20 mA	<b>Input:</b> 0 ... 99.99 m/s	Velocity at 20 mA
4.7	Analog output 1	<b>Submenu</b>	
4.7.1	Output variable	<b>Selection:</b> Q / V / D	<b>Q:</b> throughput output at the analog output <b>V:</b> speed output at the analog output <b>D:</b> density output at the analog output
4.7.2	Calibration 4 mA	<b>Selection:</b> Set output current	The current output can be set via key functions and adjusted at the receiving end.
4.7.3	Calibration 20 mA	<b>Selection:</b> Set output current	The current output can be set via key functions and adjusted at the receiving end.

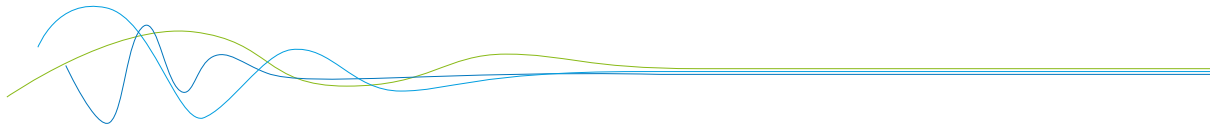

4.8	Analog output 2	<b>Submenu</b>	
4.8.1	Output variable	<b>Selection:</b> Q / V / D	<b>Q:</b> Throughput output at the analog output <b>V:</b> Speed output at the analog output <b>D:</b> Density output at the analog output
4.8.2	Calibration 4 mA	<b>Selection:</b> Set output current	The current output can be set via key functions and adjusted at the receiving end.
4.8.3	Calibration 20 mA	<b>Selection:</b> Set output current	The current output can be set via key functions and adjusted at the receiving end.
4.9	Analog output 3	<b>Submenu</b>	
4.9.1	Output variable	<b>Selection:</b> Q / V / D	<b>Q:</b> Throughput output at the analog output <b>V:</b> Speed output at the analog output <b>D:</b> Density output at the analog output
4.9.2	Calibration 4 mA	<b>Selection:</b> Set output current	The current output can be set via key functions and adjusted at the receiving end.
4.9.3	Calibration 20 mA	<b>Selection:</b> Set output current	The current output can be set via key functions and adjusted at the receiving end.


The current output can be calibrated that the zero point (output of 4 mA) is applied to the background noise of the measuring point. If the noise level decreases due to process changes, material caking or other aging effects, less than 4 mA can be output at the analog output. In this way, a zero offset can be detected (zero point drift).

If this function is not required for process-technical reasons, the zero point must be set during calibration on a raw value of zero and / or the **4.1 MIN limit** must be set to 4 mA.

If the settings of the 4 mA or 20 mA signals are changed, the checkbox **Overwrite calibration** must be set.

## 5. Pulse output

Passive signal for pulse cleaning or output of a totaliser.

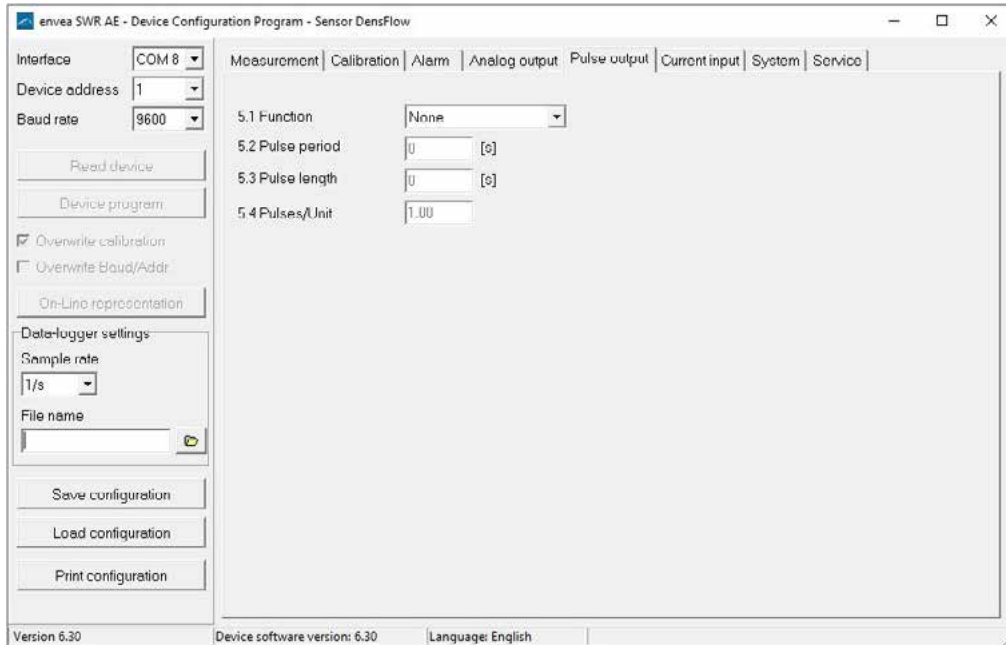

The screenshot shows the 'envea SWR AE - Device Configuration Program - Sensor DensFlow' window. The 'Pulse output' tab is active. The left sidebar contains settings for the interface (COM 8, Device address 1, Baud rate 9600), buttons for 'Read device', 'Device program', 'On-Line representation', 'Save configuration', 'Load configuration', and 'Print configuration'. The main area shows the 'Pulse output' configuration with the following settings:

- 5.1 Function: None (dropdown)
- 5.2 Pulse period: 0 [s]
- 5.3 Pulse length: 0 [s]
- 5.4 Pulses/Unit: 1.00

At the bottom, the status bar indicates 'Version 6.30', 'Device software version: 6.30', and 'Language: English'.

### 5.1 Function

**Selection:** None /  
cleaning / quantity

**None:** no pulse output

**Cleaning:** possibility to control a solenoid valve for compressed air-fluid.

**5.4 Pulses / Unit** without function.

**Quantity:** the quantity is send as an impulse sequence to the output; Unit is like **1.2 Unit**.

**5.2 pulse period** and **5.3 pulse length** without function.

### 5.2 Pulse period

**Input:** 1 s ... 600 s

Time between two impulses

### 5.3 Pulse length


**Input:** 1 s ... 60 s

Length of impulse

### 5.4 Pulses/unit

**Input:** 0.01 ... 99.9

Number of pulses per unit

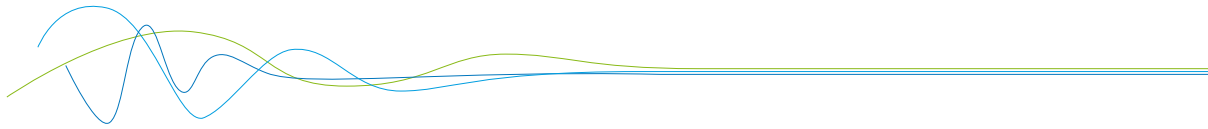


## 6. Analog input

Possibility of autocorrection via external current signal.

**The connection of the current input is not galvanically isolated.**

If the connection is incorrect, the CPU of the Evaluation unit can be destroyed. An external galvanic isolation, by current disconnecter or similar shall be provided.

6.1	Input calibration 4 mA	<b>Selection:</b> Calibrate 4 mA input	The 4 mA signal must be read in via key function.
6.2	Input calibration 20 mA	<b>Selection:</b> Calibrate 20 mA input	The 20 mA signal must be read in via key function.
6.3	Correction	<b>Selection:</b> ON / OFF	<b>ON:</b> correction is activated. <b>OFF:</b> correction is disabled.
6.4	P1-input	<b>Input:</b> 4 mA ... 20 mA	Enter the current strength to be used for correction.
6.5	P1-factor	<b>Input:</b> 0.01 ... 10	Factor for adjustment of the actual measured value.
6.n	Pn-input	<b>Input:</b> 4 m A ... 20 mA	Possibility of further current values and correction factor.
6.n	Pn-factor	<b>Input:</b> 0.01 ... 10	

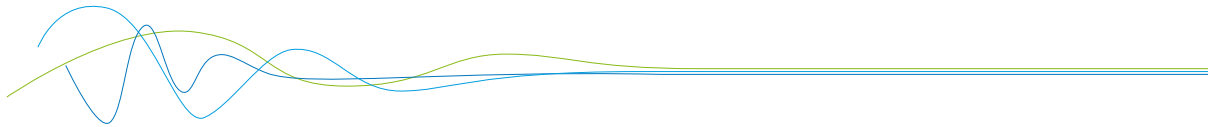


## 7. System

Basic adjustment of the system and Evaluation unit.


7.1	Language	<b>Selection:</b> D / E / F	Language on the Evaluation unit
7.2	Sensors	<b>Submenu</b>	
7.2.1	Calibration	<b>Selection:</b> EasyFlow / EasyFull / separate	<b>EasyFlow:</b> calibration via known throughput <b>EasyFull:</b> calibration via empty- and full-calibration <b>Separate:</b> calibration for ENVEA Process trained personnel
7.2.2	Sensor	<b>Selection:</b> SolidFlow 2.0 / Paddy / PicoFlow / MaxxFlow HTC / DensFlow / SpeedFlow 2.0 / SlideControl 2.0 / ProSens / M-Sens 2 / M-Sens 3 / M-Sens WR	The Evaluation unit verifies the availability of registered sensors in the selected type, calculate the measurement values on this basis and signals if necessary corresponding errors. Incorrect sensor selection leads to a refusal to communicate.
7.3	Display	<b>Submenu</b>	
7.3.1	Sensor info	<b>Selection:</b> ON / OFF	<b>ON:</b> show info key on display <b>OFF:</b> hide info key
7.3.2	Process indicator	<b>Selection:</b> ON / OFF	<b>ON:</b> process indicators will be shown on display and via double blink on the DIN Rail. <b>OFF:</b> process indicators will not be shown.
7.3.3	Totalisator	<b>Selection:</b> ON / OFF	<b>ON:</b> totalisator will be shown on display. <b>OFF:</b> totalisator will be hide.
7.3.4	Backlight	<b>Input:</b> 0 ... 99 min	Lighting of the Display in minutes 0 = permanent lighting 99 = time selection for lighting

7.3.5	Contrast	<b>Input:</b> 0 ... 100 %	In the case of display exchange, the contrast can be changed via the PC software, if necessary.
7.4	Address	<b>Input:</b> 1 ... 255	ModBus address of Evaluation unit, if operated on a PLC or PC as a slave.
7.5	Baud rate	<b>Selection:</b> 4800/9600/19200/ 38400 baud	Communication speed of the Evaluation unit when this is operated as a ModBus slave on a PLC or a PC.
7.6	Password	<b>Input:</b> 0 ... 9999	0000 = no password XXXX = Four-digit password, which is queried when the menu is called up on the display. Automatic lock five minutes after the last display input.
7.7	Init Screen	<b>Selection:</b>	If Init Screen is selected, the Evaluation unit is reset to factory settings after the next voltage reset.

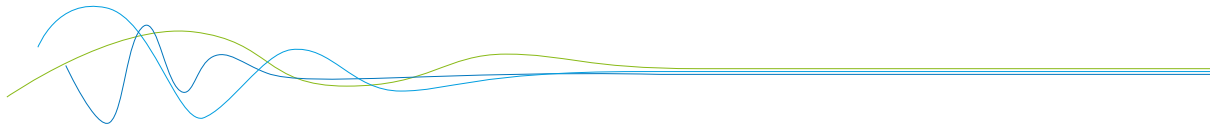

## 8. Service

Display on the sensor status

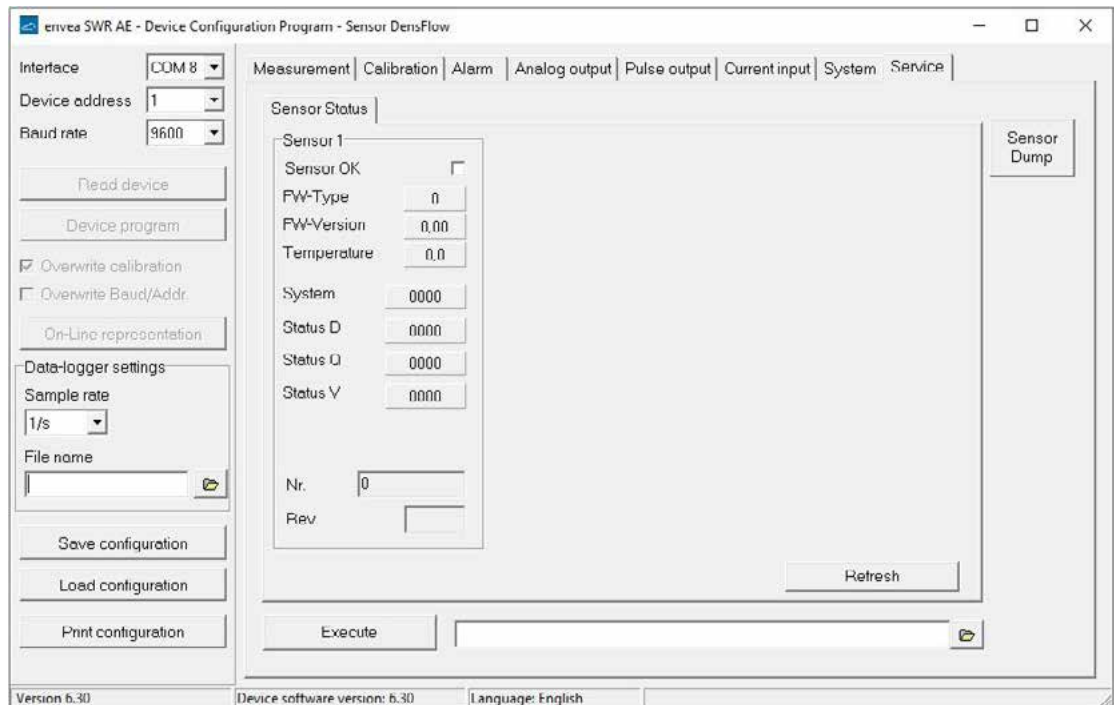

The status of each connected sensor is displayed in menu **8. Service**. FW type, FW version, temperature, serial number and possible hardware errors are automatically read and displayed.

**Only according to instructions from personnel of ENVEA Process:**

If a detailed error analysis is necessary, a copy of all ModBus registers can be stored as a text file in the installation folder of the software by clicking on the **sensor dump**. This is only possible with the PC software.

In addition, a software with deeper access to the sensors can be started via the PC software.

On the touchscreen only the information of the individual sensor will be shown.

## 7. Start-up procedure

Upon delivery, the sensor is not calibrated to the product to be measured and must be parameterised when started up. During the process, the mass flows measured by the sensor are assigned the display values and output quantities required by the user.

The following points must first be checked:

- The correct installation of the sensor (vertical and stepfree installation)
- The correct connection between the sensor and the Evaluation unit
- The proper grounding of the sensor

First, it must be checked whether the correct sensor is selected under **System**. After this the measuring range as well as the physical units are entered under **1. Measurement**. The **1.2 Unit** is a free text, there are 10 characters available.

The calibration of the system is then carried out under **2. Calibration**.

Under **7.2.1 Calibration** can be selected between different calibration variants. Depending on the possibility of sensor calibration, the sensor can be calibrated via a known throughput, an empty and a full calibration, or in single mode.

## 7.1 EasyFlow calibration

The EasyFlow calibration calibrates the sensor to a known throughput.

Every calibration point should be use at different mass flow, so the sensor can calculate a linearisation between this points. If there is no opportunity for two different calibration points, the system use a virtual zero point.

For calibration under normal conditions with minimum two different calibration points, a stable mass flow must be set. The known mass flow is entered under **2.7.n P1-Value**. The RAW-values for this calibration point can be calibrate by directly reading the values under **2.7.n P1 Calibration**, out of the process.

If nonlinearities occur at different delivery rates, up to 5 additional support points can be selected under **2.2 Number of calibration points**.

The sensor also determines the quality of the measured values and decides independently whether the determined raw values are used for calibration and measurement. Based on the **2.6 Q-Limit**, the sensor decides which raw values are used for the calibration and which raw values are neglected. If **2.6 Q-Limit** is set to 100 %, the measured values are calculated over a fixed velocity and the active velocity measurement is deactivated.

**This gives the basic function of the device and the measured values are displayed.**

## 7.2 EasyFull calibration

For the EasyFull calibration it is necessary to proceed a zero calibration. The zero point should be calibrate with running process, but no material flow. Under this condition the zero point will be calibrate under **2.10.1 Empty**. After calibration the zero point, a full point must be calibrated. For the Full point the sensor has to fill up with the material to be measured and proceed a full calibration under **2.10.2 Full**. Assumed the **2.7 Fall height**, **2.5 Bulk density** and **2.6 Unit factor** has been set correctly, this should result a real flow indication now. The **2.6 Unit factor** must be used if the **1.2 Unit** isn't kg. The sensor calculate with kg/m<sup>3</sup>, so it must set a factor from the output unit to kg (example: 1 t → 1000 kg = factor 0.001).

If there is still some deviation adjust the flow value from now on with the **2.2 Calibration factor [Kk]**.

The calibration factor could be calculate as follow:

$$\frac{\text{Reference value}}{\text{DensFlow indication}} \times \text{actual calibration factor} = \text{new calibration factor}$$

**This gives the basic function of the device and the measured values are displayed.**

## 7.3 Separate calibration

For single calibration, density and velocity must be assigned a raw value. First, the real **2.6 Bulk density** in kg/m<sup>3</sup> must be specified. If the **1.2 Unit** deviates from kg, a conversion factor between the units must be deposited in **2.7 Unit factor**. The unit factor is calculated as follows:

$$1.2 \text{ Unit} = t = 1000 \text{ kg} = \text{Unit factor } 0.001$$



For the calibration of density and speed up to five calibration points can be set. Under **2.8.n Calibration point**, the loading of the sensor in % is now specified and assigned to the appropriate raw value in **2.8.n Raw value**.

Subsequently, the same procedure is performed with the speed calibration. Under **2.9.n Calibration point**, the current velocity is given in m/s and assigned to the raw value in **2.9.n Raw value**.

The calibration points must be entered manually. The raw values for density and velocity can be read in directly or determined in the software using the data logger function and then entered manually.

**This gives the basic function of the device and the measured values are displayed.**

If there is still some deviation adjust the flow value from now on with the **2.2 Calibration factor** [KK]. The calibration factor could be calculate as follow:

$\frac{\text{Reference value}}{\text{DensFlow indication}} \times \text{actual calibration factor} = \text{new calibration factor}$
---



#### Attention!

Once the calibration procedure has been carried out, the calibration parameters must be confirmed before transfer. On the Evaluation unit in the field housing, this is done by a security query when leaving the menu structure. In the software it is mandatory to set the checkmark **Overwrite calibration**. If the checkbox is set, the parameters can be transferred to the Evaluation unit by clicking on **Program device**.

## 7.4 Datalogger function in the software

To determine the raw values via the Datalogger function of the PC software, a file path first must be stored. The file path and file name can be selected by clicking on the folder icon next to File name. If the file path is stored, the sample rate could still be changed, this is recommended for long recordings. For determining the raw values for a calibration point, the default setting of 1 (raw value) / second is recommended.

To start the datalogger, the **On-line representation** must be started. As soon as the checkbox on **Datalogger activated** is set in the on-line display, the recording starts and the log file is created in the background.

The data logger is only activated as long as the on-line display is open. If the window of the on-line display or the entire software is closed, the data recording is aborted without further notice.

For an evaluation of the recorded log file, it must be opened with Excel or a similar program. In order to determine the appropriate raw value for a calibration point, the mean value must be determined from the period of the reference extraction. The mean value can be calculated by Excel with the function =AVERAGE ( ). The calculated mean value of the raw value will be entered in the box next to the raw value in the configuration software. In order to transmit the determined parameters to the Evaluation unit, the check mark **Overwrite calibration** must be set.

## 7.5 Adjusting the measurement values

The system's additional functions can be set in the following menus:

Alarms	Values for flow rate lower or upper limits can be set in <b>3. Alarm</b> . A sensor monitoring alarm can also be activated here.
Analogue output	The assignment of the analogue output values takes place in <b>4. Analogue output</b> . Upper and lower limit of the permitted current and the fault current are set here. The analogue output is an active signal. In the field housing version, analogue outputs 2 + 3 are provided for the MaxxFlow HTC. All other sensors provide their 4 ... 20 mA signal to analogue output 1.
Pulse output	Under <b>5. Pulse</b> output there is the possibility of using different impulses. A cleaning pulse can be used for a pneumatic cleaning on the sensor. For an external totaliser output there are impulses, which correspond to a specific conveyed mass. The pulse duration is 50 Hz, a faster query cannot be guaranteed. An internal totaliser function integrates the mass flow over time. The pulse output is an open collector and need an active power supply for pulsing.
Current input	Various input currents can be stored under <b>6. Current input</b> . When the current is applied, the corresponding correction factor is applied to the measured value. The input current also must be adjusted here.
System	In <b>7. System</b> , functions such as selection of the menu language, the number of connected sensors, the display screen or ModBus addressing and speed are summarized.
Totaliser	The entire flow volume since the last totaliser reset can be read with the totaliser function. A reset can be performed directly via the display by pressing the [R] symbol.
Empty calibration	If a zero shift occurs, it is not advisable to set a new zero point directly. If a new zero point is set again and again, this could lead to deviations in the measuring signal. A zero offset is in most cases a process problem, for example caking in the measuring tube. For processes with caking materials, there is the possibility of a cleaning flange. Please get in contact with ENVEA Process for more information.

## 8. Error signalling

For monitoring the availability a wide range of functions for self-diagnostics were integrated, in order to signal various errors:

### 1. Fatal Error (ERR):

Fatal Errors (ERR) always set the current output to the set alarm value. Technical problems or problems with the complete system are displayed on the touchscreen. An ERR require every time a replacement or repair of a component:

- Failure of the communication to a sensor (sensor failure)
- Failure of a subcomponent of a sensor (temperature monitoring, heating control, memory, data consistency etc. on the sensor)
- Inconsistency of signal paths in the sensor (the amplifier stages, DC offsets)

### 2. Process indicators (PROC):

Process indicators (PROC) are merely a violation of the set parameters and are to be understood as information to improve the measuring process. Process indicators are not output at the current output, but can be displayed on the display as well as optionally on the relay:

- Temperature instability in the sensor due to thermal stress from outside (over-temperature, low temperature)
- Overload of the sensor caused by material flow (too much, too little)

**Process indicators** show if necessary temporary appearing oddities in the process, which can be avoided with a better adjustment of sensor parameters or conveying parameters. They thus deliver more an indication of potential for optimization at the measuring point.

Type of fault	Display (field housing)	Run-LED (DIN Rail)	Relay (optional)	Current output
<b>No fault</b>	Sensor status OK on the information display (Button [I])	Single flash every second	Normal state	4 ... 20 mA
<b>PROC (process indicators)</b>	Display with indicator code in the bottom display line; advanced information on key [I]	Double flash every second	Activated, when Relais-Alarm-Option PROC is chosen	4 ... 20 mA
<b>ERR (fatal errors)</b>	Display with error code in the bottom display line; advanced information on key [I]	Triple flash every second	Activated, when Relais-Alarm-Option PROC <b>or</b> ERR is chosen	2 mA (or for the current output adjusted, chosen alarm value)

**Error codes:** Error and indicator codes are composed of the letter E (ERR = error), P (PROC = process indicator) and a three-digit hexadecimal value from “000” to “FFF”. From the displayed code the cause can be investigated.

**Time-out error:** In order not to complicate the start up of a process plant by process- or heating status errors, nonfatal errors will be signalled only after a period of about 5 minutes after a reset of the measuring system at the outputs. The time-out period is visible in a small “t” in the left upper corner of the display (field housing only).

## 9. Maintenance



- **Warning!**  
Danger of shock with open housing!
- Switch the power supply off before performing any maintenance or repair work on the measuring system. The transport pipe must not be operational when replacing the sensor.
- Repair and maintenance work may only be carried out by electricians.

## 10. Warranty

On condition that the operating conditions are maintained and no intervention has been made on the device and the components of the system are not damaged or worn, the manufacturer provides a warranty of 1 year from the date of delivery.

In the event of a defect during the warranty period, defective components will be replaced or repaired at ENVEA Process plant free of charge as considered appropriate. Replaced parts will become ENVEA Process property. If the parts are repaired or replaced at the customer's site at its request, the customer must pay the travel expenses for ENVEA Process service personnel.

ENVEA Process cannot accept any liability for damage not suffered by the goods themselves and in particular ENVEA Process cannot accept liability for loss of profit or other financial damages suffered by the customer.

## 11. Troubleshooting



### Warning!

The electrical installation must be carried out by qualified, authorised persons.

Problem	Cause	Solution
System does not operate.	No power. Cable break. Defective device.	Check power supply. Check for connection and cable break. Contact ENVEA Process.
Outputs are the wrong values.	Incorrect calibration.	Recalibrate the sensor.
Sensor error.	Sensor connection incorrect. Sensor failure.	Check wiring connections. Replace sensor.
<b>Do not open sensor electronics. To do so will make the warranty void!</b>		

## 11.1 Error codes system

Typ	CODE	DIN Rail flashing	Current output	Cause	Action
ERR	S:E0002	3	2 mA	Defective data bus	Turn power off / on. If not helpfully sensor exchange.
ERR	S:E0004	3	2 mA	Defective data bus	Turn power off / on. If not helpfully sensor exchange.
ERR	S:E0010	3	2 mA	Loading measuring is not plausible	Turn power off / on. If not helpfully sensor exchange.
ERR	S:E0020	3	2 mA	Defective memory	Turn power off / on. If not helpfully sensor exchange.
ERR	S:E0040	3	2 mA	Defective temperature measurement	Turn power off / on. If not helpfully sensor exchange.
ERR	S:E0080	3	2 mA	Defective parameter memory	Turn power off / on. If not helpfully sensor exchange.
ERR	S:E0100	3	2 mA	Parameter table not readable	Turn power off / on. If not helpfully sensor exchange.
ERR	S:E0200	3	2 mA	Parameter table not written	Turn power off / on. If not helpfully sensor exchange.
ERR	S:E0400	3	2 mA	Reset request not execute	Turn power off / on. If not helpfully sensor exchange.
PROC	S:P0800	2	4...20 mA	Measuring value below Q-Limit	Adjust Q-Limit, recalibrate sensor, proof process
PROC	S:P8000	2	4...20 mA	No temperature compensation	New temperature compensation from SWR needed

## 11.2 Error codes density

Typ	CODE	DIN Rail flashing	Current output	Cause	Action
PROC	D:P0001	2	4...20 mA	Measuring value high limit	Adjust alarm value
ERR	D:E0002	3	2 mA	Defective receiver	Turn power off / on. If not helpfully sensor exchange.
PROC	D:P0004	2	4...20 mA	Overrange	Check sensor parameter, check process
ERR	D:E0008	3	2 mA	Static signals	Turn power off / on. If not helpfully sensor exchange.
ERR	D:E0010	3	2 mA	Defective receiver	Turn power off / on. If not helpfully sensor exchange.
PROC	D:P0020	2	4...20 mA	Measuring range underflow	Check sensor parameter, check process
PROC	D:P0040	2	4...20 mA	Measuring range overflow	Check sensor parameter, check process
ERR	D:E0080	3	2 mA	Defective Evaluation unit	Turn power off / on. If not helpfully sensor exchange.
PROC	D:P0100	2	4...20 mA	Low temperature, Warning: unreliable output measuring value	Proof heater, wait for heating time, insulate cold sources
PROC	D:P0200	2	4...20 mA	High temperature, Warning: unreliable output measuring value	Insulate hot sources
PROC	D:P0400	2	4...20 mA	No movement in the material	Check for caking, check zero point
PROC	D:P0800	2	4...20 mA	Very dynamic measuring value	Check process
PROC	D:P1000	2	4...20 mA	Negative measured value (zero drift)	Check process, check zero point, check for caking

### 11.3 Error codes velocity


Typ	CODE	DIN Rail flashing	Current output	Cause	Action
ERR	V:E0001	3	2 mA	Defective internal amplifier (DC Offset)	Turn power off / on. If not helpfully sensor exchange.
PROC	V:P0002	2	4...20 mA	Low signal	Check sensor parameter, check process
ERR	V:E0004	3	2 mA	Defective velocity electrode	Turn power off / on. If not helpfully sensor exchange.
ERR	V:E0008	3	2 mA	Defective velocity electrode	Turn power off / on. If not helpfully sensor exchange.
ERR	V:E0010	3	2 mA	Asymetric velocity signal	Check parameter, turn off velocity measuring, exchange sensor
PROC	V:P0020	2	4...20 mA	Inverted input signal on one channel	Check parameter, turn off velocity measuring, exchange sensor
PROC	V:P0040	2	4...20 mA	Overrange	Check parameter, check process
PROC	V:P0080	2	4...20 mA	Overrange	Check parameter, check process
PROC	V:P0100	2	4...20 mA	Bad result single measurement	Check parameter, turn off velocity measuring, check process
PROC	V:P0200	2	4...20 mA	Periodic speed signal	Check parameter, turn off velocity measuring, check process
PROC	V:P0400	2	4...20 mA	Too high speed, not measurable signal	Check parameter, turn off velocity measuring, check process
PROC	V:P1000	2	4...20 mA	Negative speed measurement	Check parameter, turn off velocity measuring, check process
PROC	V:P2000	2	4...20 mA	Empty buffer	Wait for some minutes otherwise turn power off / on

### 11.4 Error codes flow


Typ	CODE	DIN Rail flashing	Current output	Cause	Action
ERR	Q:E0080	3	2 mA	Unsynchronous measurement signal	Turn power off / on. If not helpfully sensor exchange.
ERR	Q:E0100	3	2 mA	No material movement available	Check parameter, check process
ERR	Q:E0200	3	2 mA	No loading measurement	Check loading parameter
PROC	Q:P0400	2	4...20 mA	No measured velocity	Check velocity parameter
PROC	Q:P1000	2	4...20 mA	Loading and speed show different status of motion detection	Check loading and velocity parameter
PROC	Q:P2000	2	4...20 mA	Empty buffer	Wait for some minutes otherwise turn power off / on

**A detailed error description and following troubleshooting can be carried out by trained ENVEA Process technicians.**

## 12. Connection example digital output

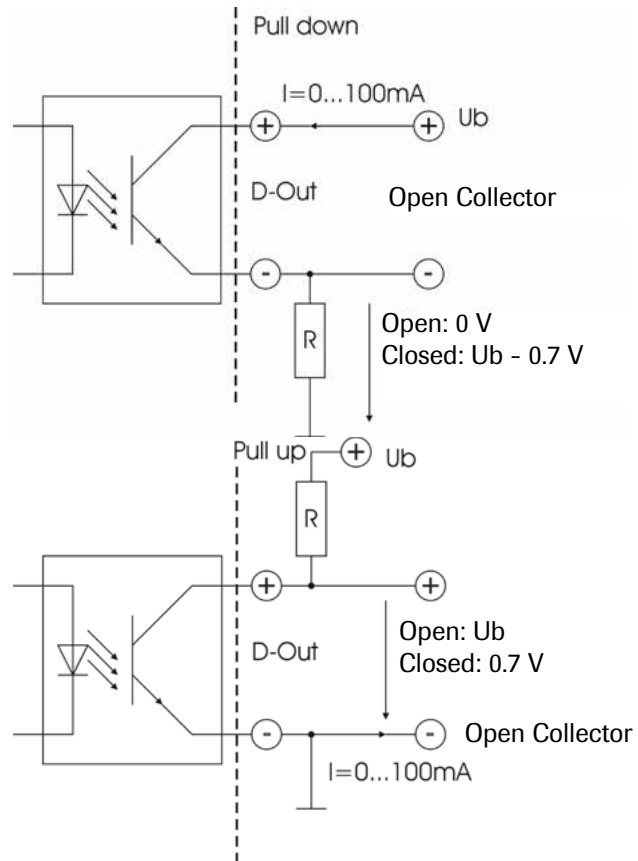

$$R = (U_b - 0.7\text{ V})/I$$

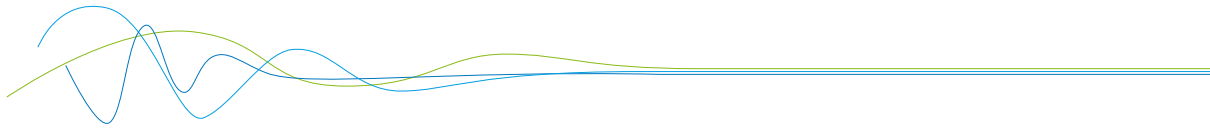

### 13. Technical data

<b>Sensor</b>	
Housing	Stainless steel 1.4571 - NW 10 ... 125 mm, flange according EN 1092-1
Inner pipe	Ceramic (Al <sub>2</sub> O <sub>3</sub> )
Protection category	IP65 according EN 60 529/10.91
Environment temperature	Sensor pipe: -20 ... + 130 °C - Sensor electronic: 0 ... + 60 °C
Max. working pressure	110 bar
Working frequency	88 kHz
Transmission power	Max. 2 mW
Weight	Depending on the diameter
Dimensions	NW + 150 mm, L = 500 mm
Accuracy	+/- 2 ... 5 % in the calibrated measuring range
<b>Evaluation unit MSE 300-FH</b>	
Power supply	110/230 V, 50 Hz (optional 24 V DC)
Power consumption	20 W / 24 VA
Protection category	IP65 to EN 60 529/10.91
Ambient operating temperature	-10 ... +45 °C
Dimensions	258 x 237 x 174 (W x H x D)
Weight	Approx. 2.5 kg
Interface	RS 485 (ModBus RTU) / USB
Cable glands	3 x M20 (4.5 - 13 mm Ø)
Connection terminals cable cross-section	0.2 - 2.5 mm <sup>2</sup> [AWG 24-14]
Current output	3 x 4 ... 20 mA (0 ... 20 mA), load < 500 Ω (Active)
Relay contact	Max. rated load: 250 V AC Max. peak current: 6 A Max. rated load 230 V AC: 250 VA Max. breaking capacity DC1: 3/110/220 V: 3/0.35/0.2 A Min. swithing load: 500 mW (10 V/5 mA)
Data backup	Flash memory
Pulse output	Open Collector - max. 30 V, 20 mA
<b>Evaluation unit MSE 300-DR</b>	
Power supply	24 V DC ± 10 %
Power consumption	20 W / 24 VA
Protection type	IP40 to EN 60 529
Ambient operating temperature	-10 ... +45 °C
Dimensions	23 x 90 x 118 (W x H x D)
Weight	Approx. 172 g
Interface	RS 485 (ModBus RTU) / USB
DIN Rail fastening	DIN 60715 TH35
Connection terminals cable cross-section	0.2 - 2.5 mm <sup>2</sup> [AWG 24-14]
Current output	1 x 4 ... 20 mA (0 ... 20 mA), load < 500 Ω (Active)
Relay contact	Max. rated load: 250 V AC Max. peak current: 6 A Max. rated load 230 V AC: 250 VA Max. breaking capacity DC1: 3/110/220 V: 3/0.35/0.2 A Min. swithing load: 500 mW (10 V/5 mA)
Data backup	Flash memory
Pulse output	Open Collector - max. 30 V, 20 mA

