



ZPA Analyzer



OPERATORS MANUAL




California Analytical Instruments

1312 West Grove Avenue, Orange, CA 92865 • Phone: 714-974-5560 • Fax: 714-921-2531
www.gasanalyzers.com



CAUTION ON SAFETY


To operate the analyzer properly, be sure to read “Caution on Safety” carefully.


- The descriptions listed here provide important information on safety. Be sure to observe them at all times. Those safety precautions are classified into 3 levels, “DANGER,” “CAUTION” and “PROHIBITION.”



 DANGER	<p>Improper handling may cause dangerous situations that may result in death or serious injury.</p>
 CAUTION	<p>Improper handling may cause dangerous situations that may result in medium-level troubles, minor injury, or property damage.</p>
 PROHIBITION	<p>Items which must not be done are indicated.</p>


Caution on installation and transport of gas analyzer



 DANGER	<ul style="list-style-type: none"> The unit is not of explosion-proof specifications. Do not use it in an atmosphere of explosive gases. Otherwise, serious accidents such as explosion or fire may result.
 CAUTION	<ul style="list-style-type: none"> For installation, observe the rule on it given in the instruction manual, and select a place where the weight of analyzer can be supported. Installation in an inadequate place may cause turnover or falling, resulting in injury. Be sure to wear protective gloves when lifting the analyzer. Lifting it with bare hands may result in injury. Be sure to fix the cover before transporting the analyzer. Transportation in unstable state may result in injury. The gas analyzer is heavy. To transport the analyzer, please use a hand cart or equivalent. Prevent from carrying analyzer by hand as much as possible. Otherwise, unexpected harm to your body or injury may result. Take care not to let cable chips and other foreign objects enter the unit during installation work. Otherwise, fire, failure, or malfunction may result.


Caution on piping	
 DANGER	<p>Be sure to observe the following precautions while installing piping. Improper piping may result in gas leakage.</p> <p>If the leaking gas contains a toxic component, serious accidents may result. If it contains combustible gases, explosion or fire may result.</p> <ul style="list-style-type: none"> • Connect pipes correctly referring to the instruction manual. • Discharge the exhaust gas outdoors to prevent it from remaining within the sampling device or indoors. • Relieve the exhaust gas from the analyzer to the atmospheric pressure to prevent buildup of undesirable pressure to the analyzer. Otherwise, piping within the analyzer may be disconnected, resulting in gas leakage. • Use pipes and pressure reducing valves to which no oil/grease is attached to the piping. Otherwise, fire may result.

Caution on wiring	
 CAUTION	<ul style="list-style-type: none"> • Be sure to turn off the power before installing wiring. Otherwise, electric shock may result. • Be sure to perform protective earth ground connection. Otherwise, electric shock or failure may result. • Select a proper wiring material that satisfies the ratings of the instrument. Otherwise, electric shock or fire may result. • Be sure to connect a power supply of correct rating. Otherwise, fire may result.

Caution on use	
 DANGER	<ul style="list-style-type: none"> • Be sure to read the instruction manual for reference gases before handling reference gases such as calibration gas to use them properly.
 CAUTION	<ul style="list-style-type: none"> • Leaving the analyzer unused for a long time or restarting it after long-term suspension requires procedures different from normal operation or suspension procedures. Be sure to follow the instructions in each instruction manual. Otherwise, intended performance may not be achieved. Also, accidents or injury may result. • Do not operate the analyzer for a long time with its cover left open. Otherwise, dust, foreign matter, etc. may contaminate on internal walls, thereby causing faults.

Caution on use	
 PROHIBITION	<ul style="list-style-type: none"> • Do not touch the input/output terminals with metal or finger. Otherwise, electric shock or injury may result. • Do not smoke or use flames near the analyzer. Otherwise, fire may result. • Do not allow water to enter the analyzer. Otherwise, electric shock or internal fire may result.

Caution on maintenance and check	
 DANGER	<ul style="list-style-type: none"> • Before performing work with the cover of the analyzer kept open for maintenance and check, be sure to purge completely not only within the analyzer but also measuring gas lines with nitrogen or air. Otherwise, poisoning, fire, or explosion may result due to gas leakage.
 CAUTION	<p>Be sure to observe the following to perform work safely, avoiding electric shock or injury.</p> <ul style="list-style-type: none"> • Remove the watch and other metallic objects before work. • Do not touch the instrument with wet hands. • If the fuse is blown, eliminate the cause and replace it with the one of the same capacity and type. Otherwise, electric shock or accidents may result. • Do not use replacement parts other than those specified by the manufacturer. Otherwise, intended performance may not be achieved. Besides accidents or failures may result. • Dispose replacement parts such as maintenance parts as incom-bustibles according to the local waste disposal regulations.

Others	
 CAUTION	<ul style="list-style-type: none"> • If the cause of any fault cannot be identified by referring to the instruction manual, be sure to contact your dealer or Fuji's technician in charge of adjustment. Disassembling the instrument carelessly may result in electric shock or injury.

CONTENTS

PREFACE.....	i
CAUTION ON SAFETY	ii
CONTENTS	v
1. OVERVIEW.....	1
2. NAME OF DELIVERED ITEMS AND EACH PARTS	2
2.1 Confirmation of delivered items	2
2.2 Name and description of analyzer.....	3
3. INSTALLATION	4
3.1 Installation conditions	4
3.2 Installation.....	5
3.2.1 Installation of analyzer main frame	5
3.3 Piping	6
3.4 Sampling	8
3.4.1 Conditions of sampling gas.....	8
3.4.2 Sampling gas flow.....	8
3.4.3 Preparation of standard gas.....	8
3.4.4 Purging of instrument inside	8
3.4.5 Pressure at sampling gas outlet.....	9
3.4.6 Example configuration of gas sampling system	9
3.5 Wiring.....	10
4. OPERATION	17
4.1 Preparation for operation	17
4.2 Warm-up operation and regular operation	17
5. DESCRIPTION OF DISPLAY AND OPERATION PANELS.....	18
5.1 Name and description of operation panel	18
5.2 Overview of display and operation panels.....	19
5.3 Outline of display screen.....	20
5.4 Basic operation.....	23
6. SETTING AND CALIBRATION.....	24
6.1 Switch of range	24
6.1.1 Setting of range switch mode.....	24
6.1.2 Manual range switch.....	25
6.2 Calibration setting.....	26
6.2.1 Setting of calibration concentration.....	26
6.2.2 Setting of manual zero calibration.....	28
6.2.3 Setting of calibration range.....	30
6.2.4 Setting of auto calibration component/range.....	31

6.3	Alarm setting.....	33
6.3.1	Setting of alarm values	33
6.3.2	Hysteresis setting	35
6.3.3	Peak alarm setting.....	36
6.4	Setting of auto calibration	38
6.4.1	Auto calibration	38
6.4.2	Forced run/stop of auto calibration.....	41
6.5	Setting of auto zero calibration	43
6.5.1	Auto zero calibration	43
6.5.2	Forced run/stop of auto zero calibration	45
6.6	Parameter setting.....	47
6.7	Maintenance mode	53
6.8	Calibration.....	58
6.8.1	Zero calibration.....	58
6.8.2	Span calibration	59
7.	MAINTENANCE	60
7.1	Daily check	60
7.2	Daily check and maintenance procedures	60
7.3	Long term maintenance.....	61
7.4	Cleaning of sampling cell	62
7.4.1	Disassembly and assembly of sampling cell.....	62
7.4.2	How to clean sampling cell.....	67
7.5	Replacement of fuse.....	67
8.	ERROR MESSAGE.....	68
9.	SPECIFICATIONS	71
9.1	General specifications	71
9.2	Table1 Measurable component and range.....	75
9.3	Code symbols.....	79
9.4	Outline diagram.....	81

1. OVERVIEW

This instrument measures the concentration of NO, SO₂, CO₂, CO and CH₄ contained in sampling gas on the principle that different atomic molecules have an absorption spectrum in the wave band of infrared rays, and the intensity of absorption is determined by the Lambert-Beer law.


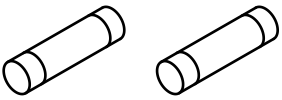
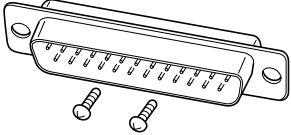

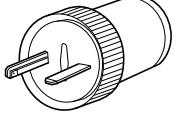
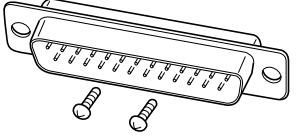
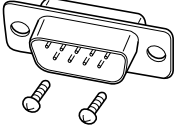

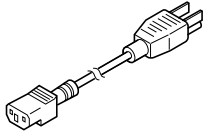
Since this instrument incorporates a compact O₂ sensor, it allows measuring up to 5 components simultaneously by using the built-in O₂ sensor (up to 4 components if O₂ sensor is excluded).

Furthermore, use of a microprocessor and large sized liquid crystal display realizes improvement of operability, accuracy and multi-functions.

This instrument is optimum for measuring combustible gas exhausted from boilers or incinerators, and it is effective for steel gas analysis [blast furnace, steel converter, thermal treatment furnace, sintering (Pellet equipment), coke furnace], storage and maturity of vegetable and fruit, biochemistry (microbe), [fermentation], air pollution [incinerator, exhaust gas desulfurization, denitration], automotive emission (excluding tester), protection against disasters [detection of explosive gas and toxic gas, combustion gas analysis of new building material], growth of plants, chemical analysis [petroleum refinery plant, petroleum chemistry plant, gas generation plant], environment [landfill concentration, tunnel concentration, parking lot, building management] and various physical and chemical experiments.

2. NAME OF DELIVERED ITEMS AND EACH PARTS

2.1 Confirmation of delivered items

<p>Analyzer: 1 unit</p>		
<p>Fuse: 2 pcs</p>		<p>Standard: IEC127-2 Size: $\phi 5 \times 20$mm Rating: 250V/2A delay type Part No.: R75796N17</p>
<p>Analog output connector: 1 Fixing screws: 2</p>		<p>25 pin D-sub connector (male) Part No.: R77256N262 M2.6 \times 4mm</p>
<p>Instruction manual (this catalog): 1 copy (INZ-TN1ZPA)</p>		
<p>External input connector: 1 (External O₂ analyzer and External zirconia O₂ analyzer are specified)</p>		<p>Part No.: R77240N35</p>
<p>Digital input/output connector: 3 max. with the number of DIO Fixing screws: 6 max. (When digital input/output function is specified)</p>		<p>25 pin D-sub connector (male) Part No.: R77256N262 M2.6 \times 4mm Max. 3 sets</p>
<p>RS-485 connector: 1 Fixing screws: 2 (When provided with communication function)</p>		<p>9 pin D-sub connector (male) Part No.: R77256N284 M2.6 \times 4mm</p>
<p>Ferrite core: 1 For power cable (When terminal block for power supply is specified)</p>		<p>Part No.: R77918N12</p>
<p>Power supply cord: 1 (When power inlet is specified)</p>		<p>Standard inlet type</p>

2.2 Name and description of analyzer

<Model>

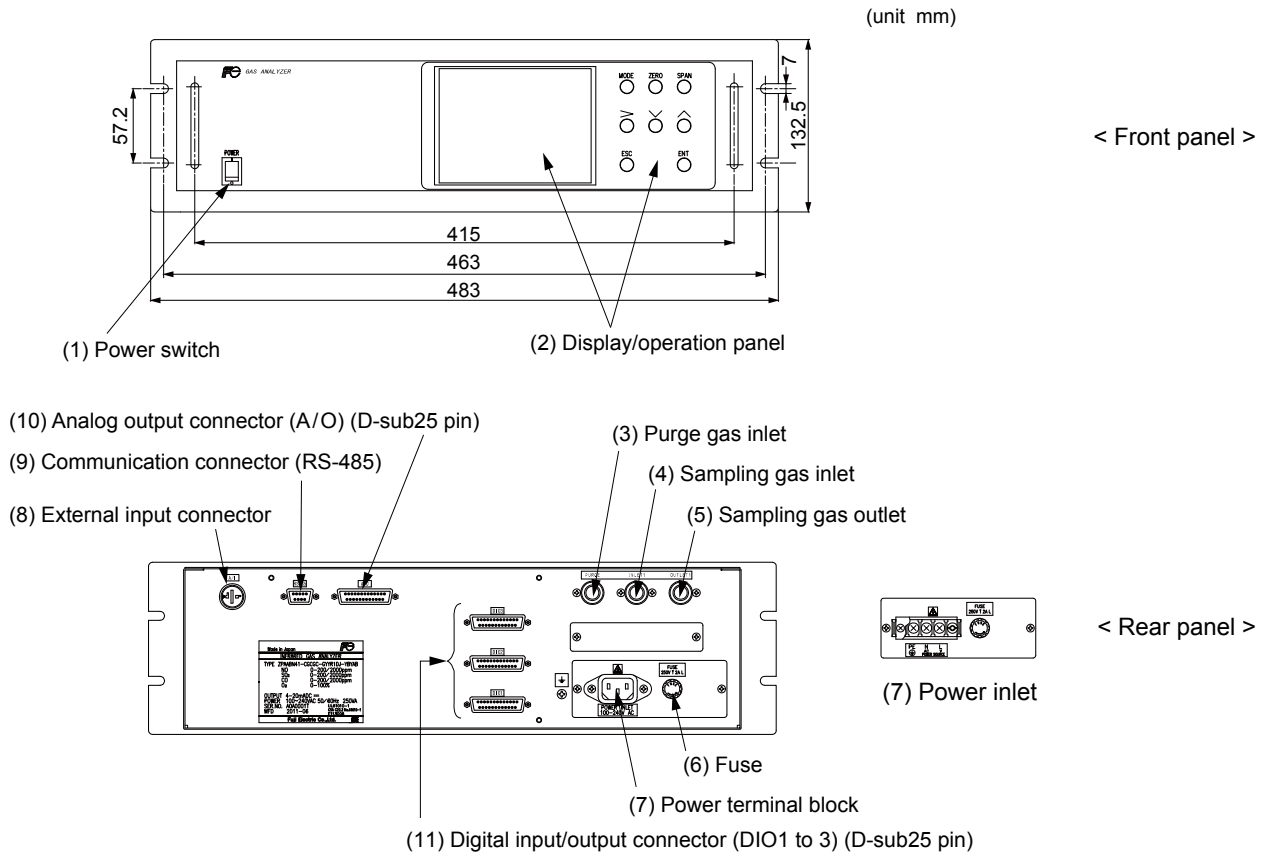


Fig. 2-1

Name	Description	Name	Description
(1) Power switch	Used for ON/OFF the analyzer.	(7) Power	For connecting to the power supply line.
(2) Display/operation panel	Liquid crystal display and keys for setting various functions.	(8) External input connector	For connecting to the output of externally installed O2 analyzer.
(3) Purge gas inlet	For connecting to the purge gas tube.	(9) Communication connector	RS-485 connector for communication.
(4) Sampling gas inlet	For connecting to the measuring gas tube.	(10) Analog output connector (D-sub25 pin)	Connector for the analog output
(5) Sampling gas outlet	For connecting to the exhaust line.	(11) Digital input/output connector (D-sub25 pin)	Connector for the digital input/output
(6) Fuse	Fuse inside		

3. INSTALLATION

DANGER

This unit is not explosion-proof type. Do not use it in a place with explosive gases to prevent explosion, fire or other serious accidents.

CAUTION


- Entrust the installation, movement or re-installation to a specialist or the supplier. A poor installation may cause accidental tipover, electric shock, fire, injury, etc.
- The gas analyzer is heavy. It should be installed with utmost care. Otherwise, it may tipover or drop, for example, causing accident or injury.
- For lifting the gas analyzer, be sure to wear protective gloves. Bare hands may invite an injury.
- This unit should be installed in a place which conforms to the conditions noted in the instruction manual. Otherwise, it may cause electric shocks, fire or malfunction of the unit.
- During installation work, care should be taken to keep the unit free from entry of cable chips or other foreign objects. Otherwise, it may cause fire, trouble or malfunction of the unit.

3.1 Installation conditions

To install the analyzer for optimum performance, select a location that meets the following conditions;

- (1) This instrument is system built in type. This instrument should be used while embedded in a panel, locker, or enclosure of steel sheet.
- (2) Use this instrument indoors.
- (3) A vibration-free place
- (4) A place which is clean around the analyzer.
- (5) Power supply
 - Rated voltage : 100V to 240V AC
 - Operating voltage : 85V to 264V AC
 - Rated frequency : 50/60 Hz
 - Power consumption : 100 VA max.
- (6) Operation conditions
 - Ambient temperature : -5° to 45°C (max. 40°C when two optical units are used, and the power supply is more than 200V AC)
 - Ambient humidity : 90 % RH or less, no condensation
- (7) Maintenance space

When analyzer is installed by itself, please make sure to keep the space shown in the dimension of the figure for maintenance. In case analyzer is installed as an unit, please refer to the instruction manual of the analyzer unit.
- (8) A breaker that meets IEC60947-1 and IEC60947-3 should be included in the installation.
- (9) A breaker should be installed near the analyzer where an operator can access it.
- (10) A label that clearly identifies the breaker should be placed on it.
- (11) The breaker rating should meet the analyzer rating max 2A and a breaker should conform to all necessary approvals.

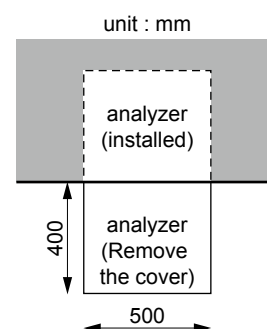

3.2 Installation

3.2.1 Installation of analyzer main frame

Installation methods for the analyzer main unit is shown below.

(Unit : mm)


Type	External dimensions	Mounting dimensions	Mounting method
19-inch rack mounting			

- Note)
- The analyzer weight must be supported at the bottom of the casing.
 - The analyzer should be installed in a place where ambient temperature is within -5 to 45°C (max. 40°C when two optical units are used, and the power supply is more than 200V AC), and temperature fluctuation during using is minimum.
 - Where vibration is unavoidable, protect the analyzer from vibrating.
For example, install rubber material around the case to isolate vibration from the support structure.

3.3 Piping

Observe the following when connecting the gas tube.

- Piping should be connected to the gas inlets and outlets at the rear panel of the analyzer.
- Use a corrosion resistant tube of Teflon, stainless steel or polyethylene to connect the instrument to a sampling system. Even if there is a danger of corrosion, refrain from using a tube of rubber or soft vinyl. The instrument provides inaccurate indication due to gas absorption by piping materials.
- Pipe connection port is Rc1/4 female thread (or NPT1/4). Piping should be cut as short as possible for a quick response. About 4 mm inner diameter is recommended.
- Entry of dust into the instrument may result in defective operation. Use a clean piping and coupling.

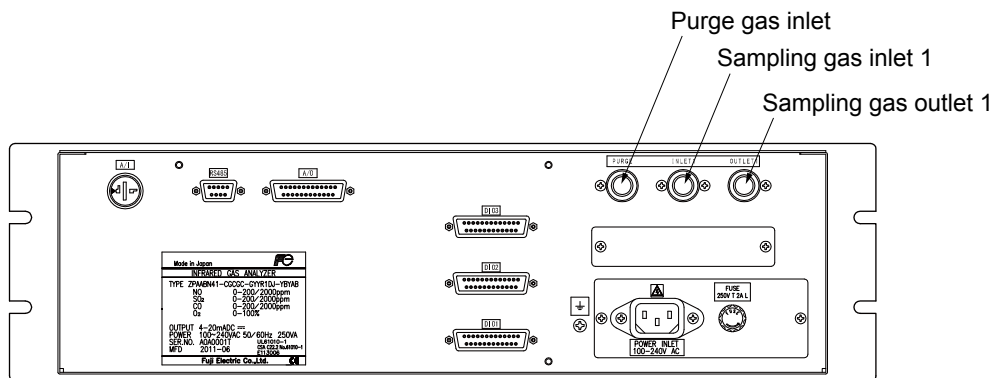


Sampling gas inlet: Attach the gas tube to introduce gas to be measured such as one that has completed dehumidification process and standard gases for zero and span calibration to this inlet.
Gas flow to be introduced should be constant within the range of 0.5 L/min \pm 0.2 L/min.

Sampling gas outlet: Exhaust measured gas through the outlet. Attach the tube to exhaust measured gas outdoors or to the atmosphere.

Purge gas inlet: It is used for purging the inside of the total gas analyzer.
Use dry gas N₂ or instrumentation air for purge gas. (Flow rate is 1L/min or more, and dust or moisture/mist are unallowable.)

Internal piping diagram

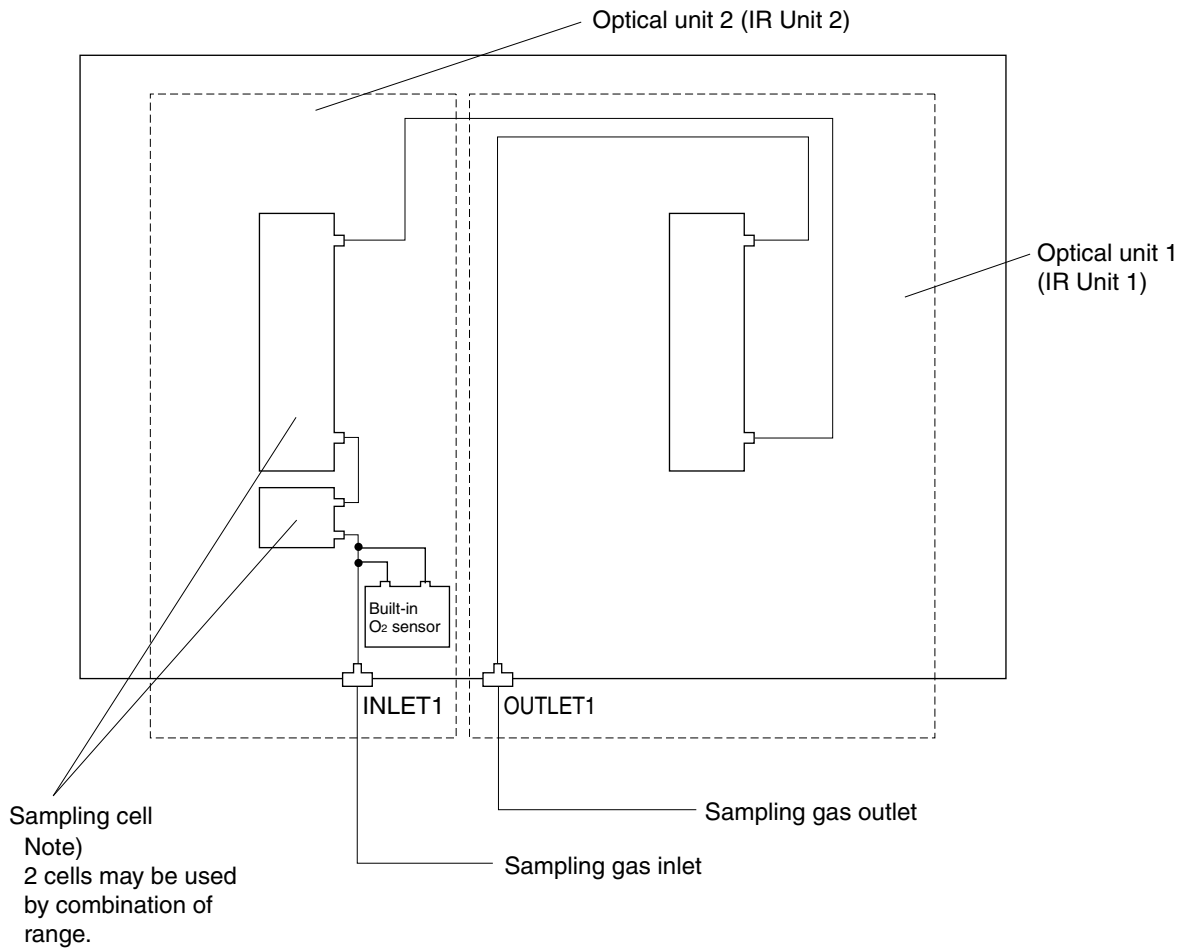

Correspondence of measured components and optical units

Measuring components	Optical unit 1	Optical unit 2
1-component for NO, SO ₂ , CO ₂ , CO and CH ₄	Each component	None
2-components for CO ₂ /CO	CO ₂ /CO	None
2-components for NO/CO, NO/SO ₂	NO NO	CO SO ₂
3-components for NO/SO ₂ /CO	NO	SO ₂ /CO
4-components for NO/SO ₂ /CO ₂ /CO	NO/CO	SO ₂ /CO ₂

3.4 Sampling

3.4.1 Conditions of sampling gas

- (1) Dust contained in the sampling gas should be completely removed with a filter. For the final stage filter, use a filter that allows removing dust particles of $0.3\mu\text{m}$.
- (2) Dew point of the sampling gas must be lower than the ambient temperature to avoid occurrence of drain in the gas analyzer. If vapor is contained in the sampling gas, dew point should be lowered to 2°C by using a dehumidifier.
- (3) If SO_3 mist is contained in the sampling gas, use a mist filter or cooler to remove SO_3 mist. Other mists should be removed by using a mist filter or gas dryer.
- (4) Corrosive gases such as Cl_2 , F_2 and HCl , if they are contained in the sampling gas in considerable amounts, will shorten the life of component parts.
- (5) Temperature of the sampling gas should be within 0 to 50°C . Pay attention not to flow hot gas directly into the instrument.

3.4.2 Sampling gas flow

Flow of sampling gas should be $0.5\text{L}/\text{min} \pm 0.2\text{L}/\text{min}$.

Avoid flow fluctuation during measurement.

Observe the flow reading by a flowmeter provided as shown in the example of the sampling system configuration (Item 3.4.6).

3.4.3 Preparation of standard gas

Routine calibration is required by standard gas for keeping this instrument under normal operation condition (once a week). Prepare a standard gas cylinder for zero calibration and span calibration.

	Analyzer without O_2 measurement	Analyzer with built-in O_2 sensor	Analyzer with external zirconia O_2 sensor
Zero gas	N_2 gas	N_2 gas (O_2 gas of 99.9 to 100 vol% for reverse range O_2 measurement.)	Dry air
Span gas other than for O_2 measurement	Gas with concentration of 90 to 100% of its measuring range.	Gas with concentration of 90 to 100% of its measuring range.	Gas with concentration of 90 to 100% of its measuring range.
Span gas for O_2 measurement	—	Gas with concentration of 90 to 100% of its measuring range or atmospheric air (21% O_2). (O_2 gas of 95 to 95.5 vol% for reverse range O_2 measurement.)	O_2 gas of 1 to 2%

3.4.4 Purging of instrument inside

The inside of instrument need not be purged generally except for the following cases.

- (1) A combustible gas component is contained in the sample gas.
- (2) Corrosive gas is contained in the atmospheric air at the installation site.
- (3) The same gas as the sample gas component is contained in the atmospheric air at the installation site.

In such cases as above, the inside of analyzer should be purged with the air for instrumentation or dry N_2 .

Purging flow rate should be about $1\text{L}/\text{min}$.

Purging gas, if used, must not contain dust or moisture.


3.4.5 Pressure at sampling gas outlet

Pressure at the sampling gas outlet should be adjusted to the atmospheric pressure.

3.4.6 Example configuration of gas sampling system

The following illustrates a typical system configuration for five component gas measurement for monitoring combustion exhaust gas from boiler, refuse incinerator, etc.

Contact Fuji Electric for system configuration matching the particular use or further information.

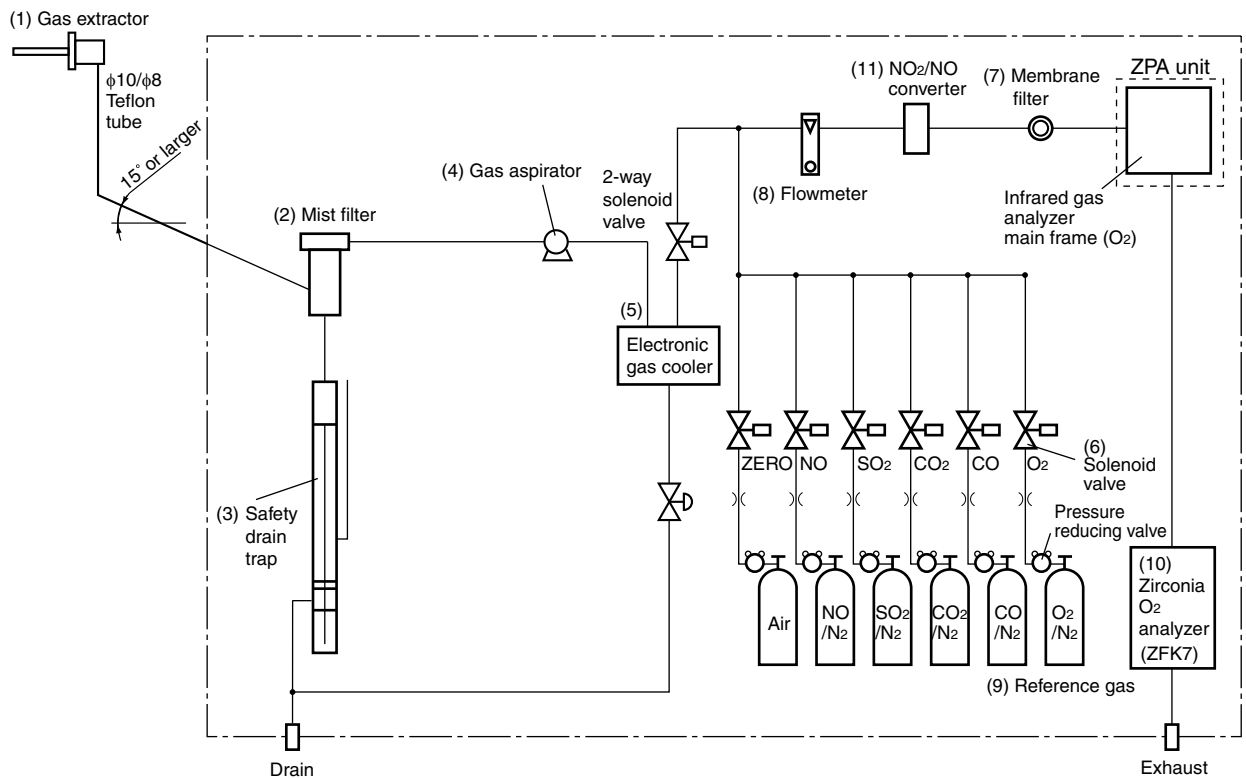


Name	Description	Name	Description
(1) Gas extractor	Gas extractor with a heating type stainless steel filter of standard mesh 40 μ m	(8) Flowmeter	Adjusts and monitors the flow rate of the sample gas.
(2) Mist filter	Removes drain, mist, and dust.	(9) Reference gas	Reference gas used for calibrating zero and span of the analyzer, depending on the measured gas.
(3) Safety drain trap	The safety drain trap is divided into two spaces for positive and negative pressure. It monitors and adjusts the sample gas pressure.	(10) Zirconia O ₂ analyzer	External zirconia oxygen sensor used for measuring the oxygen concentration in sample gas. (This is not necessary in case when O ₂ sensor is built-in.)
(4) Gas aspirator	For aspiration of the sample gas	(11) NO ₂ /NO converter	Added to NO _x analyzer. A special catalyst material for efficient conversion of NO ₂ gas to NO is used.
(5) Electronic gas cooler	Dries the moisture in the sample gas to a dew point of approx. 2°C.		
(6) Solenoid valve	Used for flowing the calibration gas.		
(7) Membrane filter	PTFE filter used to eliminate fine dust particles.		

3.5 Wiring

⚠ CAUTION

- Be sure to turn off the power before installing wiring. Otherwise, electric shock may result.
- Be sure to perform protective earth connection. Otherwise, electric shock or failure may result.
- Select a proper wiring material that satisfies the ratings of the instrument. Otherwise, electric shock or fire may result.
- Be sure to connect a power supply of correct rating. Otherwise, fire may result.

The power terminal block and external input/output connector is provided at the rear panel. Refer to the following.

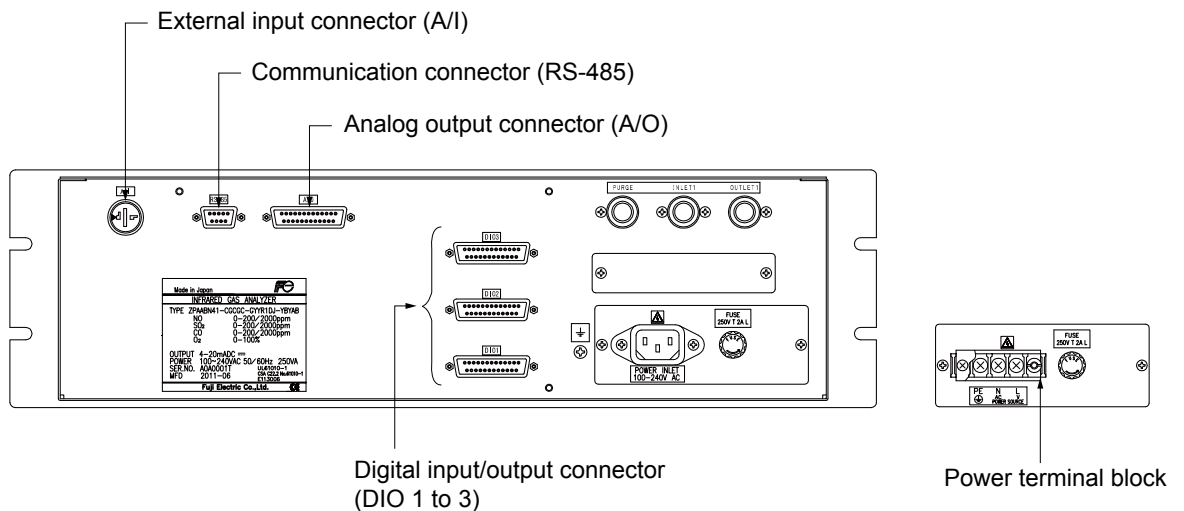


(1) Power supply (standard terminal 1 to 2)

Connect the given power supply to the power terminal, and connect the ground wire to the grounding terminal (standard terminal 3). Be sure to perform protective earth connection. Use solderless terminals (for M4) for connection to the terminals (power and earth).

The infrared gas analyzer: Please install an accessory ferrite core (To the power supply terminal stand side) on the power supply wiring line of ZPA. Application line diameter $\varnothing 9.5$ to $\varnothing 10.5$

<Terminal block for power supply>

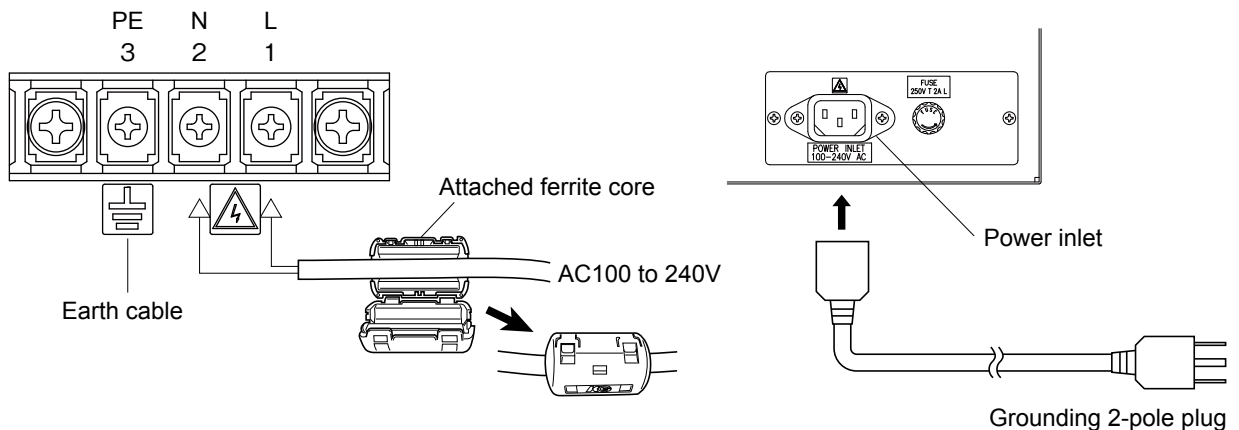


CAUTION

After the wiring work, be sure to replace the protective cover for the terminal blocks to assure safety.

When noise source is in the vicinity

- Avoid installing this instrument near an electrical unit (high frequency furnace or electric welder) that generates much electrical noise. If using the instrument near such a noise generating unit is unavoidable, use a different power line to avoid noise.
- Mount a noise suppressor such as varistor or spark quencher as shown at right figure to the noise generating unit when noise is generated from relays or solenoid valves. Mount the suppressor near the noise generating source, or it will have no effect.

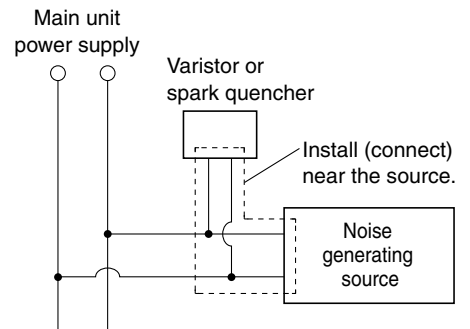

(2) Analog output signal: Analog output connector (A/O)


Output signal : 4 to 20 mA DC or 0 to 1 V DC (selected when ordering)

Minus lines for the insulation and signal are common from the ground and internal circuit

Allowable load: 4 to 20 mA DC, 550Ω or less

0 to 1 V DC, 100kΩ or more

< Analog output > A/O connector



D-sub 25-pin female

Note) Display Ch number is same as the AO number under standard specifications.

①	AO1+
⑭	AO1-
②	AO2+
⑮	AO2-
③	AO3+
⑯	AO3-
④	AO4+
⑰	AO4-
⑤	AO5+
⑱	AO5-
⑥	AO6+
⑲	AO6-
⑦	AO7+
⑳	AO7-
⑧	AO8+
㉑	AO8-
⑨	AO9+
㉒	AO9-
⑩	AO10+
㉓	AO10-
⑪	AO11+
㉔	AO11-
⑫	AO12+
㉕	AO12-
⑬	NC

The analog output signals of the instrument are not isolated individually. It is recommended to isolate the signals individually to eliminate the interference from the unnecessary signals or the effect of external interference, especially if the cable exceeds 30 meters or leads to outdoors.


(3) O₂ sensor input: External input connector (A/I)

Input signal:

External zirconia O₂ analyzer : Zirconia O₂ sensor signal (Fuji ZFK7 output)

External O₂ analyzer : 0 to 1 V DC (DC input resistor of 1MΩ or more)


< External input > A/I connector (O₂ sensor input)

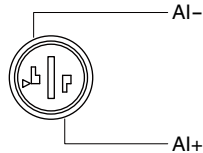

- It is used when the external zirconia O₂ analyzer or the external O₂ analyzer is specified as ordered.
- Connect the dedicated connector (accessory) to the output of the external Zirconia analyzer or the external O₂ analyzer (received separately).
- In case of an external O₂ analyzer, input a signal of 0 to 1 V DC with respect to O₂ full scale of the analyzer. The O₂ concentration display, output, and O₂ correction can be performed.
- Do not connect when the built-in O₂ analyzer is installed.

O₂ sensor input is not isolated. It is recommended to isolate when an external O₂ analyzer is installed apart from this analyzer. Zirconia O₂ sensor (Fuji ZFK7) should be installed at a location that is as close to this instrument as possible.

* How to connect the O₂ signal to the dedicated connector (accessory).

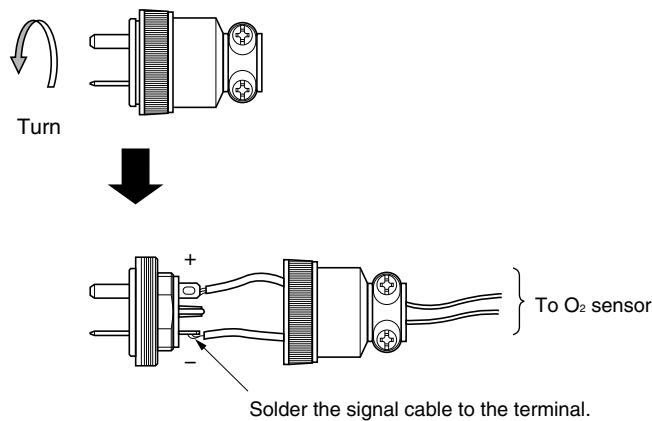


(4) Contact input/output (DIO): digital input/output connector (DIO1 to 3)

Contact input signal : Voltage is applied from the external 12 to 24 V DC, max 15mA
Photo-coupler isolation (from each DI and ground)

Contact capacity : C contact relay output 24V/1A AC/DC resistive load

<Digital I/O> DIO 1 to 3 connector (option)



D-sub 25pins female

* DIO 1 to 3 are all as same connector.

Contents of digital input signal

DI1	Remote hold
DI2	Average value reset
DI3	A. cal. start
DI4	A. zero. cal. start
DI5	Remote range Ch1
DI6	Remote range Ch2
DI7	Remote range Ch3
DI8	Remote range Ch4
DI9	Remote range Ch5

Allocation table of digital input signal

22th digit →	A	B	C	D	E	F	G	H	Y
DI1	○	○	○	○	○	○	○	○	
DI2	○	○	○	○	○	○	○	○	
DI3		○			○		○	○	
DI4		○			○		○	○	
DI5				○		○	○	○	
DI6				○*		○*	○*	○*	
DI7				○*		○*	○*	○*	
DI8				○*		○*	○*	○*	
DI9				○*		○*	○*	○*	

○ sign shows the function is valid.

* : The function might be invalid depending on the number of measurable components.

For example: DI5 corresponds to 1st component, DI6 corresponds to 2nd components.

Contents of digital output signal

22th digit →	Independent on the number of component	1-component analyzer		2-component analyzer	3-component analyzer
		A, C	B, E	D, F, G, H	B, D, E, F, G, H
DO1	Instrument error	Instrument error	Instrument error	Instrument error	Instrument error
DO2	Calibration error	Calibration error	Calibration error	Calibration error	Calibration error
DO3		A.cal.status	(A.cal.status)	(A.cal.status)	(A.cal.status)
DO4		For zero gas	(For zero gas)	(For zero gas)	(For zero gas)
DO5		For span gas Ch1	(For span gas Ch1)	(For span gas Ch1)	(For span gas Ch1)
DO6	(Alarm1)	(Alarm1)		(For span gas Ch2)	(For span gas Ch2)
DO7	(Alarm2)	(Alarm2)			(For span gas Ch3)
DO8	(Alarm3)	(Alarm3)			(Range identification Ch1)
DO9	(Alarm4)	(Alarm4)		(Range identification Ch1)	(Range identification Ch2)
DO10	(Alarm5)	(Alarm5)	Range identification Ch1	(Range identification Ch2)	(Range identification Ch3)
DO11			(Alarm1)		(Alarm1)
DO12			(Alarm2)	(Alarm2)	(Alarm2)
DO13			(Alarm3)	(Alarm3)	(Alarm3)
DO14			(Alarm4)	(Alarm4)	(Alarm4)
DO15			(Alarm5)	(Alarm5)	(Alarm5)

The items in the parentheses may not be available depending on the selected type on 22th digit.

The normal open side (NO) of digital output is close when the function is active without range ID.

In case of range ID, normal open (NO) side is close with First range.

The normal close (NC) side is close with Second range.

22th digit →	4-component analyzer				5-component analyzer		
	B, E	D, F	G	H	B, E	D, F	G
DO1	Instrument error	Instrument error	Instrument error	Instrument error	Instrument error	Instrument error	Instrument error
DO2	Calibration error	Calibration error	Calibration error	Calibration error	Calibration error	Calibration error	Calibration error
DO3	A.cal.status		A.cal.status	A.cal.status	A.cal.status		A.cal.status
DO4	For zero gas		For zero gas	For zero gas	For zero gas		For zero gas
DO5	For span gas Ch1		For span gas Ch1	For span gas Ch1	For span gas Ch1		For span gas Ch1
DO6	For span gas Ch2		For span gas Ch2	For span gas Ch2	For span gas Ch2	Range identification Ch1	For span gas Ch2
DO7	For span gas Ch3	Range identification Ch1	For span gas Ch3	For span gas Ch3	For span gas Ch3	Range identification Ch2	For span gas Ch3
DO8	For span gas Ch4	Range identification Ch2	For span gas Ch4	For span gas Ch4	For span gas Ch4	Range identification Ch3	For span gas Ch4
DO9		Range identification Ch3		Range identification Ch1	For span gas Ch5	Range identification Ch4	For span gas Ch5
DO10		Range identification Ch4		Range identification Ch2		Range identification Ch5	
DO11	(Alarm1)	(Alarm1)		(Alarm1)	(Alarm1)	(Alarm1)	Range identification Ch1
DO12	(Alarm2)	(Alarm2)	Range identification Ch1	(Alarm2)	(Alarm2)	(Alarm2)	Range identification Ch2
DO13	(Alarm3)	(Alarm3)	Range identification Ch2	(Alarm3)	(Alarm3)	(Alarm3)	Range identification Ch3
DO14	(Alarm4)	(Alarm4)	Range identification Ch3	Range identification Ch3	(Alarm4)	(Alarm4)	Range identification Ch4
DO15	(Alarm5)	(Alarm5)	Range identification Ch4	Range identification Ch4	(Alarm5)	(Alarm5)	Range identification Ch5


- Isolated output (from each DO and ground)

To avoid external interference, wiring of analog output signal, O₂ sensor input and contact input should be run separately from that of power supply and contact output.

Note) To avoid the effect of noise generated from external units, be sure to ground the analyzer main unit and use properly shielded cables.


(5) Communication: RS-485 connector

< RS-485 connector >

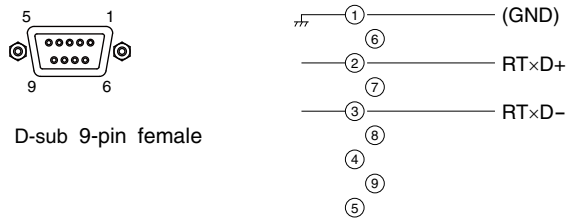


(6) Timing of contact output for calibration

1) Manual calibration (See “Item 6.8 Calibration”.) (When the analyzer has auto calibration function.)

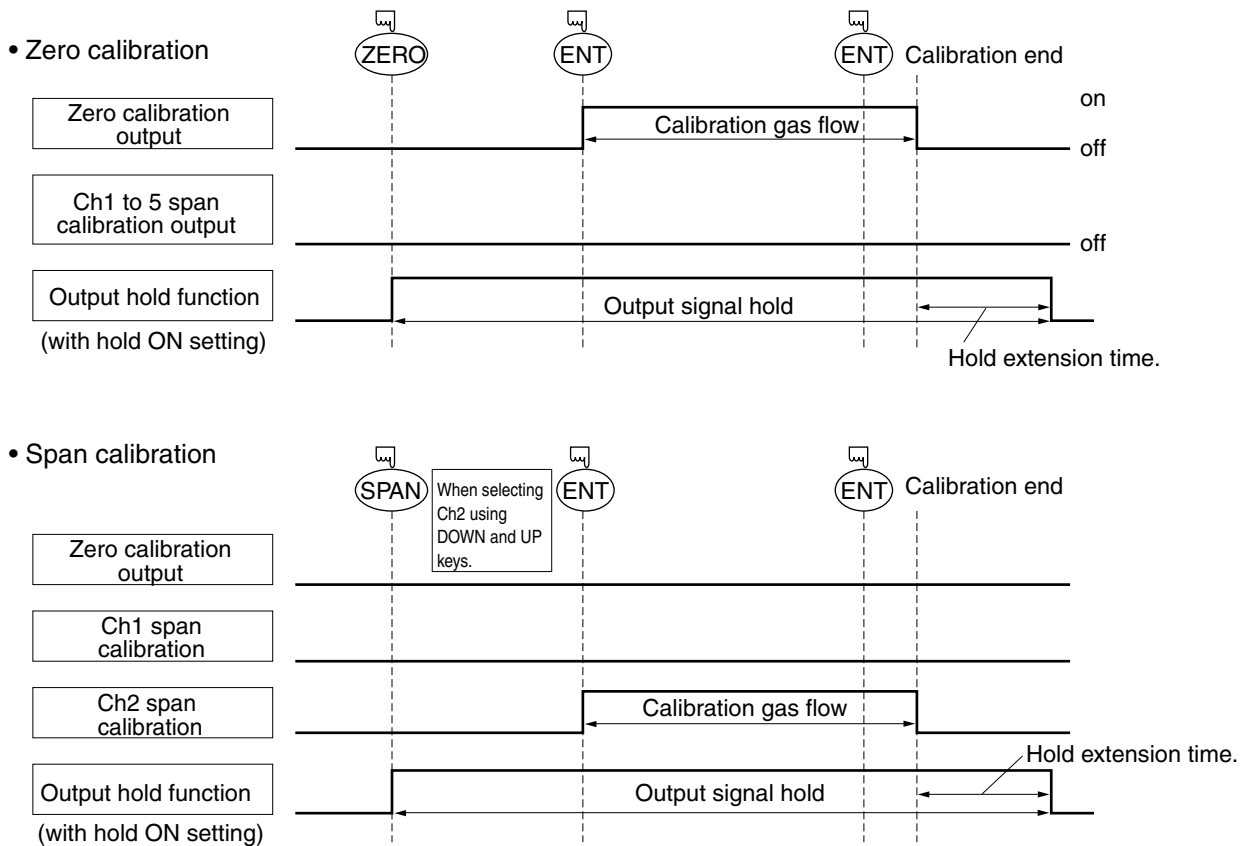

Note) The hold extension time depends on the gas flow time of the automatic calibration settings.

2) In case of automatic calibration
(example shown in Item 6.4, Automatic calibration settings)

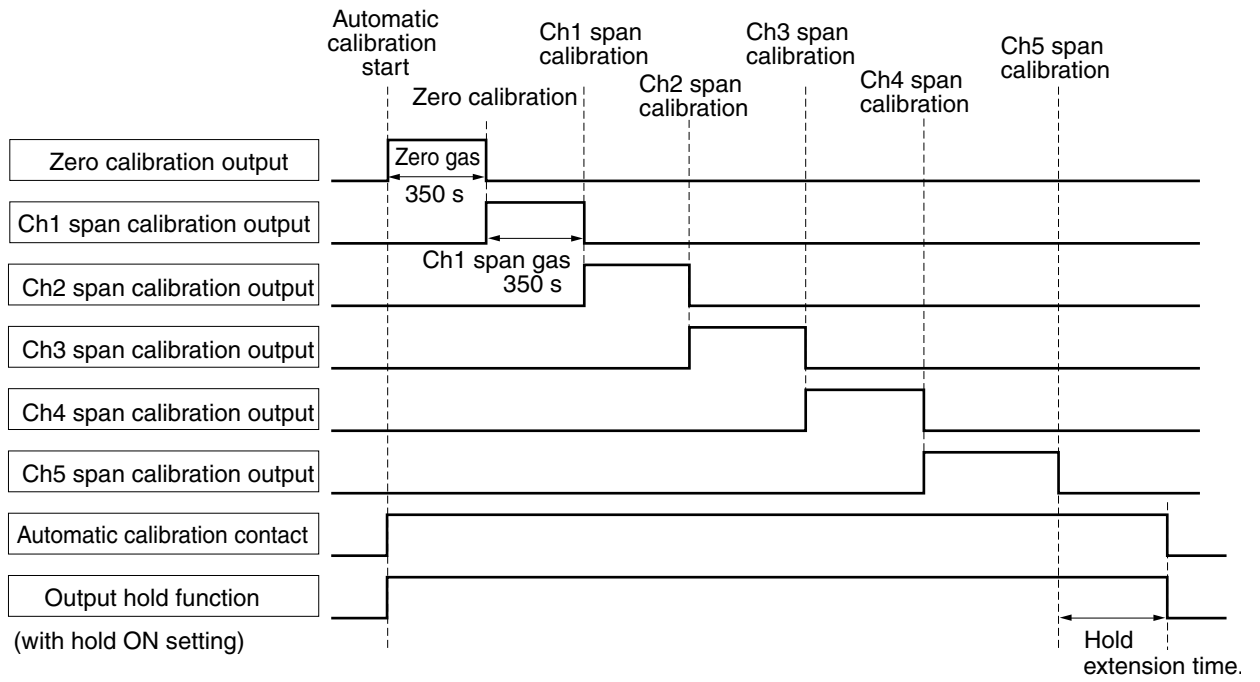

4. OPERATION

4.1 Preparation for operation

(1) Tube and wiring check

Double-check if tubes of the gas sampling and exhaust ports are correctly connected.

Double-check for proper wiring.

4.2 Warm-up operation and regular operation

(1) Operation procedure

- 1) Turn ON the power switch on the left side when facing the front panel of the analyzer unit.
The measurement screen appears on the front display panel in 1 to 2 seconds.
- 2) Wait for about 4 hours until the instrument is warmed up.
About 4 hours are required until the instrument allows accurate measurement.

Note) When in warm-up, the concentration reading may be beyond.

upper limit of range.


But, it is not an error.

- 3) Setting of various set values
Perform the various settings according to “Item 6. Setting and Calibration”.
- 4) Zero calibration and span calibration
Perform zero/span calibration after warm-up operation.
Refer to “Item 6.8 Calibration”.
- 5) Introduction and measurement of measuring gas
Introduce the measuring gas into the analyzer unit before starting measurement.


5. DESCRIPTION OF DISPLAY AND OPERATION PANELS

This section describes the display unit and operation panel of the analyzer unit. It also explains the name and description of function on the operation panel.

5.1 Name and description of operation panel

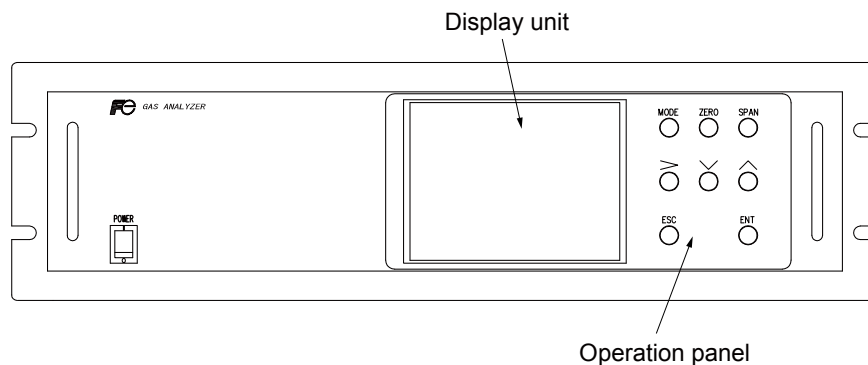


- Display unit: The measurement screen and the setting items are displayed.
- Operation panel: The configuration is as shown below.

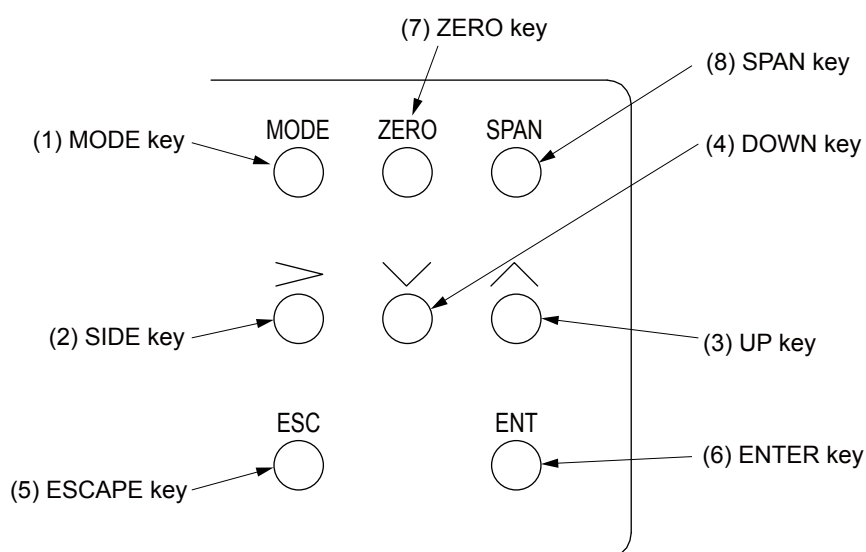

Name	Description	Name	Description
(1) MODE key	Used to switch the mode.	(5) ESC key	Used to return to the previous screen or cancel the setting midway.
(2) SIDE key	Used to change the selected item (by moving the cursor) and the numeral digit.	(6) ENT key	Used for confirmation of selected items or values, and for execution of calibration.
(3) UP key	Used to change the selected item (by moving the cursor) and to increase the numeral value.	(7) ZERO key	Used for zero calibration.
(4) DOWN key	Used to change the selected item (by moving the cursor) and to decrease the numeral value.	(8) SPAN key	Used for span calibration.


5.2 Overview of display and operation panels

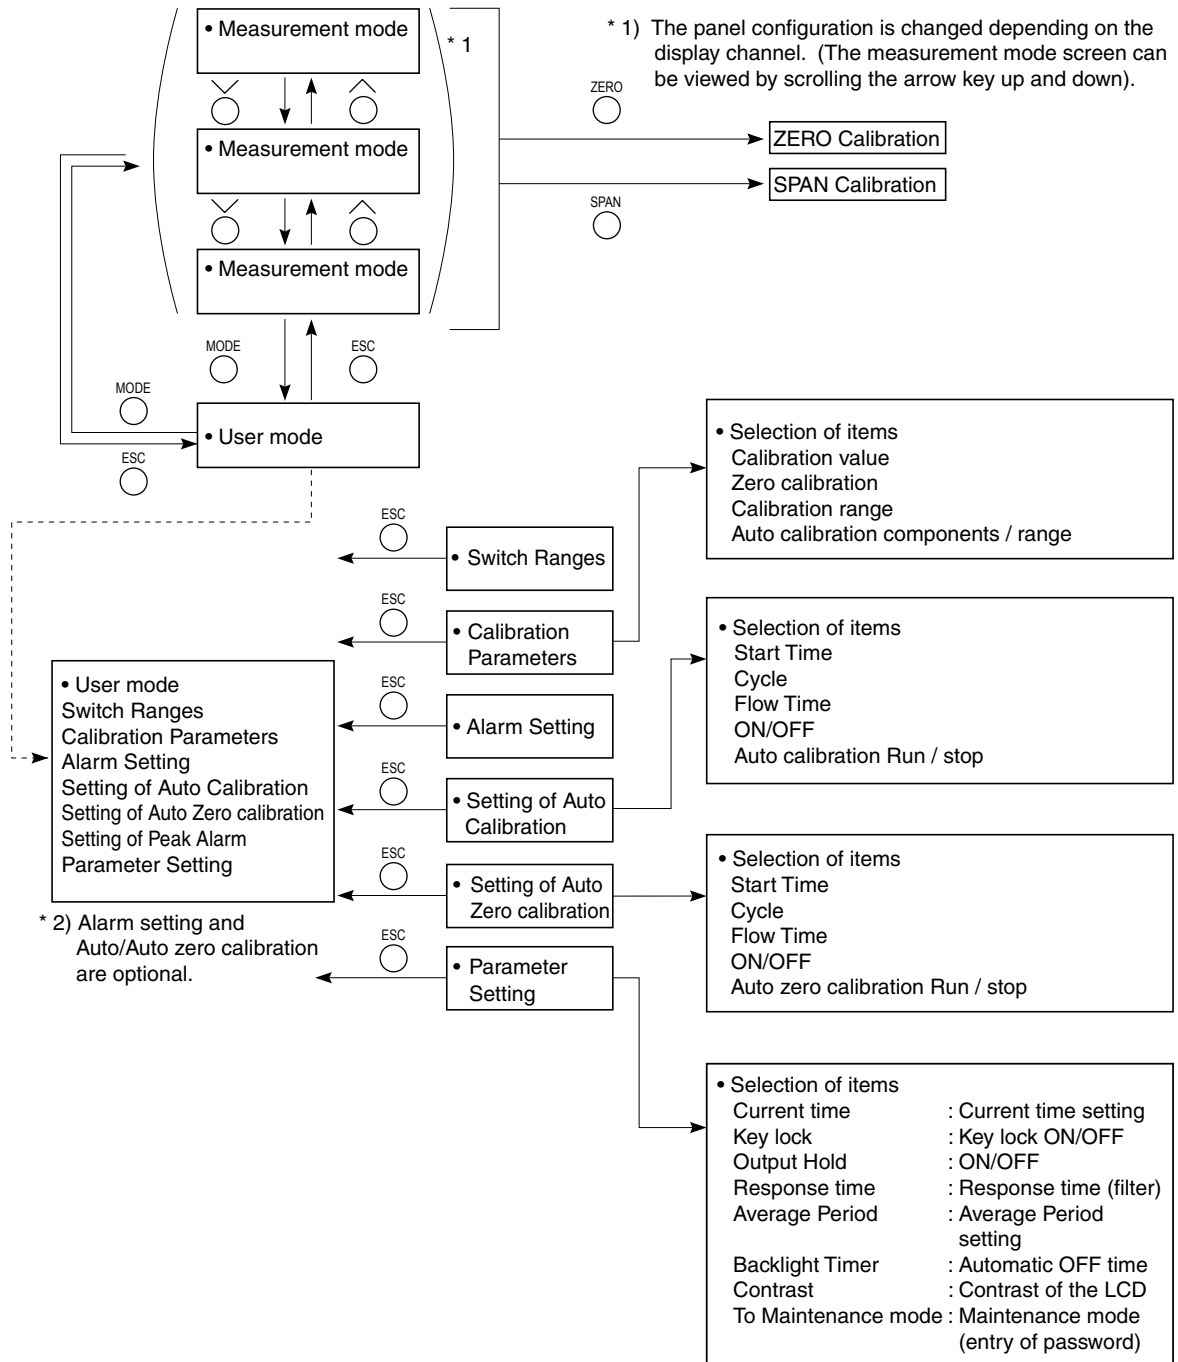



5.3 Outline of display screen

(1) Measurement mode screen (appears when the power is turned ON)

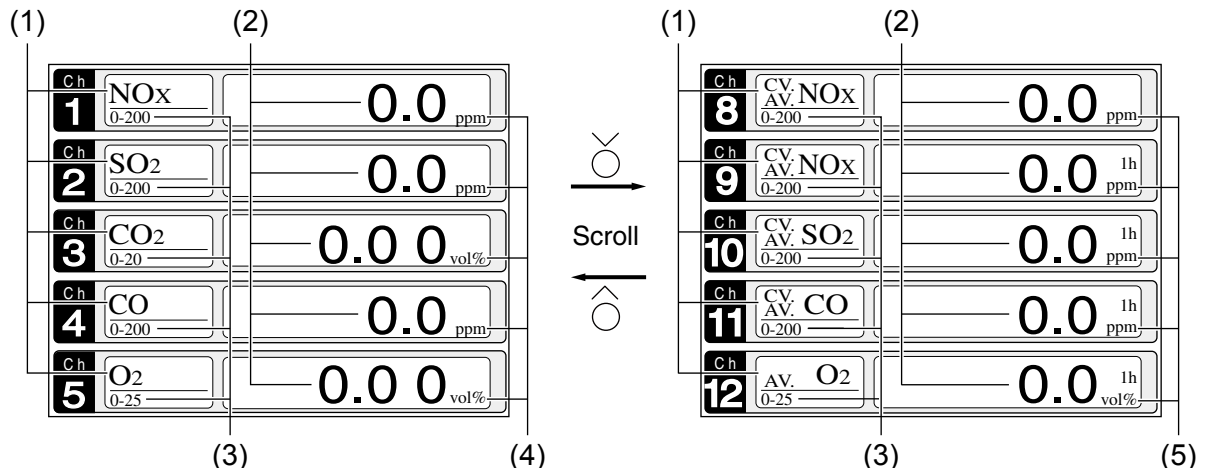The measurement screen depends on the number of components. The following screen configuration is shown as an example for NO, SO₂, CO₂, CO and O₂ (output: 12 channels).



* For outputs of more than 5 channels, scroll the  or the  key to view.

No.	Name	Function
(1)	Component display	Displays the component of instantaneous value, corrected instantaneous value, corrected average value, etc.
(2)	Concentration display	Displays the measured value of concentration.
(3)	Range display	Displays the range values.
(4)	Unit display	Displays the unit with ppm or mg/m ³ and vol%.
(5)	Average time display	Displays the average time.

- **Instantaneous value and concentration value:**

The concentration display of Ch (component) where sampling components such as “CO₂”, “CO” and “O₂” are displayed in the component display, indicates current concentration values of the measured components contained in gas that is now under measurement.

- **O₂ corrected concentration values:**

Ch components in which “cv**” is displayed as “cv CO” in the component display are calculated from the following equation. Refer to section 6.7 “Maintenance mode - Other parameter”.

$$C = \frac{21 - O_n}{21 - O_s} \times C_s$$

O_n: The value of the O₂ correction reference value
(Value set by application)

O_s: Oxygen concentration (Vol%)

C_s: Concentration of relevant measured component.

Note that O_s does not exceed the O₂ limit value set in section 6.7 “Maintenance mode - Other parameter”.

C: Sample gas concentration (O₂ corrected)

The corrected sampling components are NO_x, SO₂ and CO only.

- **O₂ corrected concentration average value:**

In the Ch (component) and O₂ average value where “^{CV}/_{AV} **” is displayed as “^{CV}/_{AV} CO” in the component display, a value obtained by averaging O₂ corrected concentration value or O₂ average value in a fixed time is output every 30 seconds.

Averaging time can be changed between 1 to 59 minutes or 1 to 4 hours according to the average time settings (See 6.7, Parameter setting).


(The averaging set time is displayed as “1h”, for instance, in the range display.)

* The measurement ranges of O₂ correction concentration value and O₂ correction concentration average value are the same as that of the measuring components. Also, the measurement range of O₂ average value is the same as that of O₂.

(2) Setting/selection screen

The setting/selection screen is configured as shown below:

- In the status display area, the current display item is displayed.
- In the message display area, messages associated with operation are displayed.
- In the setting item and selection item display area, items or values to be set are displayed, as required. To work on the area, move the cursor to any item by using UP, DOWN and SIDE keys.

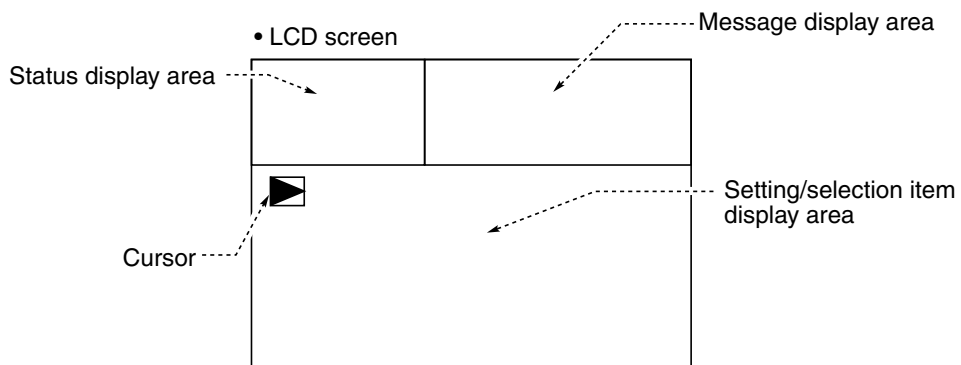

(3) Contents of measured channel (Ch)



The following table gives measurement channels and their contents according to the symbols.

Code symbol			Display/output contents
6th digit	7th digit	21st digit	
Y	1 to 3	Y	Ch1:O ₂
P	Y	Y	Ch1:NO
A	Y	Y	Ch1:SO ₂
D	Y	Y	Ch1:CO ₂
B	Y	Y	Ch1:CO
E	Y	Y	Ch1:CH ₄
F	Y	Y	Ch1:NO, Ch2:SO ₂
G	Y	Y	Ch1:NO, Ch2:CO
J	Y	Y	Ch1:CO ₂ , Ch2:CO
K	Y	Y	Ch1:CH ₄ , Ch2:CO
L	Y	Y	Ch1:CO ₂ , Ch2:CH ₄
N	Y	Y	Ch1:NO, Ch2:SO ₂ , Ch3:CO
T	Y	Y	Ch1:CO ₂ , Ch2:CO, Ch3:CH ₄
V	Y	Y	Ch1:NO, Ch2:SO ₂ , Ch3:CO ₂ , Ch4:CO
P	1 to 3	Y	Ch1:NO, Ch2:O ₂
A	1 to 3	Y	Ch1:SO ₂ , Ch2:O ₂
D	1 to 3	Y	Ch1:CO ₂ , Ch2:O ₂
B	1 to 3	Y	Ch1:CO, Ch2:O ₂
E	1 to 3	Y	Ch1:CH ₄ , Ch2:O ₂
F	1 to 3	Y	Ch1:NO, Ch2:SO ₂ , Ch3:O ₂
G	1 to 3	Y	Ch1:NO, Ch2:CO, Ch3:O ₂
J	1 to 3	Y	Ch1:CO ₂ , Ch2:CO, Ch3:O ₂
K	1 to 3	Y	Ch1:CH ₄ , Ch2:CO, Ch3:O ₂
L	1 to 3	Y	Ch1:CO ₂ , Ch2:CH ₄ , Ch3:O ₂
N	1 to 3	Y	Ch1:NO, Ch2:SO ₂ , Ch3:CO, Ch4:O ₂
T	1 to 3	Y	Ch1:CO ₂ , Ch2:CO, Ch3:CH ₄ , Ch4:O ₂
V	1 to 3	Y	Ch1:NO, Ch2:SO ₂ , Ch3:CO ₂ , Ch4:CO, Ch5:O ₂
P	1 to 3	A *	Ch1:NO _x , Ch2:O ₂ , Ch3:corrected NO _x
A	1 to 3	A *	Ch1:SO ₂ , Ch2:O ₂ , Ch3:corrected SO ₂
B	1 to 3	A *	Ch1:CO, Ch2:O ₂ , Ch3:corrected CO
F	1 to 3	A *	Ch1:NO _x , Ch2:SO ₂ , Ch3:O ₂ , Ch4:corrected NO _x , Ch5:corrected SO ₂
G	1 to 3	A *	Ch1:NO _x , Ch2:CO, Ch3:O ₂ , Ch4:corrected NO _x , Ch5:corrected CO
J	1 to 3	A *	Ch1:CO ₂ , Ch2:CO, Ch3:O ₂ , Ch4:corrected CO
N	1 to 3	A *	Ch1:NO _x , Ch2:SO ₂ , Ch3:CO, Ch4:O ₂ , Ch5:corrected NO _x , Ch6:corrected SO ₂ , Ch7:corrected CO
V	1 to 3	A *	Ch1:NO _x , Ch2:SO ₂ , Ch3:CO ₂ , Ch4:CO, Ch5:O ₂ , Ch6:corrected NO _x , Ch7:corrected SO ₂ , Ch8:corrected CO
P	1 to 3	C *	Ch1:NO _x , Ch2:O ₂ , Ch3:corrected NO _x , Ch4:corrected NO _x average
A	1 to 3	C *	Ch1:SO ₂ , Ch2:O ₂ , Ch3:corrected SO ₂ , Ch4:corrected SO ₂ average
B	1 to 3	C *	Ch1:CO, Ch2:O ₂ , Ch3:corrected CO, Ch4:corrected CO average
F	1 to 3	C *	Ch1:NO _x , Ch2:SO ₂ , Ch3:O ₂ , Ch4:corrected NO _x , Ch5:corrected SO ₂ , Ch6:corrected NO _x average, Ch7:corrected SO ₂ average
G	1 to 3	C *	Ch1:NO _x , Ch2:CO, Ch3:O ₂ , Ch4:corrected NO _x , Ch5:corrected CO, Ch6:corrected NO _x average, Ch7:corrected CO average
J	1 to 3	C *	Ch1:CO ₂ , Ch2:CO, Ch3:O ₂ , Ch4:corrected CO, Ch5:corrected CO average
N	1 to 3	C *	Ch1:NO _x , Ch2:SO ₂ , Ch3:CO, Ch4:O ₂ , Ch5:corrected NO _x , Ch6:corrected SO ₂ , Ch7:corrected CO, Ch8:corrected NO _x average, Ch9:corrected SO ₂ average, Ch10:corrected CO average
V	1 to 3	C *	Ch1:NO _x , Ch2:SO ₂ , Ch3:CO ₂ , Ch4:CO, Ch5:O ₂ , Ch6:corrected NO _x , Ch7:corrected SO ₂ , Ch8:corrected CO, Ch9:corrected NO _x average, Ch10:corrected SO ₂ average, Ch11:corrected CO average

* When the 21st digit code is A or C, the component of the NO analyzer is displayed as NO_x.

5.4 Basic operation

• Measurement mode

The measurement mode can display up to 5 channels in a single screen. If 5 channels or more are to be displayed in a single screen, press the  or the  key to scroll the channels one by one.

Ch 1	NOx 0-200	0.0 ppm
Ch 2	SO2 0-200	0.0 ppm
Ch 3	CO2 0-10	0.00 vol%
Ch 4	CO 0-200	0.0 ppm
Ch 5	O2 0-25	0.00 vol%



Ch 5	O2 0-25	0.00 vol%
Ch 6	CV. NOx 0-200	0.0 ppm
Ch 7	CV. SO2 0-10	0.0 ppm
Ch 8	CV. AV. CO 0-200	0.0 ppm
Ch 9	CV. AV. NOx 0-200	0.0 ppm



Ch 8	CV. AV. CO 0-200	0.0 ppm
Ch 9	CV. AV. NOx 0-200	0.0 ppm
Ch 10	CV. AV. SO2 0-200	0.0 ppm
Ch 11	CV. AV. CO 0-200	0.0 ppm
Ch 12	AV. O2 0-25	0.00 vol%

ZERO


⇒ Zero calibration
See 6.8.1.

⇒ Span calibration
See 6.8.2.




SPAN


ESC


MODE


• User mode displays

- Switch Ranges
- Calibration Parameters
- Alarm Setting
- Setting of Auto Calibration
- Setting of Auto Zero Calibration
- Parameter Setting.

Press the  or the  key and move the cursor preceding the each display item. Each display item is displayed by pressing the  key.

For the setting contents, refer to “Chapter 6. Setting and calibration”.

User Mode	Select an item with UP/DOWN and ENT Back with ESC
<input checked="" type="checkbox"/> Switch Ranges Calibration Parameters Alarm Setting Setting of Auto Calibration Setting of Auto Zero Calibration Setting of Peak Alarm Parameter Setting	









Measurement Mode

6. SETTING AND CALIBRATION



6.1 Switch of range

6.1.1 Setting of range switch mode

Set the range switch mode as follows.


- (1) Press the  key in measurement mode to display the User mode screen.
- (2) Move the cursor to “Switch Ranges” and press the  key.
- (3) In the “Channel Selection” screen that appears, move the  cursor by pressing the  or the  key, and select Ch (component).
- (4) Then press the  key.


- (5) Selected range switch mode is highlighted.

Press the  or the  key to select a desired switch mode.


Description of setting

- MR: Select a desired range on this screen.
 - RR: Select a desired range according to the remote range switch contact input.
 - AR: Automatically switched from Range 1 to Range 2 when the measured concentration exceeds 90% of Range 1. Automatically switched from Range 2 to Range 1 when the measured concentration becomes less than 80% of Range 1.
- * Operation set for each Ch only can be performed.




- (6) Then press the  key to confirm the selection.
If “MR” is selected, the cursor moves to “Range Switch.”

↓ 


User Mode	Select an item with UP/DOWN and ENT Back with ESC
Switch Ranges	Calibration Parameters Alarm Setting Setting of Auto Calibration Setting of Auto Zero Calibration Setting of Peak Alarm Parameter Setting

↓ 

Switch Range	Select Ch No. with UP / DOWN and ENT Back with ESC
Ch1 NO _x MR	Range1 0-200.0 ppm Range2 0-2000 ppm
Ch2 SO ₂ AR	Range1 0-200.0 ppm Range2 0-2000 ppm
Ch3 CO ₂ RR	Range1 0-10.00 vol% Range2 0-20.00 vol%
Ch4 CO MR	Range1 0-200.0 ppm Range2 0-1000 ppm
Ch5 O ₂ MR	Range1 0-10.00 vol% Range2 0-25.00 vol%

↓   

Switch Range	Select method of Switch ranges with UP / DOWN and ENT Back with ESC
Ch1 NO _x MR	Range1 0-200.0 ppm Range2 0-2000 ppm
Ch2 SO ₂ AR	Range1 0-200.0 ppm Range2 0-2000 ppm
Ch3 CO ₂ RR	Range1 0-10.00 vol% Range2 0-20.00 vol%
Ch4 CO MR	Range1 0-200.0 ppm Range2 0-1000 ppm
Ch5 O ₂ MR	Range1 0-10.00 vol% Range2 0-25.00 vol%

↓ 

**Range switch
or previous screen**

6.1.2 Manual range switch

The range of the measured component can be switched manually as follows.


- (1) Select “MR” as range switch mode, and then press the $\overset{\text{ENT}}{\bigcirc}$ key.

Switch Range		Select method of Switch ranges with UP / DOWN and ENT Back with ESC
Ch1 NO _x	MR	▶ Range1 0-200.0 ppm Range2 0-2000 ppm
Ch2 SO ₂	AR	▶ Range1 0-200.0 ppm Range2 0-2000 ppm
Ch3 CO ₂	RR	▶ Range1 0-10.00 vol% Range2 0-20.00 vol%
Ch4 CO	MR	▶ Range1 0-200.0 ppm Range2 0-1000 ppm
Ch5 O ₂	MR	▶ Range1 0-10.00 vol% Range2 0-25.00 vol%



- (2) Move the highlight of the cursor to range selection, and then select a desired range by pressing the $\overset{\wedge}{\bigcirc}$ or the $\overset{\vee}{\bigcirc}$ key. (The \blacktriangleright mark indicates the currently selected range.)
- (3) Then press the $\overset{\text{ENT}}{\bigcirc}$ key, and the measurement is carried out in the selected range.

Switch Range		Select range with UP/DOWN and ENT Back with ESC
Ch1 NO _x	MR	\blacktriangleright Range1 0-200.0 ppm Range2 0-2000 ppm
Ch2 SO ₂	AR	▶ Range1 0-200.0 ppm Range2 0-2000 ppm
Ch3 CO ₂	RR	▶ Range1 0-10.00 vol% Range2 0-20.00 vol%
Ch4 CO	MR	▶ Range1 0-200.0 ppm Range2 0-1000 ppm
Ch5 O ₂	MR	▶ Range1 0-10.00 vol% Range2 0-25.00 vol%



End of Range Switch

Note) If “RR” or “AR” is selected as range switch mode, this operation cannot be performed.

The ranges for O₂ correction value, O₂ correction average value, and O₂ average value are automatically switched according to the instantaneous value range switch settings. (Same as for “RR” or “AR”.)

To close the setting

Press the $\overset{\text{ESC}}{\bigcirc}$ key to end the setting of range switch mode or range switch operation or stop the operation in the middle. The setting operation is made invalid and the previous screen appears.

Range identification contact operation

The range identification contact output corresponding to each Ch (component) is closed when Range 1 is active, and open when Range 2 is active, no matter.

If the measurement value is held by remote contact input or during calibration routine and range switch conditions are met, the contact will change position only after the hold condition is removed.

6.2 Calibration setting

This mode is used to set calibration concentration and actions. The calibration setting involves calibration concentration, zero calibration, calibration range and auto calibration component/range.

In the “Calibration Parameters” screen that appears, the data shown at right is illustrated.

6.2.1 Setting of calibration concentration

It allows you to set concentrations of the standard gas (zero and span) of each Ch used for calibration.

- (1) Select < User mode > → < Calibration parameters > → < Calibration value >. “Calibration Value Settings” screen appears as shown at right.
- (2) Select the Ch you want to change by pressing the $\hat{\circ}$ or the $\check{\circ}$ key. Press the $\overset{\text{ENT}}{\circ}$ key and cursor moves preceding the value.
- (3) Select the concentration item you want to set by pressing the $\hat{\circ}$, $\check{\circ}$ key or the $\bar{\circ}$ key (movable within the selected Ch). Then press the $\overset{\text{ENT}}{\circ}$ key, and the selected value is highlighted.

Cal. Parameters	Select an item with UP/DOWN and ENT Back with ESC
<input checked="" type="checkbox"/> Calibration Value About ZERO Calibration About Calibration Range Auto Calibration Components / Range	



Cal. Settings	Select setting value		
Cal. Value			
CH	RANGE	ZERO	SPAN
Ch1 NO _x	0-200.0ppm	+0000.0	0200.0
Ch2 SO ₂	0-2000ppm	+00000	02000
Ch3 CO ₂	0-10.00vol%	+000.00	010.00
Ch4 CO	0-200.0ppm	+0000.0	0200.0
Ch5 O ₂	0-1000ppm	+00000	01000
	0-25.00vol%	21.00	01.00



(4) Then, enter calibration gas concentration values (zero and span). For value entry, press the $\hat{\circ}$ or the $\check{\circ}$ key, and a 1-digit value increases or decreases. By pressing the \circ key, the digit moves.

After setting, save the entry by pressing the $\overset{\text{ENT}}{\circ}$ key. The saved value becomes valid from the next calibration process.

Note) Enter settings that correspond to each range. If zirconia type is used as O₂ sensor, select 21.00 for the field of Zero (when ambient air is used), and select the concentration listed on the cylinder as required.

\Downarrow $\check{\circ}$ ($\hat{\circ}$) $\overset{\text{ENT}}{\circ}$

Cursor for setting value

Cal. Settings		Set calibration value	
Cal. Value			
CH	RANGE	ZERO	SPAN
Ch1	0-200.0ppm	+0000.0	0200.0
NO _x	0-2000ppm	+00000	02000
Ch2	0-200.0ppm	+0000.0	0200.0
SO ₂	0-2000ppm	+00000	02000
Ch3	0-10.00vol%	+000.00	010.00
CO ₂	0-20.00vol%	+000.00	020.00
Ch4	0-200.0ppm	+0000.0	0200.0
CO	0-1000ppm	+00000	01000
Ch5	0-10.00vol%	21.00	01.00
O ₂	0-25.00vol%	21.00	01.00

\Downarrow $\check{\circ}$ $\hat{\circ}$ $\overset{\text{ENT}}{\circ}$

**End of Calibration
Concentration Setting**

To close the setting

To close the calibration concentration value setting process or cancel this mode midway, press the $\overset{\text{ESC}}{\circ}$ key. A previous screen will return.

Setting range of values

<p>NO_x, SO₂, CO₂, CO, CH₄, external O₂ measurement and built-in O₂ sensor</p>	<p>Span gas: 1 to 105% of full scale (Full scale (FS) is the same as each range value.)</p>
<p>External Zirconia O₂ measurement</p>	<p>Zero gas: 5 to 25 vol% / Span gas: 0.01 to 5 vol%</p>
<p>Reverse range O₂ measurement</p>	<p>Zero gas: 100 vol% O₂ / Span gas: 95.25 to 95.00 vol% O₂</p>


The setting cannot be performed beyond the range.

6.2.2 Setting of manual zero calibration

When zero calibration is made manually, set if all measurement components should be calibrated simultaneously or one by one.

- (1) Select < User mode > → < Calibration parameters > → < Zero calibration >. “Zero Calibration” screen appears as shown at right.
- (2) Select the Ch you want to change by pressing the $\hat{\circ}$ or the $\check{\circ}$ key. Press the ENT key and the setting content is highlighted.
- (3) Select “at once” or “each” by pressing the $\hat{\circ}$ or $\check{\circ}$ key.
 - When selecting “at once”, the Ch (components) to be set can be zero-calibrated at the same time.
 - When selecting “each”, individual Ch (component) as shown at right is selected and zero-calibrated.
 Press the ENT key after the setting, and the specified calibration is performed.

Cal. Settings ZERO Cal.		Set each or both Ch at ZERO Calibration
Ch1 NO _x	Range1 0-200.0ppm Range2 0-2000 ppm	at once
Ch2 SO ₂	Range1 0-200.0ppm Range2 0-2000 ppm	at once
Ch3 CO ₂	Range1 0-10.00vol% Range2 0-20.00vol%	at once
Ch4 CO	Range1 0-200.0ppm Range2 0-1000 ppm	at once
Ch5 O ₂	Range1 0-10.00vol% Range2 0-25.00vol%	each



**End of
Manual Zero Calibration Setting**

To close the setting

To close the manual zero calibration setting or to cancel this mode midway, press the ESC key. A previous screen will return.

Example

Whether “each” or “at once” can be determined for each Ch (component).

•Setting “each”

Select the Ch (component) on the manual zero calibration screen and then perform the zero calibration.

•Setting “at once”

At a manual zero calibration, Ch (components) for which “at once” was selected can simultaneously be zero-calibrated.

Manual Calibration screen

- When setting all components to “each”:

ZERO Cal.		ENT : Go on Calibration of selected Ch ESC : Not calibration	
Ch1 NOx	▶ Range1 0-200.0ppm Range2 0-2000 ppm	▢	-2.1
Ch2 SO ₂	▶ Range1 0-200.0ppm Range2 0-2000 ppm		-0.5
Ch3 CO ₂	▶ Range1 0-10.00vol% Range2 0-20.00vol%		0.00
Ch4 CO	▶ Range1 0-200.0ppm Range2 0-1000 ppm		0.0
Ch5 O ₂	▶ Range1 0-10.00vol% Range2 0-25.00vol%		21.00

A single cursor will appear.

- When setting all components to “at once”:

ZERO Cal.		ENT : Go on Calibration of selected Ch ESC : Not calibration	
Ch1 NOx	▶ Range1 0-200.0ppm Range2 0-2000 ppm	▢	0.0
Ch2 SO ₂	▶ Range1 0-200.0ppm Range2 0-2000 ppm	▢	0.3
Ch3 CO ₂	▶ Range1 0-10.00vol% Range2 0-20.00vol%	▢	0.00
Ch4 CO	▶ Range1 0-200.0ppm Range2 0-1000 ppm	▢	-0.1
Ch5 O ₂	▶ Range1 0-10.00vol% Range2 0-25.00vol%	▢	21.00


Cursors will appear at all components where “at once” is set.

6.2.3 Setting of calibration range

This mode is used to set if the range of each Ch (component) at the zero or span calibration (manual or auto calibration) should be calibrated with a single range or 2 ranges.

- (1) Select < User mode > → < Calibration parameters > → < Calibration range >. “Calibration Range” screen appears as shown at right.
 - (2) Select the Ch you want to change by pressing the $\hat{\circ}$ or the \checkmark key. Press the ENT key and the setting contents is highlighted.
 - (3) Select “both” or “current” by pressing the $\hat{\circ}$ or the \checkmark key.
 - If “both” is selected, zero or span calibration is performed with Range 1 and Range 2 of the selected Ch interlocked when calibration is performed.
 - If “current” is selected, zero or span calibration is performed only for the range displayed when calibration is performed.
- Press the ENT key after the selection, and the specified calibration is performed.

Cal. Settings		Set calibration range
Cal. Range		current or both range
Ch1 NO _x	Range1 0-200.0ppm Range2 0-2000 ppm	both
Ch2 SO ₂	Range1 0-200.0ppm Range2 0-2000 ppm	current
Ch3 CO ₂	Range1 0-10.00vol% Range2 0-20.00vol%	current
Ch4 CO	Range1 0-200.0ppm Range2 0-1000 ppm	both
Ch5 O ₂	Range1 0-10.00vol% Range2 0-25.00vol%	current



End of Calibration Range Setting

To close “Setting of Calibration Range”

To close “Setting of Calibration Range” or to cancel this mode midway, press the ESC key. A previous screen will return.

Example

Ch1 NO _x	Range 1: 0 to 200 ppm Range 2: 0 to 2000 ppm	both
Ch2 SO ₂	Range 1: 0 to 200 ppm Range 2: 0 to 2000 ppm	current

Ch1: Range 1 and Range 2 are calibrated together.

Ch2: Only currently displayed range is calibrated.

Note

To perform calibration for “both,” set the same calibration gas concentration for both ranges.

Manual Calibration screen







When setting NO_x and CO to “both”

ZERO Cal.		ENT : Go on calibration of selected Ch
		ESC : Not calibration
Ch1 NO _x	▶ Range1 0-200.0ppm Range2 0-2000 ppm	◀ -0.6
Ch2 SO ₂	▶ Range1 0-200.0ppm Range2 0-2000 ppm	◀ 0.4
Ch3 CO ₂	▶ Range1 0-10.00vol% Range2 0-20.00vol%	◀ 0.00
Ch4 CO	▶ Range1 0-200.0ppm Range2 0-1000 ppm	◀ -0.1
Ch5 O ₂	▶ Range1 0-10.00vol% Range2 0-25.00vol%	◀ 21.00

Two cursors will appear in both ranges (Ch1 and Ch4).

6.2.4 Setting of auto calibration component/range





Select the Ch (component) and the range for which auto calibration is to be performed. The Ch for which “AR” has been selected as range switch mode is calibrated in the range set here. Auto calibration and the manual calibration of the component for which “AR” has been selected as range switch mode are performed in the range selected here.

- (1) Select < User mode > → < Calibration parameters > → < Auto calibration component/range >. “Auto Calibration Component Range” setting screen appears as shown at right.
- (2) Select the Ch you want to change by pressing the  or the  key. Press the  key and the selected cursor is highlighted.
- (3) Select the range to be calibrated mainly by pressing the  or the  key.
- (4) Then press the  key, and calibration is performed in the selected range when auto calibration or auto zero calibration is performed.


“Auto Calibration Component/range” setting


Auto calibration and the manual calibration of the component for which “AR” has been selected as range switch mode are performed in the range selected here. In this case, once the calibration is started, the range is automatically switched, and on completion of the calibration, the original range is resumed.


The range identification contact is interlocked with the range after the switch. However, if the hold setting is set to “ON,” the contact status before calibration is maintained.

- (5) Press the  key in the state described in (3), and the highlight is switched between “enable” and “disable” auto calibration.
- (6) Select “enable” of “disable” by pressing the  or the  key.
- (7) Then press the  key.


Cal. Settings Auto Cal.	Select a range for auto calibration	
Ch1 NO _x	Range1 0-200.0ppm Range2 0-2000 ppm	enable
Ch2 SO ₂	Range1 0-200.0ppm Range2 0-2000 ppm	enable
Ch3 CO ₂	Range1 0-10.00vol% Range2 0-20.00vol%	enable
Ch4 CO	Range1 0-200.0ppm Range2 0-1000 ppm	enable
Ch5 O ₂	Range1 0-10.00vol% Range2 0-25.00vol%	enable

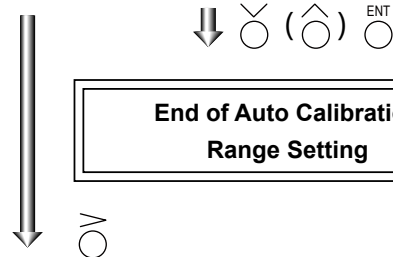

Cal. Settings Auto Cal.	Set enable or disable for auto calibration	
 Ch1 NO _x	Range1 0-200.0ppm Range2 0-2000 ppm	enable
Ch2 SO ₂	Range1 0-200.0ppm Range2 0-2000 ppm	enable
Ch3 CO ₂	Range1 0-10.00vol% Range2 0-20.00vol%	enable
Ch4 CO	Range1 0-200.0ppm Range2 0-1000 ppm	enable
Ch5 O ₂	Range1 0-10.00vol% Range2 0-25.00vol%	enable

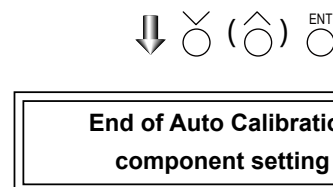

To close the setting

Press the  key to exit automatic calibration component/range setting, and the previous screen appears.

Operation by setting

Auto calibration is performed under the following rules.

1. Zero calibration is performed at the same time, for the Ch (component) in which “enable” is selected at the time of auto calibration and auto zero calibration.
2. Span calibration is performed in the order from smallest Ch No., for the Ch (component) for which “enable” is selected at the time of auto calibration.

Note

ZERO calibration on auto calibration and auto zero calibration of the component for which “enable” is selected are performed in batch irrespective of the description in “6.2.2 Setting of manual zero calibration.”

6.3 Alarm setting

6.3.1 Setting of alarm values

The High/Low limit alarm output setting for the measured concentration setting can be made. 5 different alarm contact outputs can be used.

To change alarm setting, set the alarm ON/OFF setting to OFF, and then change the value.

- (1) Enter the "Setting of Alarm No." screen from the user mode, and the display shown at right appears. Point the cursor to the Alarm No. or hysteresis you want to set by pressing $\hat{\circ}$ or the \checkmark key. Press the \circ key.

Alarm Setting	Select Alarm No. or Hysteresis setting
\square Alarm-1	
Alarm-2	
Alarm-3	
Alarm-4	
Alarm-5	
Hysteresis	00 FS

\Downarrow \checkmark ($\hat{\circ}$) \circ

- (2) Select the alarm 1 to 5 to display the screen shown at right. Operate the $\hat{\circ}$ or the \checkmark key until the cursor is aligned with a desired item and press the \circ key.

Alarm Setting	Select an item with UP/DOWN and ENT Back with ESC
\square Alarm-1	
\square Channel	Ch 1
H-Limit Range 1	200.0 ppm
Range 2	2000 ppm
L-Limit Range 1	000.0 ppm
Range 2	0000 ppm
Kind of Alarm	High
ON / OFF	OFF

\Downarrow \checkmark ($\hat{\circ}$) \circ

Note

Set the values so that **H-limit value > L-limit value** and that **(H-limit value – L-limit value) > hysteresis**.

For the case of reverse range O₂ measurement: Set the values so that L-limit value > H-limit value for the reverse range O₂ measurement. When "0" is set, the alarm operation is not performed.

- (3) After setting, the alarm setting is now completed by pressing the \circ key.

To close the "Alarm Setting"

To close the "Alarm Setting" or to cancel this mode midway, press the \circ key. A previous screen will return.

Setting range

0% to 100% FS (Settable in each range).

Cursor for setting value

Alarm Setting	Select an item with UP/DOWN and ENT Back with ESC
\square Alarm-1	
\square Channel	Ch 1
H-Limit Range 1	000.0 ppm
Range 2	2000 ppm
L-Limit Range 1	000.0 ppm
Range 2	0000 ppm
Kind of Alarm	High
ON / OFF	OFF

\Downarrow \checkmark ($\hat{\circ}$) \circ

End of Alarm Setting

Description of setting items

The alarm contact assigned the same number as the alarm is operated accordingly.

- Channel:** Channel setting targeted for issuance of alarm.
One Ch No. can be selected for multiple alarms.
- H-Limit value:** Sets the high limit value (concentration) of alarm.
- L-Limit value:** Sets the low limit value (concentration) of alarm.
- Kind of Alarm:** Selects one of High limit alarm, Low limit alarm, and High limit or Low limit alarm, HH limit alarm, and LL limit alarm.
High, HH Alarm contact closes when above H-limit alarm.
Low, LL Alarm contact closes when below L-limit alarm.
High or Low... Alarm contact closes when above H-limit value or below lower limit value.

ON/OFF: Enables the alarm function if set at ON, or disables it if set at OFF.

* The H-limit value cannot be set below the L-limit value, and the L-limit value cannot be set above the H-limit value.

If it is desired to set the H-limit value below the L-limit value already stored in the memory, reduce the L-limit value beforehand, and vice versa.

Typical on-screen display when an alarm occurs

When an H-limit alarm occurs, the “H-alarm” message comes on in the field of relevant Ch (component). (“L-alarm” for L-limit alarm, “HH-alarm” for HH limit alarm, and “LL-alarm” for LL limit alarm)

Ch 1	H-alarm	ppm
Ch 2	SO2 0-200	0.0 ppm
Ch 3	CO2 0-10	0.003 vol%
Ch 4	CO 0-200	0.0 ppm
Ch 5	O2 0-25	21.00 vol%

Note

After turning on power, the alarm logic trigger is inactive for 10 minutes.

6.3.2 Hysteresis setting

To prevent chattering of an alarm output near the alarm setting values, adjust the value of hysteresis.

(1) In the “Alarm Setting” screen that appears, point the cursor to “Hysteresis” by pressing the $\hat{\circ}$ or the $\check{\circ}$ key. Press the ENT $\text{\textcircled{O}}$ key to display the screen shown at right.

(2) Then, enter hysteresis values.

For the value entry, 1-digit value is increased or decreased by pressing the $\hat{\circ}$ or the $\check{\circ}$ key, and pressing the $\text{\textcircled{O}}$ key moves the digit. After setting, press the ENT $\text{\textcircled{O}}$ key to make the “Hysteresis” valid.

Alarm Setting	Set Hysteresis 0 to 20%FS available
Alarm-1	
Alarm-2	
Alarm-3	
Alarm-4	
Alarm-5	
Alarm-6	
Hysteresis	$\text{\textcircled{0}}$ %FS



End of Hysteresis Setting

To close "Hysteresis Setting"

To close the “Hysteresis Setting” or cancel the mode midway, press the ESC $\text{\textcircled{O}}$ key. A previous screen will return.

Setting range


0 to 20% of full scale
[% full scale (FS)] represents the percentage with the width of the component measurement range regarded as 100%.

Note

The hysteresis is common to all alarms (components).
Hysteresis in peak alarm setting described in Item 6.3.3 should be set separately.

Hysteresis (In case of upper limit alarm)



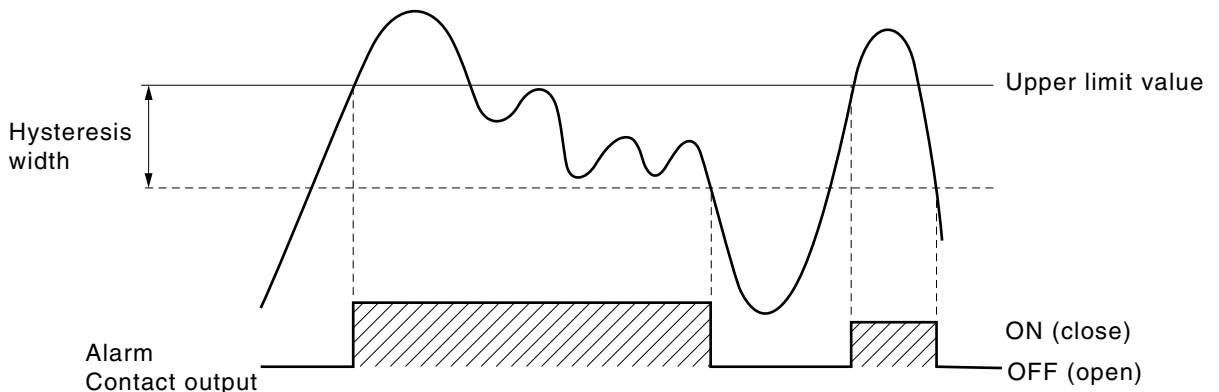




An alarm output is turned ON if measurement value exceeds the upper limit value as shown below. Once the alarm output has been turned ON, it is not turned OFF as long as the indication does not fall below the hysteresis width from the upper limit value.






6.3.3 Peak alarm setting

When the peak number of times CO concentration exceeds the upper limit value during measurement reaches the set number, an alarm is provided.

The peak alarm and this setting screen appear only when an option is added.




- (1) Press the  key in the Measurement mode, and the User mode appears.
- (2) Point the cursor to “Setting of Peak Alarm” by pressing the  or  key. Press the  key.
- (3) In the “Peak Alarm Setting” item selection screen that appears, point the cursor to any item you want to set by pressing the  or  key. Press the  key.
- (4) Then, enter numeric values and perform the setting.

Entering the numeric values or setting the items should be carried out by using the  or  key.

After setting, press the  key, and the set values are saved

Description of setting items

- Peak Alarm : ON/OFF of peak alarm
- Alarm Value : If measuring value exceeds the set alarm value, a peak counter counts 1 time.
- Alarm Count : When the alarm value is exceeded this many times per hour, the peak count alarm is activated (closed).
- Hysteresis : To prevent possible chattering when the measuring value may exceed the set peak concentration by only 1 time, the peak count has an allowance in the hysteresis width.

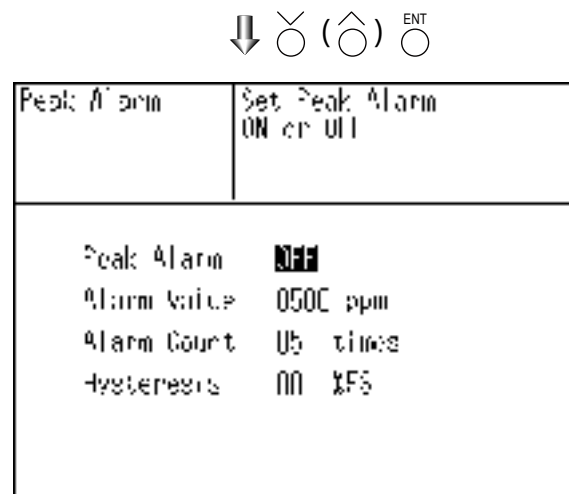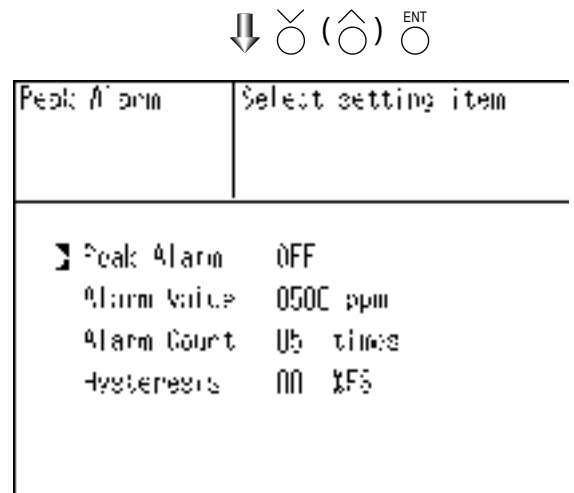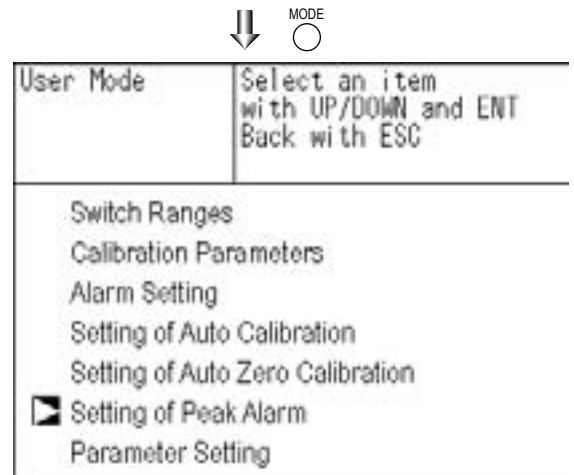




End of Peak Alarm Setting

Setting range

- Alarm value : 10 to 1000 ppm → 5 ppm step (initial value: 500 ppm)
 - Alarm count : 1 to 99 times (per hour) → (initial value: 5 times)
 - Hysteresis : 0 to 20 % of full scale → (initial value: 0% of full scale)
- [% full scale] represents the percentage with the CO range regarded as 100%.

Action of peak alarm

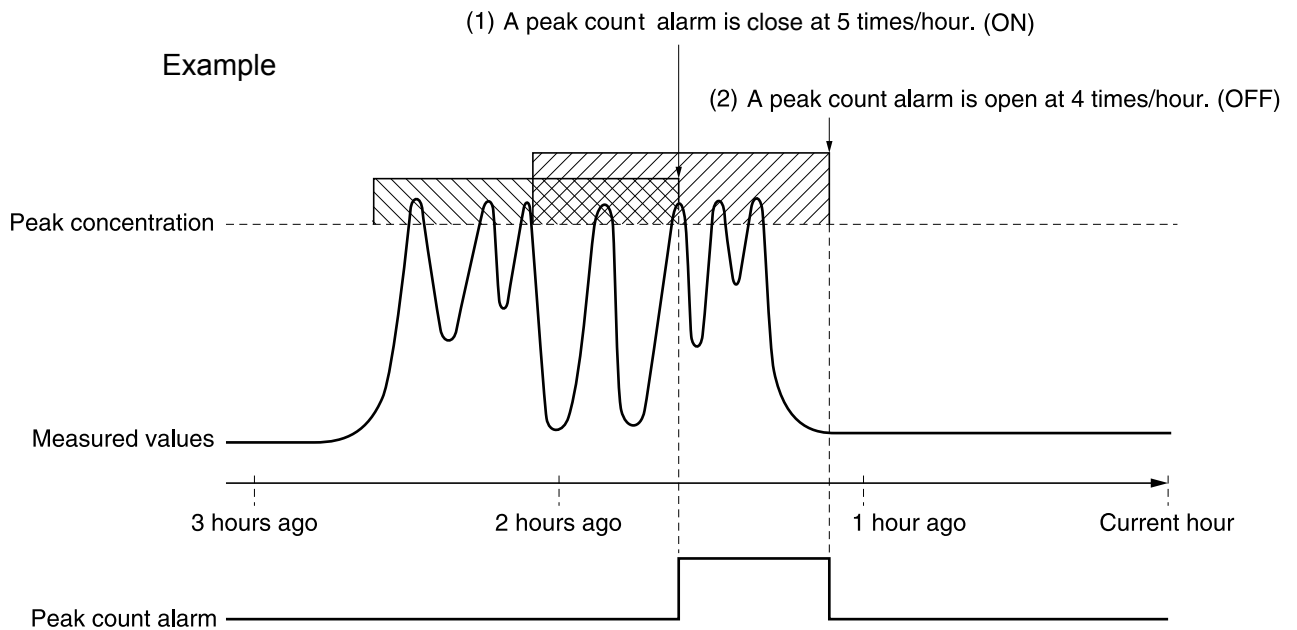

If CO concentration exceeds the alarm value, counting will begin. If the number of peaks is over the set times per hour, a peak alarm contact output becomes closed (ON). If it is less than the set times per hour, it is open (OFF). Since 5 times of peaks /hour is marked at (1)  section from the above graph, the peak count alarm is turned ON. Since peaks of more than 5 times per 1 hour occur at the interval between (1) and (2) , the peak count alarm remains ON. Since at (2), peaks are reduced to 4 times per hour, it is turned OFF.

Like the hysteresis of the alarm setting, the hysteresis prevents possible chattering when measured gas is fluctuated near the alarm value.

* For 10 minutes after the power is turned ON, a peak alarm counting logic is not carried out.

Releasing peak count alarm

To release the peak count alarm, set the peak alarm to OFF.

Turning on the peak alarm initiates counting from 0.

6.4 Setting of auto calibration

6.4.1 Auto calibration

Auto calibration is automatically carried out at the time when zero span calibration are set. Before changing the setting of auto calibration, set the ON/OFF to OFF.

- (1) Enter the "Setting of Auto Calibration" screen from the user mode, and the display shown at right appears. Operate the $\hat{\circ}$ or the $\check{\circ}$ key until the cursor is aligned with a desired item and press the $\overset{\text{ENT}}{\circ}$ key.

- (2) In the "Setting of Auto Calibration" screen that appears, perform the value entry or the setting. For the value entry or setting change, use the $\hat{\circ}$ or the $\check{\circ}$ key, and the $\bar{\circ}$ key to move the cursor to the right.

After setting, press the $\overset{\text{ENT}}{\circ}$ key, and auto calibration is carried out by the entered setting value.

Description of setting items

- Start Time : Setting at the first calibration (day of the week, hour, minute)
- Cycle : A period between the start time of one calibration and the next (unit : hour/day)
- Flow Time : The time required for replacement by calibration gas
Time required for replacement of sample gas after the calibration is completed (Set by calibration gas. See the next page.)
- ON/OFF : ON/OFF of auto calibration

To close "Setting of Auto calibration"

To close the "Setting of Auto calibration" or cancel this mode midway, press the $\overset{\text{ESC}}{\circ}$ key.
A previous screen will return.

Set Auto Cal	Select setting item
Start Time	SUN 12:00
Cycle	07 day
Flow Time	
ON / OFF	OFF
Time : MON 12:34	
Auto Calibration Run	

\Downarrow $\check{\circ}$ ($\hat{\circ}$) $\overset{\text{ENT}}{\circ}$

Set Auto Cal	Set Start Time
Start Time	SUN 12:00
Cycle	07 day
Flow Time	
ON / OFF	OFF
Time : MON 12:34	
Auto Calibration Run	

Press the $\hat{\circ}$ or the $\check{\circ}$ key, and date and time are displayed alternately.

\Downarrow $\check{\circ}$ $\hat{\circ}$ $\bar{\circ}$ $\overset{\text{ENT}}{\circ}$

End of Auto Calibration Setting

<Gas flow time> setting

- (1) Press the ENT key in a state where the cursor is placed preceding "Flow Time," and the flow time setting screen appears.
- (2) Move the cursor to the gas you want to change by pressing the $\hat{\text{O}}$ or the $\check{\text{O}}$ key, and then press the ENT key.
- (3) The highlighted value can be changed. Change the value by pressing the $\hat{\text{O}}$ or the $\check{\text{O}}$ key, and then move the cursor to the right by pressing the ENT key.
- (4) After changing the value, press the ENT key.
- (5) Press the ESC key to return to the automatic calibration setting screen.

Set Auto Cal.	Set flow time of calibration gas 60 to 900 sec
Zero	50 sec.
Ch1 Span	350 sec.
Ch2 Span	350 sec.
Ch3 Span	350 sec.
Ch4 Span	300 sec.
Ch5 Span	300 sec.
Ex. time	300 sec.

\downarrow $\check{\text{O}}$ ($\hat{\text{O}}$) ENT


Note) Only the Chs used are displayed on this screen. The Ex. time is the output signal hold extension time after the completion of calibration. It is valid only when the hold setting is set to "ON." The Ex. time set here is also the hold extension time at the time of manual calibration.

Auto calibration status contact output is closed during auto calibration (NO side), and is open in other cases.

Example

Start Time	SUN	12:00
Cycle	1	day
Flow Time	Zero	350 sec
	Ch1 Span	350 sec
	Ch2 Span	350 sec
	Ch3 Span	350 sec
	Ch4 Span	300 sec
	Ch5 Span	300 sec
	EX. time	300 sec
ON/OFF	ON	

In case where auto calibration is carried out at the above setting.

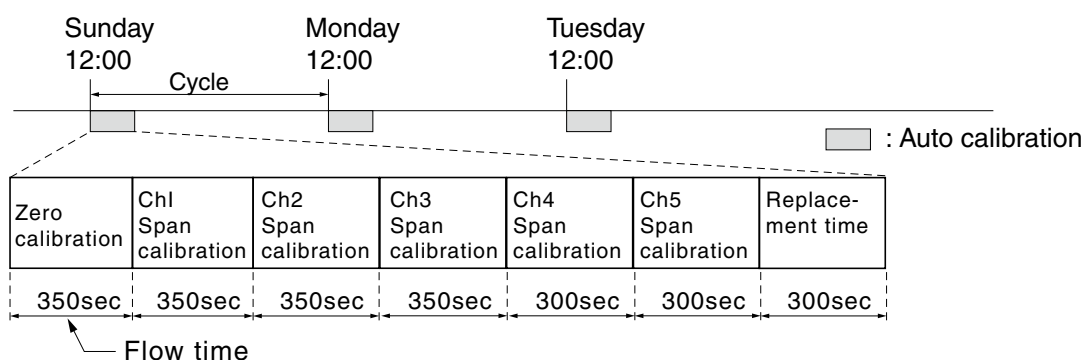

(An example of “Ch1: through Ch5: enable”, as given in Item 6.2.4 “Auto Calibration Components/range”)

Setting range


Cycle : 1 to 99 hours or 1 to 40 days (initial value 7 days)
 Flow time : 60 to 900 sec (initial value 300 sec)

Caution

- When an auto calibration starts, the measurement screen appears automatically.
- Any operation other than “Stop Auto Calibration” (see Item 6.4.2) is not permitted during auto calibration. “Stop Auto Calibration” cannot be performed with the key lock to ON. To cancel auto calibration forcedly, set the key lock to OFF and then execute “Stop Auto Calibration”.
- Turn on the power again after it is turned off (including the case of power failure) at the time set as the next start time in auto calibration, and then repeat it in the set cycle.

Remote start

Whether the auto calibration is set at ON or OFF, an auto calibration is available by remote start input.



6.4.2 Forced run/stop of auto calibration

Auto calibration can be performed just once or forcibly stopped while the calibration is performed.

6.4.2.1 Execution of auto calibration (only once)

- (1) In the “Setting of Auto Calibration” screen that appears, point the cursor to “Auto Calibration Run” by pressing the $\hat{\bigcirc}$ or the $\check{\bigcirc}$ key. Press the \bigcirc^{ENT} key.
- (2) “Run” is highlighted, displaying a message to confirm the execution of auto calibration. Press the \bigcirc^{ENT} key to execute the auto calibration, and press the \bigcirc^{ESC} key to cancel.

Set Auto Cal.	Auto Cal. Run ENT : Run / Stop ESC : Cancel
Start Time	SUN 12:00
Cycle	07 day
Flow Time	
ON / OFF	OFF
Time : MON 12:34	
Auto Calibration Run	

6.4.2.2 Forced stop of auto calibration

This mode is used to stop the auto calibration forcibly.

- (1) In the “Setting of Auto Calibration” screen that appears, point the cursor to “Auto Calibration Stop” by pressing the $\hat{\bigcirc}$ or the $\check{\bigcirc}$ key. Press the \bigcirc^{ENT} key. (“Auto Calibration Stop” appears when the screen is selected while auto calibration is performed.)
- (2) “Stop” is highlighted, displaying a message to confirm the stop of auto calibration. Press the \bigcirc^{ENT} key to stop the auto calibration, and press the \bigcirc^{ESC} key to cancel (not stopped).

Set Auto Cal.	Auto Cal. Stop ENT : Run / Stop ESC : Cancel
Start Time	SUN 12:00
Cycle	07 day
Flow Time	300 sec
ON / OFF	OFF
Time : MON 12:34	
Auto Calibration Stop	

“Auto Calibration” screen

Example

In case where setting the auto calibration components (see Item 6.2.4) to “Ch1: enable” and “Ch2: enable”

• Zero calibration

A message, “Zero cal.” blinks at Ch1 and Ch2.

Ch 1	ZERO cal.	0.5 ppm
Ch 2	ZERO cal.	0.3 ppm
Ch 3	CO ₂ 0-10	0.000 vol%
Ch 4	CO 0-200	0.0 ppm
Ch 5	O ₂ 0-25	21.02 vol%

• Ch1 span calibration

A message, “Span cal.” blinks at Ch1.

Ch 1	SPAN cal.	90.8 ppm
Ch 2	SO ₂ 0-200	0.0 ppm
Ch 3	CO ₂ 0-10	0.00 vol%
Ch 4	CO 0-200	0.0 ppm
Ch 5	O ₂ 0-25	0.00 vol%

• Ch2 span calibration

A message, “Span cal.” blinks at Ch2.

Ch 1	NOx 0-200	0.0 ppm
Ch 2	SPAN cal.	95.0 ppm
Ch 3	CO ₂ 0-10	0.00 vol%
Ch 4	CO 0-200	0.0 ppm
Ch 5	O ₂ 0-25	0.00 vol%

Caution

During auto calibration operation is not permitted other than operation as the lock ON/OFF and “Auto Calibration Stop.”
 When the lock is set to ON, the “Auto Calibration Stop” cannot be set. To stop “Auto Calibration,” set the lock to OFF and then the “Auto Calibration Stop.”

6.5 Setting of auto zero calibration

6.5.1 Auto zero calibration

Auto zero calibration is automatically carried out at the time when zero calibration is set.

Components for which a calibration is to be made are determined by setting of auto calibration component in Item 6.2.4.

Before changing the setting of auto zero calibration, set the ON/OFF to OFF.

- (1) Enter the "Setting of Auto Zero Calibration" screen from the user mode, and the display shown at right appears. Operate the $\hat{\circ}$ or the $\check{\circ}$ key until the cursor is aligned with a desired item and press the $\overset{\text{ENT}}{\circ}$ key.
- (2) In the "Setting of Auto Zero Calibration" screen that appears, perform the value entry or the setting. For the value entry or setting change, use the $\hat{\circ}$ or the $\check{\circ}$ key and the \rightrightarrows key to move the cursor to the right.

After setting, press the $\overset{\text{ENT}}{\circ}$ key, and auto zero calibration is carried out by the entered setting value.

Description of setting items

- Start Time : Setting at the first calibration (day of the week, hour, minute)
- Cycle : A period between the start time of one calibration and the next (unit : hour/day)
- Flow Time : The time required for the calibration gas to be replaced in the sampling cell
- ON/OFF : ON/OFF of auto zero calibration

To close "setting of Auto Zero Calibration"

To close the "Setting of Auto Zero Calibration" or cancel this mode midway, press the $\overset{\text{ESC}}{\circ}$ key. A previous screen will return.

Set Auto Zero Cal.	Select setting item
Start Time	SUN 12:00
Cycle	07 day
Flow Time	300 sec.
ON / OFF	OFF
Time : MON 12:34	
Auto Zero Calibration Run	



Set Auto Zero Cal.	Set Start Time
Start Time	SUN 12:00
Cycle	07 day
Flow Time	300 sec.
ON / OFF	OFF
Time : MON 12:34	
Auto Zero Calibration Run	

Press the $\hat{\circ}$ or the $\check{\circ}$ key, and date and time are displayed alternately.




End of Auto Zero Calibration Setting

Auto calibration status contact output is closed during auto zero calibration (NO side), and is open in other cases.

Example

Start time	SUN	12:00
Cycle	12	hour
Flow time	300	sec
ON/OFF	ON	

In case where auto zero calibration is carried out at the above setting.

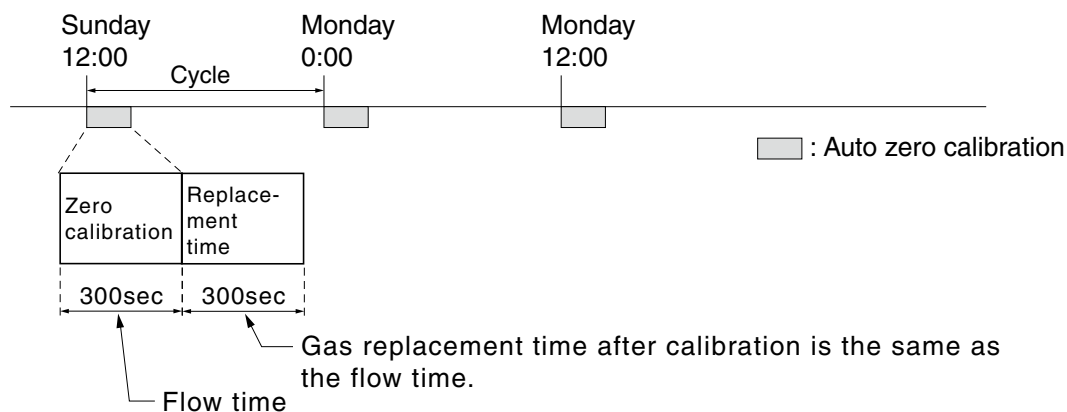

(An example of “Ch1: through Ch5: enable,” as given in Item 6.2.4 “Setting of auto calibration components/range”)

Setting range


Cycle : 1 to 99 hours or 1 to 40 days (initial value 7 days)
 Flow time : 60 to 900 sec (initial value 300 sec)

Caution

- When an auto zero calibration starts, the measurement screen automatically appears.
- Any operation other than “Auto Zero Calibration Stop” (see Item 6.5.2) is not permitted during auto zero calibration. “Auto Zero Calibration Stop” cannot be performed with the key lock set to ON. To cancel auto zero calibration forcibly, set the key lock to OFF and then execute “Auto Zero CalibrationStop”.
- If the auto calibration period and auto zero calibration period have overlapped, the auto calibration is retained, ignoring the auto zero calibration of that period.
- When the hold setting is set to ON, the hold time of auto calibration contact and measurement value output signal is extended after calibration for gas replacement time.

Remote start

Whether the auto zero calibration is set at ON or OFF, an auto zero calibration is available by remote start input.



6.5.2 Forced run/stop of auto zero calibration

Auto zero calibration can be performed just once, or auto zero calibration can be forcibly stopped during calibration.

6.5.2.1 Execution of auto zero calibration (only once)

- (1) In the “Setting of Auto Zero Calibration” screen that appears, point the cursor to “Run” by pressing the $\hat{\bigcirc}$ or the $\bigcirc\checkmark$ key. Press the \bigcirc^{ENT} key.
- (2) “Run” is highlighted, displaying a message to confirm execution of auto zero calibration. Press the \bigcirc^{ENT} key to execute the calibration, and press the \bigcirc^{ESC} key to cancel.

Sel Auto Zero Cal	Auto zero Run ENT : Run / Stop ESC : Cancel
Start Time	SUN 12:00
Cycle	07 day
Flow Time	300 sec.
ON / OFF	OFF
	Time : MON 12:34
Auto Zero Calibration Run	

6.5.2.2 Forced stop of auto zero calibration

This mode is used to cancel the auto zero calibration forcibly.

- (1) In the “Setting of Auto Zero Calibration” screen that appears, point the cursor to “Stop” by pressing the $\hat{\bigcirc}$ or the $\bigcirc\checkmark$ key. Press the \bigcirc^{ENT} key. (“Auto Zero Calibration Stop” appears when the screen is selected while auto zero calibration is performed.)
- (2) “Stop” is highlighted, displaying a message to confirm the stop of auto zero calibration. Press the \bigcirc^{ENT} key to stop the auto zero calibration and the \bigcirc^{ESC} key to cancel (not stopped).

Sel Auto Zero Cal	Auto Zero Stop ENT : Run / Stop ESC : Cancel
Start Time	SUN 12:00
Cycle	07 day
Flow Time	300 sec.
ON/OFF	OFF
	Time : MON 12:34
Auto Zero Calibration Stop	


“Auto Zero Calibration” screen

Example

In case where setting the auto calibration components (see Item 6.2.4) to “Ch1: enable” and “Ch2: enable”

- Zero calibration

A message, “Zero cal.” blinks at Ch1 and Ch2.

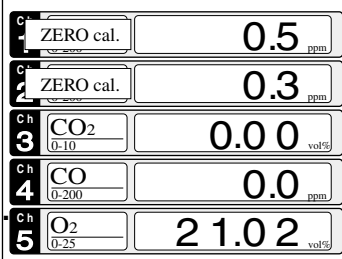

Ch 1	ZERO cal.	0.5 ppm
Ch 2	ZERO cal.	0.3 ppm
Ch 3	CO ₂ 0-10	0.00 vol%
Ch 4	CO 0-200	0.0 ppm
Ch 5	O ₂ 0-25	21.02 vol%

Caution

During auto zero calibration, any key operation is not permitted other than operations such as key lock ON/OFF and “Auto Zero Calibration Stop.”

When the key lock is set at ON, even the “Auto Zero Calibration Stop” cannot be used.

To stop “auto zero calibration” forcedly, set the key lock to OFF and then execute “Auto Zero Calibration Stop.”

6.6 Parameter setting




It allows you to carry out the parameter setting such as time, key lock, etc., as required.


Items to be set are as follows:

Description of setting items




- Current Time : Current year, month, date, day of the week, hour, and minute setting
(The display appears in this order.)
Note) The clock backup time is 2 days. If power is turned on after it is kept off for 2 days or longer, check the time setting again.
- Key Lock : Invalidates any key operation except canceling the key lock.
- Output Hold : Sets whether Calibration Output is held or not, and the holding value setting.
- Response time : Sets the response time of electrical system.
- Average Period : Sets the moving average time.
- Backlight Timer : Sets automatic OFF of the backlight of display unit and the time until backlight out.
- Contrast : Adjusts contrast of the LCD.
- Maintenance mode : Enters passwords to switch to the Maintenance mode.

* For the maintenance mode, see Item 6.7.

- (1) Enter the “Parameter setting” screen from the user mode, and the display shown at right appears. Operate the  or the  key until the cursor is aligned with a desired item and press the  key.

Parameter	Select setting item
 Current Time	12/01/11 WED 13:50
Key Lock	OFF
Output Hold	OFF Current
Response Time	
Average Period	
Backlight Timer	ON 5 min
Contrast	
To Maintenance Mode	0000




- (2) In the “Parameter Setting” screen that appears, perform the value entry or the setting. For the value entry or setting change, use the  or the  key, and the  key move the cursor to the right.

Parameter	Set day of week
Current Time	12/01/11 WED 13:50
Key Lock	OFF
Output Hold	OFF Current
Response Time	
Average Period	
Backlight Timer	ON 5 min
Contrast	
To Maintenance Mode	0000



To close Parameter Setting screen

To close the “Parameter Setting” screen or cancel this mode midway, press the  key. A previous screen will return.

End of Parameter Setting


Setting Range

- Hold setting : 0 to 100% FS
- Response time : 1 to 60 sec. (Initial value: 15 sec)
- Average period : 1 to 59 min or 1 to 4 hours (Initial value: 1 hour)
1 to 59 minutes when the unit is set to minute and 1 to 4 hours when it is set to hour.
- Backlight Timer : 1 to 60 min (Initial value: 5 min)
- Maintenance mode : 0000 to 9999 (Initial value: 0000)


Output Hold

By setting an output hold to ON, an output signal of each channel is held during the manual/auto calibration and for the gas flow time (refer to Item 6.4, Setting of Auto Calibration). Regardless of Hold ON/OFF setting, an output signal can be held via an external input.


a. Manual calibration

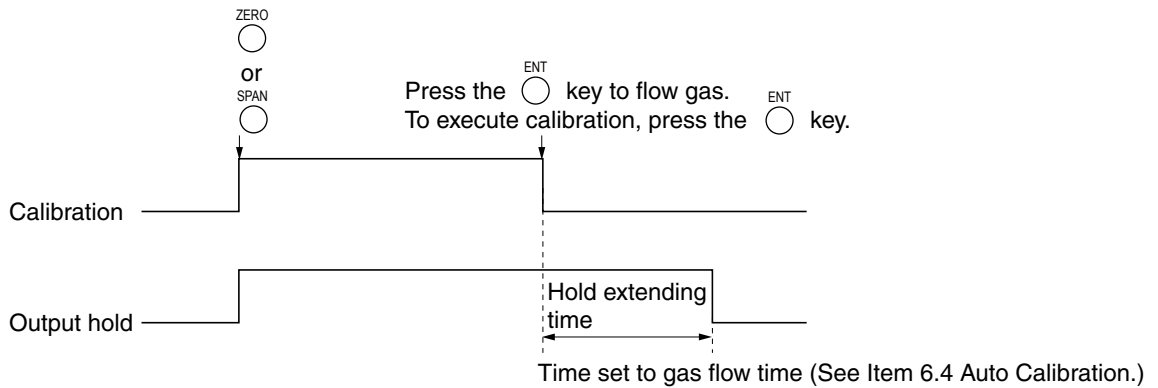

b. Auto calibration

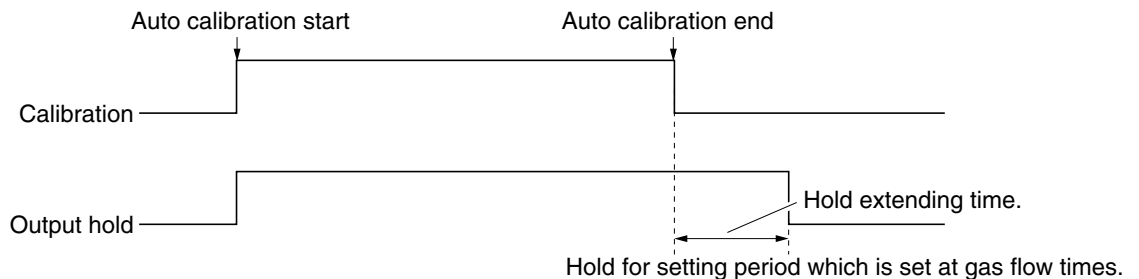

c. Remote hold

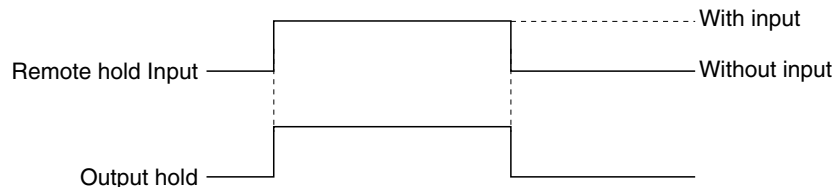

d. Screen display during Holding

The “Hold ON” message blinks on the measuring screen.

Since the screen displays the process of calibration during the manual calibration, “Hold ON” is not displayed even if the output signal is held, but the screen is displayed with the hold extending time.

- e. If calibration is cancelled after the calibration gas is supplied regardless of manual or auto operation, the holding extending time will be performed.
- f. You can select the value for hold from the value immediately before entering output hold, “current,” and arbitrary value, “setting.”

Follow the procedures shown below to set.

- (1) In the “Parameter setting” screen that appears, select “Output Hold”.
 “ON” or “OFF” is highlighted by pressing the $\overset{\text{ENT}}{\bigcirc}$ key. Press the $\overset{\wedge}{\bigcirc}$ or the $\overset{\vee}{\bigcirc}$ key to select ON/OFF. Press the $\overset{\text{ENT}}{\bigcirc}$ key to return to (1).

Parameter	Select Hold ON or OFF
Current Time	12/01/11 WED 13:50
Key Lock	OFF
Output Hold	ON Current
Response Time	
Average Period	
Backlight Timer	ON 5 min
Contrast	
To Maintenance Mode	0000



- (2) Where ON/OFF is highlighted, press the $\overset{\wedge}{\bigcirc}$ key. “Current” or “Setting” is highlighted. Select “Current” or “Setting” by pressing the $\overset{\wedge}{\bigcirc}$ or the $\overset{\vee}{\bigcirc}$ key.

Parameter	Select Hold setting
Current Time	12/01/11 WED 13:50
Key Lock	OFF
Output Hold	ON Setting
Response Time	
Average Period	
Backlight Timer	ON 5 min
Contrast	
To Maintenance Mode	0000







- (3) Press the $\overset{\text{ENT}}{\bigcirc}$ key while “Current” is selected to return to (1). Press the $\overset{\text{ENT}}{\bigcirc}$ key while “Setting” is selected to go to the parameter hold screen.
 “Current”: Holds the value immediately before the hold.
 “Setting”: Holds the value arbitrarily set.

- (4) On the parameter hold screen that appears, move the cursor next to the Ch (component) you want to hold by pressing the $\overset{\wedge}{\bigcirc}$ or the $\overset{\vee}{\bigcirc}$ key, and then press the $\overset{\text{ENT}}{\bigcirc}$ key.

Parameter Hold	Select Ch No.
Ch1	NOx 010 %FS
Ch2	SO ₂ 020 %FS
Ch3	CO ₂ 015 %FS
Ch4	CO 012 %FS
Ch5	O ₂ 022 %FS




(5) The value is highlighted, indicating that the value can be changed. Change the value by pressing the  or the  key, and then move the cursor to the right digit by pressing the  key.

(6) After the value is changed, press the  key.

Meaning of setting

The setting is expressed as 1/1 full scale range for both respective ranges.

When 0 to 1000 ppm is selected as the range, and 10% FS is selected as hold setting, the output equivalent to 100 ppm is held irrespective of the measurement value at that time.

(7) Press the  key to return to the parameter setting screen.

↓ ENT

Parameter Hold	Set Hold value 0 to 100%FS		
Ch1	NOx	010	%FS
Ch2	SO ₂	020	%FS
Ch3	CO ₂	015	%FS
Ch4	CO	012	%FS
Ch5	O ₂	022	%FS

↓ ENT

End of Hold Setting

↓ ESC

Parameter Setting screen

Description of setting

- Instantaneous measurement value that is displayed cannot be held. (Output only can be held.) Optional modbus communications “Measurement concentration” register values are held.
- If set value is selected for hold, instantaneous O₂ correction value is calculated and held based on the set value.
- Range identification contact output cannot be switched even if the range is switched during the hold.


Response time

The response time of the electrical system can be changed.

Setting is available by components.

Note) It does not provide exact seconds for the setting time, but it gives a guide of the setting time.

The setting value can be modified as requested by the customer.

Parameter Response Time	Select Ch No.		
 Ch1	NOx	10	sec.
Ch2	SO ₂	20	sec.
Ch3	CO ₂	15	sec.
Ch4	CO	12	sec.
Ch5	O ₂	22	sec.

Average period

It allows you to set an averaging period of the average values of O₂ correction and O₂ average.


It enables you to set an average time of 1 to 59 minutes (1-minute step) or 1 to 4 hours (1-hour step).

Changing the setting also resets the averaging of O₂ correction and O₂ average value. (Pressing the ENT key resets averaging only for components whose setting was changed.)

Parameter	Select Ch No.	
Average Period		
Ch9	NO _x	01 hour
Ch10	SO ₂	01 hour
Ch11	CO ₂	01 hour
Ch12	O ₂	01 hour
Reset Av. Output	Reset	

Average value reset

This mode is used to clear all average values O₂ correction average and O₂ average, and restarts averaging. All average values are reset simultaneously. The indication value and output value is 0 ppm, vol% or so at the time of the reset input (based on average period settings).




So long as with input, resetting lasts.

At the edge of changing from "with input" to "without input," the average action restarts.

Example of average action

In case the average period was set to 1 hour.

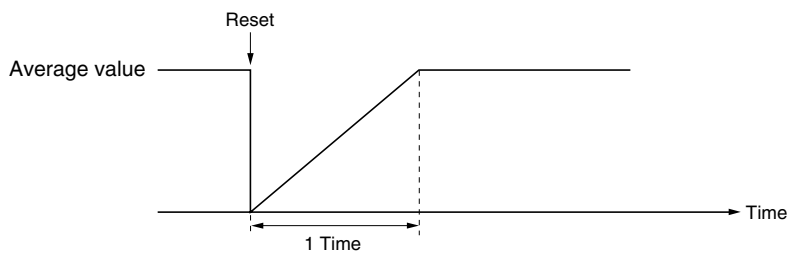





- Sampling occurs every 30 seconds.
- Every 30 seconds, the average for last 1 hour (time setting) is output.
- At the instant of resetting, zero is assumed for all past values. It means that the average value will not be correct for 1 hour after resetting.

Backlight Timer

Automatic OFF setting of the backlight of the LCD unit can be made.




When the specified time elapses during measurement screen display, the backlight is automatically turned off. Press any key to reset backlight OFF.


Only when ON is selected, the time until auto OFF is displayed. Press the  key in this state, and the time setting can be changed by pressing the  or the  key. Press the  key to confirm the selection.

If OFF is selected, the backlight is not turned off.


Parameter	Select ON or OFF
Current Time	12/01/11 WED 13:50
Key Lock	OFF
Output Hold	ON Previous value
Response Time	
Average Period	
Backlight Timer	<input checked="" type="checkbox"/> ON 5 min
Contrast	
To Maintenance Mode	0000

Contrast

Contrast of the LCD can be adjusted. The contrast changes by pressing the  or the  key. Adjust to the best contrast and save it by the  key.

Parameter	Select ON or OFF
Current Time	12/01/11 WED 13:50
Key Lock	OFF
Output Hold	ON Previous value
Response Time	
Average Period	
Backlight Timer	ON 5 min
Contrast	<input type="checkbox"/> 
To Maintenance Mode	0000

Maintenance mode

Enter the password and then press the  key to enter the maintenance mode. The password can be set by the password setting in maintenance mode. Default password setting at the time of delivery from the factory is "0000." You can enter the maintenance mode with this value before the password is changed.

6.7 Maintenance mode

This mode is used to check sensor input values, display of error log or setting of passwords, etc. First, enter a password and then use it from the next operation. This mode is displayed by selecting the Maintenance Mode from “Item 6.6 Parameter Setting.”

- (1) Select the Maintenance Mode from the Parameter Setting screen to display the Password Setting screen.
- (2) Enter the password, and the Maintenance Mode item selection screen will be displayed. Point the cursor to the item you want to set by pressing the $\hat{\circ}$ or the \circ key and press the ENT key.
- (3) Next, each Maintenance screen is displayed.

Note) “To Factory Mode” is used for our service engineers only.

- (4) Press the ESC key to return to the Maintenance Mode item selection screen from each screen.

Maintenance Mode	Select operating item
<input checked="" type="checkbox"/> 1. Sensor Input Value 2. Error Log 3. Cal. Log 4. Output Adj. 5. Other Parameter 6. To Factory Mode	



Each “Maintenance” screen

• Sensor Input Value screen

Description of Sensor Input Value screen

- Input 1 to 4 : NDIR sensor digital value
- Input 5 : O₂ sensor digital value

Maintenance Sensor Input	
Input 1	52107
Input 2	102129
Input 3	82134
Input 4	99257
Input 5	12530
<input checked="" type="checkbox"/> GAS Sample	

• Error Log screen

Description of Error Log screen


Error history. 14 newest errors are logged. For error number, date and time (year, month, day, period) of occurrence, channel and other details of error, refer to section 8.1 Error message. Select Clear Error Log and press the ENT key, and the error log is cleared completely.

Maintenance Mode Error Log	ENT Clear Error Log ESC Back					
Error No.	Y	M	D	H	M	Ch
No. 4	12	2	11	18	10	5
No. 1	12	1	10	12	2	1
No. 6	11	12	1	10	10	2
No. 3	11	12	1	10	10	2
No. 5	11	12	1	0	0	2
No. 9	11	12	1	0	0	2
Next page						Page 1
<input checked="" type="checkbox"/> Clear Error Log						

• **Calibration Log screen**

Description of Calibration Log screen

Past calibration history is displayed.
 Sensor input value, concentration value, and the date when zero/span calibration is performed are logged. The 10 newest calibration data are logged by each component.

Move the cursor to Clear Calibration Log and press the  key, and the calibration log is cleared completely.

Z1 : Zero calibration (Z) of Range 1

S1 : Span calibration (S) of Range 1

Cnt : Value of measuring detector at the time of calibration

Con : Concentration value displayed before calibration

Maintenance Cal. Log	Select Ch No.
<input checked="" type="checkbox"/> Ch1	NOx
Ch2	SO ₂
Ch3	CO ₂
Ch4	CO
Ch5	O ₂
Clear Error Log	










Maintenance Cal. Log Ch1 NOx			
R	Cnt	Con	Y D H M
Z1	48523	-0.2	12111810
S1	44176	189.5	12111810


• **Output adjustment screen**

Description of output adjustment screen

Analog output adjustment screen.
Connect the digital multi meter to the output terminal corresponding to the number of OUT to be adjusted, and adjust the value so that 4mA or 0V is output at zero and 20mA or 1V is output at span.

Move the cursor using the , , or the  key to the output (OUT No. and zero/span) to be adjusted, and then press the  key.

The selected value is highlighted. Adjust the value, while watching the output, by pressing the  or the  key. Press the  key to select the next digit.

On completion of the adjustment, press the  key.

Maintenance Mode Output Adj.			Adjust OUTPUT ZERO and SPAN		
OUT	Zero	Span	OUT	Zero	Span
1	00600	03700	7	00600	03700
2	00600	03700	8	00600	03700
3	00600	03700	9	00600	03700
4	00600	03700	10	00600	03700
5	00600	03700	11	00600	03700
6	00600	03700	12	00600	03700



Maintenance Mode Output Adj.			Zero / Span adjustment		
OUT	Zero	Span	OUT	Zero	Span
1	00600	03700	7	00600	03700
2	00600	03700	8	00600	03700
3	00600	03700	9	00600	03700
4	00600	03700	10	00600	03700
5	00600	03700	11	00600	03700
6	00600	03700	12	00600	03700

Caution

Be sure to perform zero / span calibration when the range setting is changed. Otherwise, the measurement value may not be output properly.

• **Other parameter**

Description of each setting screen

Password Set : Set the password used to move from the parameter setting screen to the maintenance mode. Arbitrary 4-digit number can be selected.

O2 ref. Value : Set the oxygen concentration reference value at the time of oxygen correction calculation. Settable in the range from 00 to 19%.



Limit : Set the oxygen concentration limit at the time of oxygen correction calculation. Settable in the range from 01 to 20%.

* Refer to the O2 correction concentration value in “5.3 Outline of display screen” for oxygen correction calculation procedure.




Station No. : Set the station No. for MODBUS communication. Settable in the range from 00 to 32.

Range setting : Moves to the screen on which measuring range is changed.

Maintenance Mode setting	Select an item
Password Set 465 O2 ref. Value 12% O2 limit 20% O2 Station No. 01 Range setting	

Press the  or the  key to move the cursor to the item whose setting is to be changed.




The values for password, oxygen correction, limit, and station No. are highlighted.




Press the  or the  key to change the value to desired one, and then press the  key.




Note: Pay attention not to forget the password. Otherwise you cannot enter the maintenance mode.

<How to set/change the range>

The measuring range can be arbitrarily selected in the minimum and the maximum range specified at the time of purchase. The range to be used can be selected 1 or 2.

- (1) Move the cursor to the item to be set by pressing the  or the  key, and then press the  key.






- (2) Move the cursor to the Ch (component) whose setting is to be changed by pressing the  or the  key, and then press the  key.


- (3) Move the cursor to the item whose setting is to be changed by pressing the  or the  key, and then press the  key.

Settable range

The value for range 1 and range 2 must fall within the range from the MIN and the MAX range (including the MIN and the MAX range), and at the same time range 1 must be smaller than range 2.

The number of ranges is 1 or 2.

- (4) Press the  or the  key to change the value. Press the  key to select the next digit. The unit cannot be changed. In a state where the decimal point is highlighted, press the  or the  key, and the decimal point position can be changed.

- (5) When necessary change is made, press the  key.

Maintenance Mode setting	Select an item
Password set 2465 O2 ref. Value 12% O2 limit 20% O2 Station No. 01 <input checked="" type="checkbox"/> Range setting	



Maintenance Mode Range set	Select Ch No.
<input checked="" type="checkbox"/> Ch1 NOx Ch2 SO2 Ch3 CO2 Ch4 CO Ch5 O2	



Maintenance Mode Range Set Ch1 NOx	Select range or range num.
MIN range 100.0 ppm Range 1 500.0 ppm Range 2 1000. ppm <input checked="" type="checkbox"/> MAX range 2000. ppm Range num 2	







Maintenance Mode Range Set Ch1 NOx	Set range
MIN range 100.0 ppm Range 1 500.0 ppm Range 2 1000. ppm MAX range 2000. ppm Range num. 2	

6.8 Calibration

6.8.1 Zero calibration


It is used for zero point adjustment. Proper zero gas, suitable for the application, should be used. Refer to section 3.4 “Sampling”.

- (1) Press the  key on the Measurement screen to display the Manual Zero Calibration screen.

- (2) Select the Ch (component) to be calibrated by pressing the  or the  key. After selection, press the  key, and zero gas will be supplied.


Note

For the Ch (components) in which “both” is set in the calibration range setting (see section 6.2.3) - zero calibration is carried out on both ranges.






- (3) Wait until the indication is stabilized with the zero gas supplied. After the indication has been stabilized, press the  key. Zero calibration in range selected by the cursor is carried out.

Note: For the Ch (component) for which “AR” is selected in “6.1.1 Setting range switch mode,” the cursor automatically moves to the next range selected in “Setting of auto calibration component/range” (6.2.4), and calibration is carried out within that range.






To close "Zero Calibration"

To close the “Zero Calibration” or cancel this mode midway, press the  key. A previous screen will return.








ZERO Cal.		Select Ch No. with UP / DOWN and ENT Back with ESC	
 Ch1 NO _x	Range1 0-200.0ppm Range2 0-2000 ppm	0.0	
 Ch2 SO ₂	Range1 0-200.0ppm Range2 0-2000 ppm	0.0	
 Ch3 CO ₂	Range1 0-10.00vol% Range2 0-20.00vol%	0.00	
 Ch4 CO	Range1 0-200.0ppm Range2 0-1000 ppm	0.0	
 Ch5 O ₂	Range1 0-10.00vol% Range2 0-25.00vol%	20.09	



ZERO Cal.		Select Ch No. with UP / DOWN and ENT Back with ESC	
 Ch1 NO _x	Range1 0-200.0ppm Range2 0-2000 ppm	0.0	
 Ch2 SO ₂	Range1 0-200.0ppm Range2 0-2000 ppm	0.0	
 Ch3 CO ₂	Range1 0-10.00vol% Range2 0-20.00vol%	0.00	
 Ch4 CO	Range1 0-200.0ppm Range2 0-1000 ppm	0.0	
 Ch5 O ₂	Range1 0-10.00vol% Range2 0-25.00vol%	20.09	



ZERO Cal.		ENT : Go on calibration of selected Ch. ESC : Not calibration	
Ch1 NO _x	Range1 0-200.0ppm Range2 0-2000 ppm		0.0
Ch2 SO ₂	Range1 0-200.0ppm Range2 0-2000 ppm		0.9
Ch3 CO ₂	Range1 0-10.00vol% Range2 0-20.00vol%		0.34
Ch4 CO	Range1 0-200.0ppm Range2 0-1000 ppm		1.1
Ch5 O ₂	Range1 0-10.00vol% Range2 0-25.00vol%		20.09





To Measurement screen after executing Manual Zero Calibration

6.8.2 Span calibration




It is used to perform a span point adjustment. Supply calibration gas with concentration set to the span value to perform the span calibration. For the span calibration gas for the NO_x, SO₂, CO₂, CO and CH₄ measurement, use the standard gas with a concentration of 90 to 100% of its measuring range value.

For the span calibration gas for the O₂ measurement, use the standard gas with a concentration of 90 to 100% of its measuring range value when measuring with the built-in O₂ sensor, and use the standard gas of 1 to 2 vol% when measuring with an external zirconia O₂ sensor.

- (1) Press the  key on the Measurement screen to display the Manual Span Calibration screen.




↓ 

SPAN Cal.		Select Ch No. with UP / DOWN and ENT Back with ESC	
<input checked="" type="checkbox"/> Ch1 NO _x	▶ Range1 0-200.0ppm Range2 0-2000 ppm	0.0	
Ch2 SO ₂	▶ Range1 0-200.0ppm Range2 0-2000 ppm	0.0	
Ch3 CO ₂	▶ Range1 0-10.00vol% Range2 0-20.00vol%	0.00	
Ch4 CO	▶ Range1 0-200.0ppm Range2 0-1000 ppm	0.0	
Ch5 O ₂	▶ Range1 0-10.00vol% Range2 0-25.00vol%	20.09	


- (2) Select Ch (component) to be calibrated by pressing the  or the  key and press the  key. The calibration gas is supplied.

Note

For the Ch (components) in which “both” is set in the calibration range setting (Refer to 6.2.3) - span calibration is completed for both ranges.


↓   


SPAN Cal.		Select Ch No. with UP / DOWN and ENT Back with ESC	
Ch1 NO _x	▶ Range1 0-200.0ppm Range2 0-2000 ppm	0.0	
<input checked="" type="checkbox"/> Ch2 SO ₂	▶ Range1 0-200.0ppm Range2 0-2000 ppm	0.0	
Ch3 CO ₂	▶ Range1 0-10.00vol% Range2 0-20.00vol%	0.00	
Ch4 CO	▶ Range1 0-200.0ppm Range2 0-1000 ppm	0.0	
Ch5 O ₂	▶ Range1 0-10.00vol% Range2 0-25.00vol%	20.09	

- (3) Wait until the indication is stable. After the indication has been stabilized, press the  key. Span calibration of Range selected by the cursor is performed.


Note: For the Ch (component) for which “AR” is selected in “6.1.1 Setting range switch mode,” the cursor automatically moves to the range selected in “Setting of auto calibration component/range” (6.2.4), and calibration is carried out within that range.

To close "Span Calibration"

To close the “Span Calibration” or cancel this mode midway, press the  key. A previous screen will return.

↓ 

SPAN Cal.		ENT : Go on calibration of selected Ch. ESC : Not calibration	
Ch1 NO _x	▶ Range1 0-200.0ppm Range2 0-2000 ppm	<input checked="" type="checkbox"/>	0.0
Ch2 SO ₂	▶ Range1 0-200.0ppm Range2 0-2000 ppm	<input checked="" type="checkbox"/>	0.9
Ch3 CO ₂	▶ Range1 0-10.00vol% Range2 0-20.00vol%	<input checked="" type="checkbox"/>	0.34
Ch4 CO	▶ Range1 0-200.0ppm Range2 0-1000 ppm	<input checked="" type="checkbox"/>	1.1
Ch5 O ₂	▶ Range1 0-10.00vol% Range2 0-25.00vol%	<input checked="" type="checkbox"/>	20.09

↓ 

**To Measurement screen after
executing Manual Span Calibration**

7. MAINTENANCE

7.1 Daily check

(1) Zero calibration and span calibration

- (1) Perform zero calibration. For the calibration procedures, refer to “Item 6.8.1 Zero calibration.”
- (2) Then, perform span calibration. For the calibration procedures, refer to “Item 6.8.2 Span calibration.”
- (3) Zero/span calibration should be carried out once a week, or as required.

(2) Flow rate check

- (1) Sampling gas flow and purge gas flow are as follows:
 - Sampling gas flow : 0.5L/min ± 0.2L/min
 - Purge gas flow : About 1L/min
- (2) Check and maintenance should be carried out every day, as required.

7.2 Daily check and maintenance procedures

Table 7.1 Maintenance and check table

	Parts to be checked	Phenomena		Remedy
Daily check	Indication value	Indication values are too low. Indication values are too high.	(1) Dust contamination in sampling cell.	(1) Clean the sampling cell. In addition, check sampling devices, especially gas filter.
			(2) Air is absorbed midway in the sampling piping.	(2) Find out cause of leak and repair.
	Sampling gas flow rate (Purge gas flow is included when purging).	Deviation from regulated flowing quantity (0.3L/min to 0.7L/min).	_____	Adjust by needle valve of flow rater.
Weekly check	Zero point of gas analyzer	Deviation from zero point.	_____	Zero adjustment
	Span point of gas analyzer	Deviation from span point.	_____	Span adjustment
Yearly check	Gas analyzer	Regardless of any phenomena	_____	Overhaul or service in accordance with proper service plan.

7.3 Long term maintenance

Create a long-term maintenance component procurement plan based on the “Gas analyzer annual inspection plan” indicated below.

Gas analyzer annual inspection plan

The recommended replacement period of components varies depending on the installation conditions.

- 1) The recommended replacement period is a recommended standard criterion, and varies depending on the environment of the field, conditions of measuring gas and other factors.
- 2) The recommended replacement period is not the warranty period. It is provided as a preventative maintenance program baseline schedule.

- Installation conditions

- 1) Ambient temperature: -5°C to $+40^{\circ}\text{C}$
- 2) Humidity: 90%RH or less
- 3) Corrosive gases: None
- 4) No radiated heat, direct sunlight or rain/wind
- 5) Dust: No more than local environmental standards permit
- 6) Vibration: None

- Sample gas conditions

- 1) Temperature: $+60^{\circ}\text{C}$ to $+800^{\circ}\text{C}$
- 2) Pressure: -3 to $+3$ kPa
- 3) Moisture content: 30% or less
- 4) Dust: 0.1 g/Nm³ or less
- 5) Components: 0 to 500 ppm NO_x, 0 to 500 ppm SO₂, 0 to 2000 ppm CO, 5% to 15% CO₂, 0% to 21% O₂, 0 to 100 ppm HCl, residue N₂

Please consult with us regarding gas analyzer maintenance service requirements.

We may assist in providing access and support via a qualified service network.

Infrared gas analyzer annual inspection plan sheet

No.	Component name	Q'ty	Recommended replacement period (year)	Year										
				Delivered year	1st year	2nd year	3rd year	4th year	5th year	6th year	7th year	8th year	9th year	10th year
1	Fuel cell O2 analyzer (build-in)	1	2			○		○		○		○		○
2	Infrared light source	1 to 2	8									○		
3	Sector motor	1 to 2	5						○					○
4	O-ring for sampling cell	1 to 5	2			○		○		○		○		○
5	Detector	1 to 4	8									○		
6	LCD	1	3				○			○				○
7	Main power supply unit	1	5						○					○
8	Main power PCB	1	5						○					○
9	Light source power PCB	1	5						○					○

7.4 Cleaning of sampling cell

Entry of dust or water drops in the sampling cell contaminates the interior of the cell, thus resulting in a drift. Clean the inside if dirty. Then, check the sampling device, especially the filter, to prevent the cell from being contaminated by dust or mist.

Caution

Maintenance actions should only be accomplished by properly trained and qualified personnel. Notwithstanding these maintenance steps, local facility and organizational safety program requirements must be followed.


7.4.1 Disassembly and assembly of sampling cell

There are two kinds of sampling cells, block cells (cell length: 4 mm, 8 mm, 16 mm, 32 mm) and pipe cells (Cell length: 64 mm, 125 mm, 200 mm and 250 mm).

2-component analyzer may incorporate both sampling cells in one optical unit. In such a case, detach the pipe cell and then block cell (See Fig. 7-3).

a. How to remove pipe cell (See Fig. 7-1)

- 1) Stop measured gas. If it is harmful, purge the pipe cell thoroughly with zero gas.
- 2) Turn OFF the power switch and disconnect the Power supply cord.
- 3) Remove the cover (with loose six screws on the cover).
- 4) Remove the tube connected to the pipe cell.
- 5) Loosen and remove a screw (No. 7) from the cell retainer (No. 11) fastening the pipe cell (both ends).
- 6) Remove the cell from the measuring unit and unscrew the infrared transmission window (No. 14) at both ends in the right direction.
- 7) For assembly, reverse the disassembly procedure.

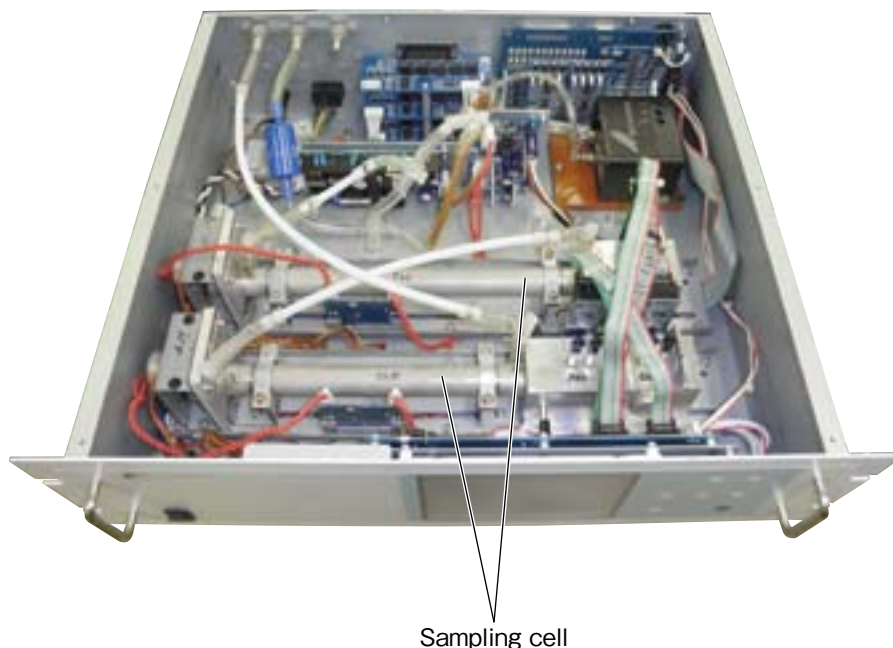

No.	Name
1	Screw (for fixing the light source unit)
2	Screw (for fixing the detector)
3	Screw (for fixing the gas filter)
4	Base plate
5	Light source unit
6	Screw (for fixing the support)
7	Screw (for fixing the cell retainer)
8	Gas filter
9	Filter
10	Support
11	Cell retainer
12	Pipe cell
13	O-ring
14	Infrared transmission window
15	Detector
16	Light source power board

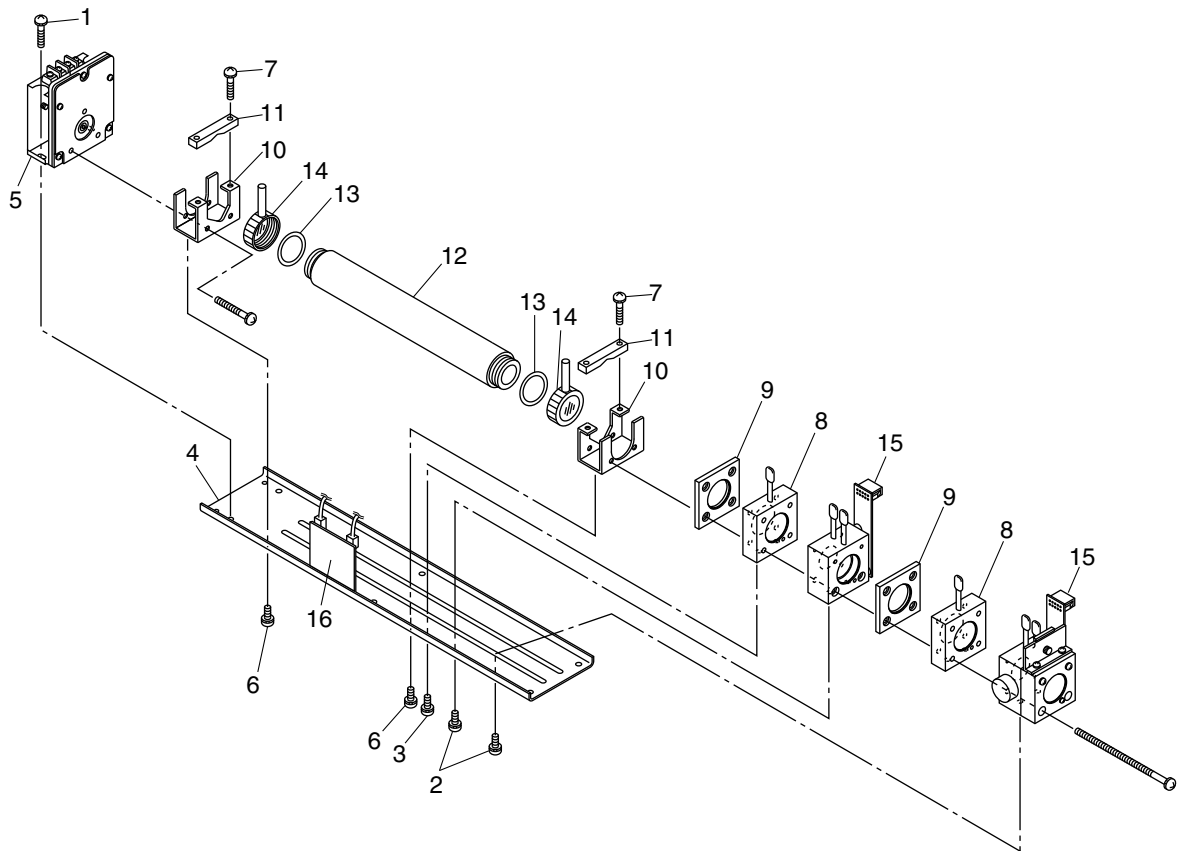


Fig. 7-1 Configuration of measuring unit (pipe cell)

b. How to remove block cell (See Fig. 7-2)

- 1) For step 1) to 4), see 7.4.1.a, How to remove pipe cell.
- 5) Disconnect and remove detector output cables from detector output circuit board (No.12). Applying identification mark on top of removed cable connector will ensure proper pin assignment later.
- 6) Unscrew the two screws (No. 10) that hold the detector to the light source unit to remove the detector from the measuring unit. The block cell can be removed together with the detector.
- 7) To remove the block cell, unscrew the two screws (No. 6) holding the block cell to the detector. The infrared transmission window (No. 8) is just sandwiched (not fixed) between the detector and block cell. Keep the detector facing up, when removing this window.
- 8) For assembly, reverse the disassembly procedures.

Note) The O-ring (No. 9) is placed between the window holder and block cell. Take care about the O-ring position. With 2-component analyzer, install 2-component detector last. Take care so that no space is left between the 1-component and 2-component detectors. When inserting the detector output cable connector into the PCB board, be careful to attach the connector with proper pin assignment (top/bottom).

No.	Name
1	Screw (for fixing the light source unit)
2	Filter
3	Screw (for fixing the detector)
4	Base plate
5	Light source unit
6	Screw (for fixing the block cell)
7	Block cell
8	Infrared transmission window (window holder)
9	O-ring
10	Screw (for fixing the measuring unit)
11	Gas filter
12	Detector
13	Light source power board


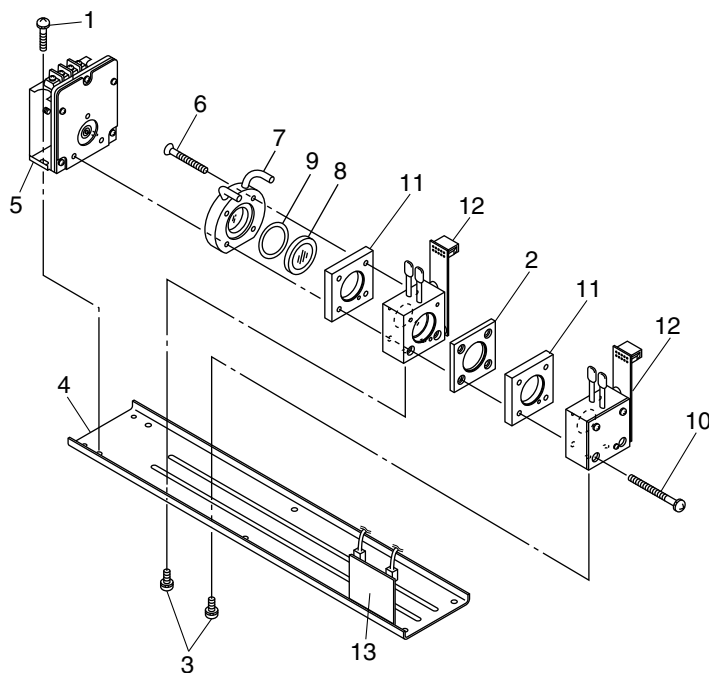


Fig. 7-2 Configuration of measuring unit (block cell)

c. How to remove measuring unit (See Fig. 7-3)

- 1) For steps 1) to 4), see 7.4.1.a, How to remove pipe cell.
- 5) Disconnect and remove detector output cables from detector output circuit board (No.12). Applying identification mark on top of removed cable connector will ensure proper pin assignment later.
- 6) Disconnect wiring to the 2-pin terminals of the infrared ray light source assembly and chopper motor pin connector from the PCB (No.17).
- 7) Detach the six screws (No. 16) fastening the base plate (No. 3) to remove the measuring unit.
- 8) For assembly, reverse the disassembly procedures.

Note) Special care should be taken when assembling or disassembling the measuring cell to avoid the application of force to the detector pipe or light source unit pipe. If the pipe is deformed or damaged by excessive force, there is a danger of gas leak, thus resulting in misoperation.

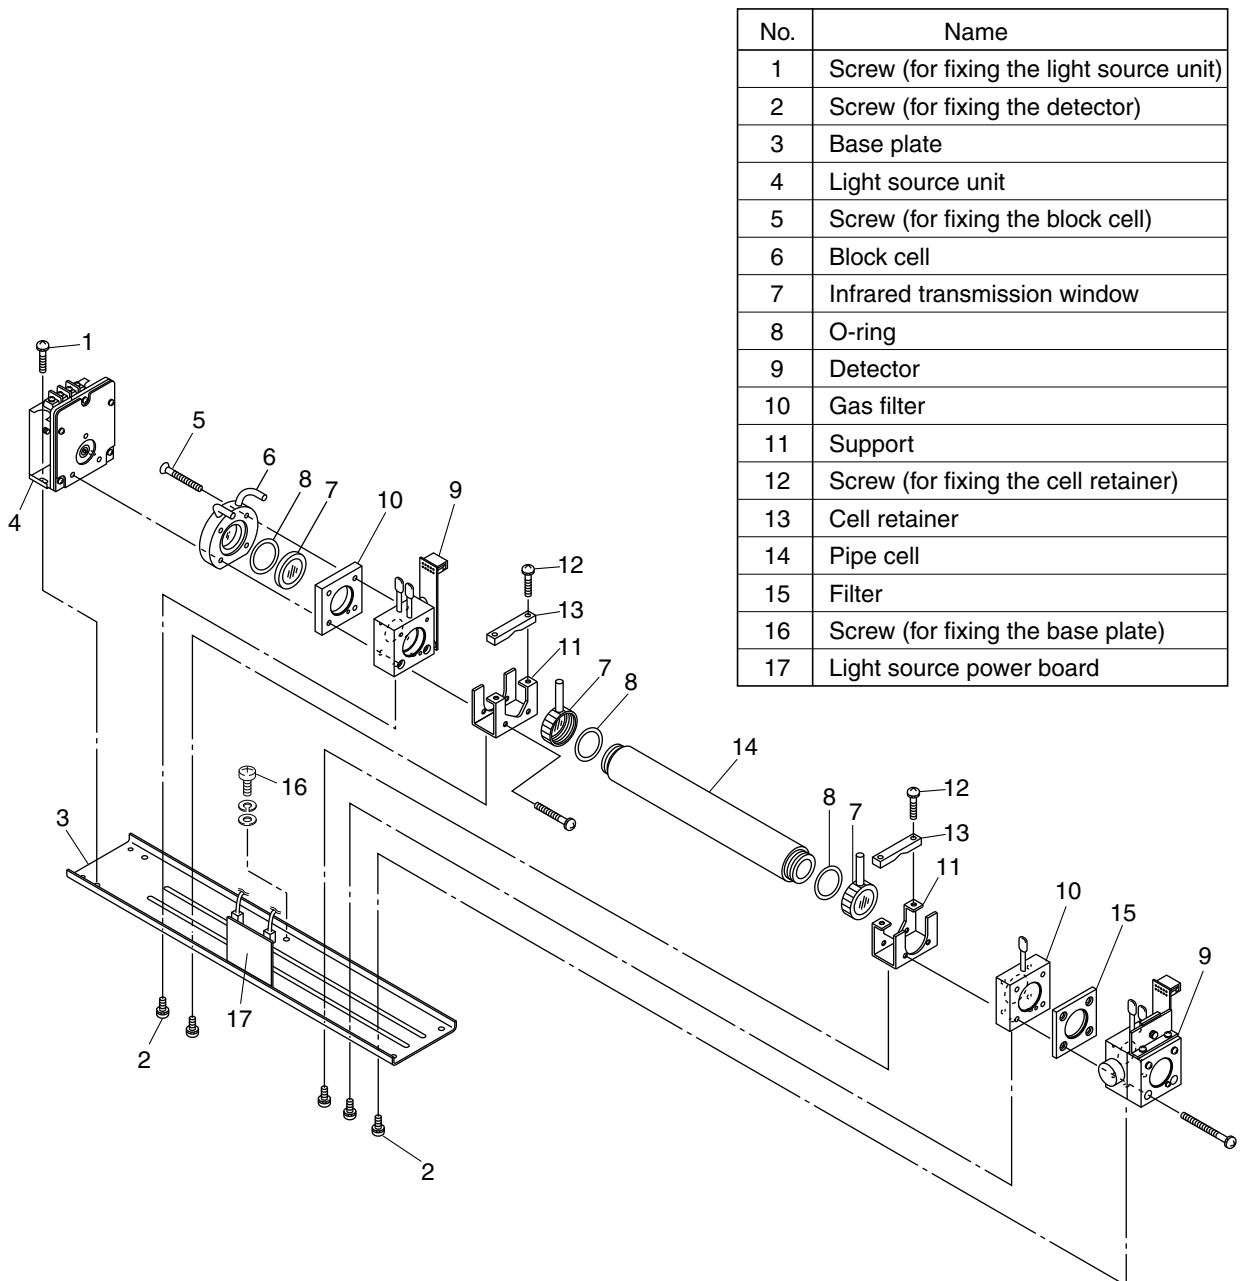

No.	Name
1	Screw (for fixing the light source unit)
2	Screw (for fixing the detector)
3	Base plate
4	Light source unit
5	Screw (for fixing the block cell)
6	Block cell
7	Infrared transmission window
8	O-ring
9	Detector
10	Gas filter
11	Support
12	Screw (for fixing the cell retainer)
13	Cell retainer
14	Pipe cell
15	Filter
16	Screw (for fixing the base plate)
17	Light source power board

Fig. 7-3 Configuration of measuring unit (2-component analyzer: block cell + pipe cell)


7.4.2 How to clean sampling cell

- 1) To clean the sampling cell inside or infrared ray transmission window, first clear large dirt of it with a soft brush and then wipe lightly with soft cloth.
Do not use abrasive or paper cloth.

Note) Handle the fragile window with care. Use care not to rub off the dirt from the window roughly.

- 2) If the window or the sampling cell interior is very dirty, use a soft line-free cloth moistened with absolute alcohol.
- 3) If the window is corroded, rub off the scale from the window lightly with a soft cloth to which chrome oxide powder is applied. If it is excessively corroded, it should be replaced with new one.
- 4) When the sampling cell or window cleaning is completed, assemble according to the sampling cell disassembly and assembly procedures. Assemble the pipe carefully. If it becomes bent or damaged, replace it with a new part.
- 5) Do not wash the sample cell components with water.

7.5 Replacement of fuse

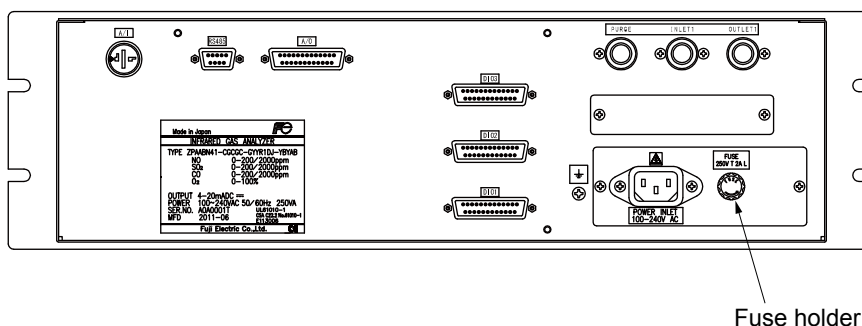

Rear view

Note) Prior to the following work, be sure to repair blown down fuse (short, etc), if any.

- (1) Turn "OFF" the main power supply switch to the analyzer.
- (2) Turn the fuse holder cap (shown in the figure above) counterclockwise and pull it out, and the cap will be removed. Remove a fuse out of the holder. Replace it with a new one. (250VAC/2A, Time-lag type).
- (3) Reinstall the fuse holder cap, turn ON the power supply switch. The work will be completed if the analyzer starts up normally.

8. ERROR MESSAGE

If errors occur, the following contents are displayed.

Error display	Error contents	Probable causes
Error No.1	Light source/motor rotation is faulty.	<ul style="list-style-type: none"> • Infrared light source is faulty. • Sector motor is not properly run or is stopped. • Amplifier circuit is faulty.
Error No.2	Detector failure	<ul style="list-style-type: none"> • Detector voltage circuit is faulty. • Detection element is broken or faulty. • Amplifier circuit is faulty.
Error No.3	A/D error	<ul style="list-style-type: none"> • A/D conversion circuit is failure.
Error No.4	Zero calibration is not within.	<ul style="list-style-type: none"> • Zero gas is not supplied. • Zero error due to dirty cell. • Detector is faulty.
Error No.5	Amount of zero calibration (indication value) is over 50% of full scale.	
Error No.6	Span calibration is not within the allowable range.	<ul style="list-style-type: none"> • Span gas is not supplied. • Calibrated concentration setting does not match cylinder concentration. • Zero calibration is not performed normally. • Span error due to dirty cell. • Detector sensitivity has deteriorated.
Error No.7	Amount of span calibration (difference between indication value and calibrated concentration) is over 50% of full scale.	
Error No.8	Measured values fluctuate too much during zero and span calibration.	<ul style="list-style-type: none"> • Calibration gas is not supplied. • Time for flowing calibration gas is short.
Error No.9	Calibration is abnormal during auto calibration.	<ul style="list-style-type: none"> • Error corresponding to No. 4 to No. 8 occurred during auto calibration.
Error No.10	Output cable connection is improper.	<ul style="list-style-type: none"> • DIO circuit is failure. • Internal wiring to the DIO circuit is broken.

When errors No. 1 to No. 3 and No. 10 occur, analyzing block error contact output is closed.

When errors No. 4 to No. 9 occurs, calibration error contact output is closed.

<Troubleshooting at the occurrence of error>

When error No. 1 occurs, remove the top cover of the analyzer and check the LED on printed circuit board for light source. If LED light is turned off, this has been caused by disconnection of the light source.

When errors No. 1 to No. 3 and No. 10 occurs, the analyzer is faulty. Contact your dealer or our sales office.

When errors No. 4 to No. 8 occurs, the calibration procedure may be incorrect.

Check the following items, and if error still occurs, contact us as shown above.

- (1) Is the calibration gas supplied in the analyzer?
- (2) Does the calibration operation match the supplied gas? (For example, zero calibration is performed while flowing the span gas.)
- (3) Does the supplied gas concentration match the gas concentration set at the calibration concentration setting?


Also, when errors No. 5 and No. 7 occurs, you can perform calibration forcibly, following the procedure shown below. Use it as fault recovery when calibration fails and calibration contents are missed.



Screen display and operation at the occurrence of error

In case of Error No. 1 to No. 4, No. 6, No. 8 to No. 10

Measurement screen

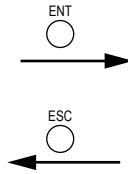
0	Error No.9	00.8	ppm
Ch 2	SO ₂ (0-200)	13.6	ppm
Ch 3	CO ₂ (0-10)	0.000	vol%
Ch 4	CO (0-200)	0.0	ppm
Ch 5	O ₂ (0-25)	21.00	vol%



- Press the  key to delete the error display.
- If the  key is pressed without removing the cause of an error, the error will be displayed again.


Display of error contents

Error No. 4	Auto Cal. error ENT:Stop cal. MEAS.
SPAN cal. error Cause	
<ul style="list-style-type: none"> • Calibration gas is not flowing • Gas flow rate is not stable • Setting value is different from that of span gas • Flow rate is too low 	

- When more than one error occurs, pressing the  key moves to another error display.


In case of Error No. 5 and No. 7

ZERO cal.		ENT:Go on calibration of selected CH ESC:Not calibration	
Ch1 NO _x	Error No. 5	ppm	3083
Ch2 SO ₂	Range1 0-200 ppm Range2 0-2000 ppm		-13.6
Ch3 CO ₂	Range1 0-10 vol% Range2 0-20 vol%		-0.006
Ch4 CO	Range1 0-200 ppm Range2 0-1000 ppm		0.2
Ch5 O ₂	Range1 0-10 vol% Range2 0-25 vol%		-0.09




Error No. 5	SPAN cal. error ENT:Force Cal. ESC:Stop cal. and back to MEAS.
NO _x Calibration error Cause	
<ul style="list-style-type: none"> • Span gas is not flowing • Deviation of zero point due to contamination • Low sensitivity of detector 	

- Pressing  deletes the error display.

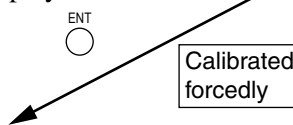

Calibration is continued. Unless another calibration error occurs, calibration is carried out to the end, the Measurement screen returns.

ESC 

Ch 1	NO ₂ (0-25)	90.8	ppm
Ch 2	SO ₂ (0-200)	13.6	ppm
Ch 3	CO ₂ (0-10)	0.000	vol%
Ch 4	CO (0-200)	0.0	ppm
Ch 5	O ₂ (0-25)	0.09	vol%

Error log file

If error occurs, the history is saved in an error log file. The error log file exists in the maintenance mode.

Error log screen

Error No.	Y	M	D	H	M	Ch
No. 4	12	2	11	18	10	5
No. 1	12	1	10	12	2	1
No. 6	11	12	1	10	10	2
No. 9	11	12	1	10	10	2
No. 5	11	12	1	0	0	2
No. 9	11	12	1	0	0	2

Annotations:

- Errors that occurred (points to the first column)
- Date and time when an error occurred. (points to the Y, M, D, H, M columns)
- Component for which the error occurred. (points to the Ch column)
- New (points to the top row)
- Old (points to the bottom row)

Buttons: Next page, Page 1, Clear Error Log

* Up to 14 errors can be saved in the error history; the oldest error will be deleted one by one every time a new error occurs.

* If the power supply is turned OFF, the contents in the error log file will not be lost or damaged.

Deletion of error history

Press the ENT key on the above screen, and the “Error Log Clear” will be highlighted. Further pressing the ENT key will clear the error history.

9. SPECIFICATIONS

9.1 General specifications

1. Standard Specifications

Principle of measurement:

- NO, SO₂, CO₂, CO, CH₄ ;
 Non-dispersion infrared-ray absorption method
 Single light source and single beams (single beam system)
- O₂ ; Fuel cell O₂ analyzer (build-in) or paramagnetic O₂ analyzer (build-in) or zirconia O₂ analyzer (externally installed TYPE: ZFK7)

Measurable gas components and measuring range:

	Minimum range	Maximum range
NO	0 - 200ppm	0 - 5000ppm
SO ₂	0 - 200ppm	0 - 10vol%
CO ₂	0 - 100ppm	0 - 100vol%
CO	0 - 200ppm	0 - 100vol%
CH ₄	0 - 500ppm	0 - 100vol%
O ₂ (Built in fuel cell)	0 - 10vol%	0 - 25vol%
O ₂ (Built-in Paramagnetic)	0 - 5vol%	0 - 100vol%
	None	100 - 95vol%
O ₂ (External Zirconia)	0 - 5vol%	0 - 25vol%

- Max. 5 components measurement including O₂.
For reverse range O₂ measurement, infrared gas measurement is not available (single range O₂ only).
- Measuring range ratio max. 1:10 (except O₂)
- Measuring ranges are changeable between the specified minimum and maximum range
Settable one range or two ranges
* In measurement range low range is called first range, high range is called second range.
- For possible combinations of components and ranges, refer to Table1.

Measured value indication:

- Digital indication in 4 digits (LCD panel with LED back light)
- Instantaneous value of each component
 - Instantaneous value after O₂ correction (only in NO, SO₂, CO measurement with O₂)
 - Average value after O₂ correction (only in NO, SO₂, CO measurement with O₂)
 - O₂ average value

Analog output signals:

4 to 20mA DC or 0 to 1V DC, isolated internally from circuit and ground. Output lines are non-isolated each other.; 12 outputs max.
 Allowable load 550Ω for 4 to 20mA DC
 Allowable load 100KΩ for 0 to 1V DC
 * Refer to Table2 for the channel No. of displayed values and analog output signals.

Analog input signal:

For signal input from externally installed O₂ analyzer.

Signal requirement;

(1) Signal from Fuji's Zirconia O₂ analyzer (TYPE: ZFK7)

(2) 0 to 1V DC from an O₂ analyzer

Input section is not isolated. This feature is effective when an O₂ analyzer is not built in.

* Externally installed O₂ analyzer should be purchased separately.

Digital output: (Option)

1c contact (24V DC/1A, resistive load) max.15 outputs

Instrument error, calibration error, range identification, auto calibration status, solenoid valve drive for auto calibration, High/Low limit alarm contact output.

* All relay contacts are isolated mutually and from the internal circuit.

Digital input: (Option)

Voltage contact (supply 12-24VDC (15mA Max.)) Max. 9 inputs

Remote range change over, auto calibration remote start, remote hold, average value reset, Isolated from the internal circuit with photocoupler.

Power supply:

Voltage rating ; 100V to 240V AC
 Allowable range ; 85V to 264V AC
 Frequency ; 50Hz/60Hz
 Power consumption ; 100VA max.

Operation conditions:

Ambient temperature ;
 -5°C to 45°C
 (40°C max. when 2 optical system at 200V AC power source)
 Ambient humidity ; 90% RH max., non-condensing

Storage conditions:

Ambient temperature ; -20°C to 60°C
 Ambient humidity ; 100% RH max., non-condensing

Dimensions (H × W × D):

133 x 483 x 382mm

Mass:

Approx. 9 kg

Finish color:

Front panel; Cool gray (PANTON 1C-F)

Enclosure:

Steel casing, for indoor use

Material of gas-contacting parts:

Gas inlet/outlet; SUS304
 Sample cell; SUS304, chloroprene rubber
 Infrared-ray transmitting window; CaF₂
 Internal piping; Toaron, Teflon, Polypropylene
 Paramagnetic O₂ sensor cell : SUS316
 Fuel cell O₂ sensor cell : ABS resin

Gas inlet/outlet:

Rc1/4 or NPT1/4 internal thread

Purge gas flow rate:

1L/min (when required)

Life time of fuel cell O₂ analyzer:

2 years

2. Standard Functions

Output signal holding:

Output signals are held unchanged during manual and auto calibrations by activation of holding (turning "ON" its setting). The values held are those just before start calibration mode or setting value. Usage is selectable. Indication of instantaneous values will not be held.

Switch ranges: The switch ranges function is available in manual, auto, and remote modes. Only preset switch method is effective.

Manual: Allows range to switch by key operation.
Auto: Automatically switched from first range to second range when the measured value exceeds 90%FS of first range.

Automatically switched from second range to first range when the measured value drops to 80% or less first range.

Remote: Voltage contact input
(Option) Allows range to switch via an external signal when remote range switch input is received. When the contact input terminals for each component are input voltage, the first range is selected, and it is switched to the second range when the terminals are open.

* These switch range value are settable between the first range and second range values (low/high range values).

3. Optional Functions

Remote output holding:

Output signal is held at the last value or preset value by voltage input to the remote output holding input terminals. Holding is maintained while the voltage is input to the terminals. Indication of instantaneous values are not held.

Range identification signal:

The present measuring range is identified by a contact position. The contact output terminals close for each component when the first range is selected, and open when the second range is selected.

Auto calibration:

Auto calibration is carried out periodically at the preset cycle. When a standard gas cylinder for calibration and a solenoid valve for opening/closing the gas flow line are prepared externally by the customer, calibration will be carried out with the solenoid valve drive contacts for zero calibration and each span calibration turned on/off sequentially at the set auto calibration timing.

Auto calibration cycle setting:

Auto calibration cycle is set. Setting is variable within 1 to 99 hours (in increments of 1 hour) or 1 to 40 days (in increments of 1 day).

Gas flow time setting:

The time for flowing each calibration gas in auto calibration is set. Settable within 60 to 900 seconds (in increments of 1 second)

Auto calibration remote start:

Auto calibration starts by opening the auto calibration remote start input terminal after short circuiting for 1.5 sec or longer. Auto calibration starts when contacts open.

Auto zero calibration:

Auto zero calibration is carried out periodically at the preset cycle. This cycle is independent from "Auto calibration" cycle.

When zero calibration gas and solenoid valve for opening/closing the calibration gas flow line are prepared externally by the customer, zero calibration will be carried out at the set auto zero calibration timing.

Auto zero calibration cycle setting:

Auto zero calibration cycle is set. Setting is variable within 1 to 99 hours (in increments of 1 hour) or 1 to 40 days (in increments of 1 day)

Gas flow time setting:

The timing for flowing zero gas in auto zero calibration is set. Settable within 60 to 900 seconds (in increments of 1 second)

High/low limit alarm:

Alarm contact output turns on when measurement value reaches the preset high or low limit alarm value. Contacts close when the instantaneous value of each channel exceeds the high alarm limit value or falls below the low alarm limit value.

Instrument error contact output:

Contacts turn on at occurrence of analyzer error No. 1, 2, 3 or 10.

Calibration error contact output:

Contacts turn on at occurrence of manual or auto calibration error (any of errors No. 4 to 9).

Auto calibration status contact outputs:

Contacts turn on during auto calibration.

O₂ correction: Correction of measured NO, SO₂ and CO gas concentrations into values at reference O₂ concentration

Correction formula:

$$C = \frac{21-O_n}{21-O_s} \times C_s$$

C : Sample gas concentration after O₂ correction

C_s : Measured concentration of sample gas

O_s : Measured O₂ concentration (Limit setting: 1 to 20% O₂)

O_n : Reference O₂ concentration (value changeable by setting 0 to 19% O₂)

Average value after O₂ correction and O₂ average value calculation:

The result of O₂ correction or instantaneous O₂ value can be output as an average value over the preset period of time.

Moving average method is used. Sampling interval is 30 seconds.

(Output is updated every 30 seconds. Update is the averaged value of the most recent elapsed averaging time period.)

Averaging time period is settable within 1 to 59 minutes (in increments of 1 minute) or 1 to 4 hours (in increments of 1 hour).

Average value resetting:

The above-mentioned output of average value is started from the initial state by opening the average value resetting input terminals after short circuiting for 1.5 sec or longer.

Output is reset by input voltage and the terminal circuit.

Communication function:

RS-485 (9pins D-sub connector)

Half-duplex bit serial

Start-stop synchronization

ModbusTM protocol

Contents : Read/Write parameters

Read measurement concentration and instrument status

Remark : When connecting via RS-232C interface, an RS-232C ↔ RS-485 converter should be used.

Atmospheric pressure correction:

Measure atmospheric pressure and calculate compensation (for use, be sure to relieve the exhaust gas from analyzer to the atmosphere)

After atmospheric pressure correction;

Zero point : No influenced

Span point: The change is 0.5% measured value or less relating to the change of the atmospheric pressure 1%.

Correction range: 700hPa-1050hPa

4. Performance

Repeatability: ±0.5% of full scale

Linearity: 1% of full scale

prior to atmospheric pressure correction (option)

Zero drift: ±2% of full scale/week

In the case of Auto zero calibration use for 500ppm or less range.

Span drift: ±2% of full scale/week

Response time (for 90% FS response):

1 to 15 sec electrical response. Within 10-30 seconds including replacement time of sampling gas.

Gas replacement time depends on the number of measuring components, and measuring range.

Interference from other gases:

Interference component	CO ₂ analyzer	CO analyzer	CH ₄ analyzer	SO ₂ analyzer	NO analyzer
CO 1000ppm	≤1.0%FS	—	≤1.0%FS	≤1.0%FS	≤1.0%FS
CO ₂ 15%	—	≤1.0%FS ^{*1)}	≤1.0%FS	≤1.0%FS	≤1.0%FS ^{*2)}
H ₂ O saturation at 20°C	≤1.0%FS	≤1.0%FS ^{*2)}	≤1.0%FS	—	—
H ₂ O saturation at 2°C	—	≤2.0%FS	—	≤2.0%FS	≤2.0%FS
CH ₄ 1000ppm	≤1.0%FS	≤1.0%FS	—	≤20ppm	—

*1) 0-200ppm range ≤ 2.0%FS

*2) 0-500ppm range or less ≤ 2.0%FS

5. EC Directive Compliance

The product conforms to the requirements of the Low Voltage Directive 2006/95/EC and EMC directive 89/336/EEC (as amended by Directive 92/31/EEC), both as amended by Directive 93/68/EEC.

It conforms to following standards for product safety and electromagnetic compatibility ;

EN61010-1 : 2010 Safety requirements for electrical equipment for measurement, control and laboratory use.

“Installation Category II”

“Pollution Degree 2”

EN61326-1 : 2006

Electrical equipment for measurement, control and laboratory use — EMC requirements.

CE

6. Requirements for Sample Gas

Flow rate: 0.5L / min ±0.2L / min

Temperature: 0 to 50°C

Pressure: 10 kPa or less (Gas outlet side should be open to the atmospheric air.)

Dust: 100 µg/Nm³ or less in particle size of 0.3 µm or smaller

Mist: Unallowable

Moisture: For sample gases No, SO₂, CO(0-200 ppm range): less than 2°C saturation point.

For most other sample gases: less than standard room temperature saturation point.

Corrosive component: 1 ppm or less

Standard gas for calibration:

- 1) Infrared-ray measurable component, standard O₂
 - Zero gas ; Dry N₂
 - Span gas ; Each sample gas having concentration 90 to 100% of its measuring range (recommended).

In case a zirconia O₂ analyzer is installed externally and calibration is carried out on the same calibration gas line:

 - Zero gas ; Dry air or atmospheric air (Do not use with CO₂ measurement)
 - Span gas ; For other than O₂ measurement, each sample gas having concentration 90 to 100% of its measuring range
For O₂ measurement, O₂ gas of 1 to 2 vol%/remains N₂ gas
- 2) Reverse range O₂ measurement
 - Zero gas ; 100vol% O₂
 - Span gas ; For O₂ measurement, O₂ gas of 95.0%~95.5vol%/remains N₂ gas

*For reverse range O₂ measurement, infrared measurable component is not measurable.

7. Installation Requirements

- Indoor use (Select a place where the equipment does not receive direct sunlight, draft/rain or radiation from hot substances. If such a place cannot be found, a roof or cover should be prepared for protection.)
- Avoid a place where unit receives heavy vibration
- Select a place where atmospheric air is clean

9.2 Table 1 Measurable component and range - availability check table -

Procedure of range selection

On one component analyzer:

First determine 1st range, then select 2nd range from the corresponding right column.

More than two components analyzer:

The 2nd range in the tables for two and more components is maximum available range.

Select the 2nd range less than or equal to the "2nd range (max)".

1-component analyzer : CO

1st range	2nd range
0 - 200ppm	None, 0 - 250ppm,300ppm,500ppm,1000ppm,2000ppm
0 - 250ppm	None, 0 - 300ppm,500ppm,1000ppm,2000ppm,2500ppm
0 - 300ppm	None, 0 - 500ppm,1000ppm,2000ppm,2500ppm
0 - 500ppm	None, 0 - 1000ppm,2000ppm,2500ppm,3000ppm,5000ppm
0 - 1000ppm	None, 0 - 2000ppm,2500ppm,3000ppm,5000ppm,1%
0 - 2000ppm	None, 0 - 2500ppm,3000ppm,5000ppm,1%,2%
0 - 2500ppm	None, 0 - 3000ppm,5000ppm,1%,2%
0 - 3000ppm	None, 0 - 5000ppm,1%,2%
0 - 5000ppm	None, 0 - 1%,2%,3%,5%
0 - 1%	None, 0 - 2%,3%,5%,10%
0 - 2%	None, 0 - 3%,5%,10%,20%
0 - 3%	None, 0 - 5%,10%,20%,25%
0 - 5%	None, 0 - 10%,20%,25%,40%,50%
0 - 10%	None, 0 - 20%,25%,40%,50%,70%,100%
0 - 20%	None, 0 - 25%,40%,50%,70%,100%
0 - 25%	None, 0 - 40%,50%,70%,100%
0 - 40%	None, 0 - 50%,70%,100%
0 - 50%	None, 0 - 70%,100%
0 - 70%	None, 0 - 100%
0 - 100%	None

1-component analyzer : NO

1st range	2nd range
0 - 200ppm	None, 0 - 250ppm,300ppm,500ppm,1000ppm,2000ppm
0 - 250ppm	None, 0 - 300ppm,500ppm,1000ppm,2000ppm,2500ppm
0 - 300ppm	None, 0 - 500ppm,1000ppm,2000ppm,2500ppm
0 - 500ppm	None, 0 - 1000ppm,2000ppm,2500ppm,3000ppm,5000ppm
0 - 1000ppm	None, 0 - 2000ppm,2500ppm,3000ppm,5000ppm
0 - 2000ppm	None, 0 - 2500ppm,3000ppm,5000ppm
0 - 2500ppm	None, 0 - 3000ppm,5000ppm
0 - 3000ppm	None, 0 - 5000ppm
0 - 5000ppm	None

1-component analyzer : SO₂

1st range	2nd range
0 - 200ppm	None, 0 - 250ppm,300ppm,500ppm,1000ppm,2000ppm
0 - 250ppm	None, 0 - 300ppm,500ppm,1000ppm,2000ppm,2500ppm
0 - 300ppm	None, 0 - 500ppm,1000ppm,2000ppm,2500ppm
0 - 500ppm	None, 0 - 1000ppm,2000ppm,2500ppm,3000ppm,5000ppm
0 - 1000ppm	None, 0 - 2000ppm,2500ppm,3000ppm,5000ppm,1%
0 - 2000ppm	None, 0 - 2500ppm,3000ppm,5000ppm,1%,2%
0 - 2500ppm	None, 0 - 3000ppm,5000ppm,1%,2%
0 - 3000ppm	None, 0 - 5000ppm,1%,2%
0 - 5000ppm	None, 0 - 1%,2%,3%,5%
0 - 1%	None, 0 - 2%,3%,5%,10%
0 - 2%	None, 0 - 3%,5%,10%
0 - 3%	None, 0 - 5%,10%
0 - 5%	None, 0 - 10%
0 - 10%	None

1-component analyzer : CO₂

1st range	2nd range
0 - 100ppm	None, 0 - 200ppm,250ppm,300ppm,500ppm,1000ppm
0 - 200ppm	None, 0 - 250ppm,300ppm,500ppm,1000ppm,2000ppm
0 - 250ppm	None, 0 - 300ppm,500ppm,1000ppm,2000ppm,2500ppm
0 - 300ppm	None, 0 - 500ppm,1000ppm,2000ppm,2500ppm
0 - 500ppm	None, 0 - 1000ppm,2000ppm,2500ppm,3000ppm,5000ppm
0 - 1000ppm	None, 0 - 2000ppm,2500ppm,3000ppm,5000ppm,1%
0 - 2000ppm	None, 0 - 2500ppm,3000ppm,5000ppm,1%,2%
0 - 2500ppm	None, 0 - 3000ppm,5000ppm,1%,2%
0 - 3000ppm	None, 0 - 5000ppm,1%,2%
0 - 5000ppm	None, 0 - 1%,2%,3%,5%
0 - 1%	None, 0 - 2%,3%,5%,10%
0 - 2%	None, 0 - 3%,5%,10%,20%
0 - 3%	None, 0 - 5%,10%,20%,25%
0 - 5%	None, 0 - 10%,20%,25%,40%,50%
0 - 10%	None, 0 - 20%,25%,40%,50%,70%,100%
0 - 20%	None, 0 - 25%,40%,50%,70%,100%
0 - 25%	None, 0 - 40%,50%,70%,100%
0 - 40%	None, 0 - 50%,70%,100%
0 - 50%	None, 0 - 70%,100%
0 - 70%	None, 0 - 100%
0 - 100%	None

1-component analyzer : CH₄

1st range	2nd range
0 - 500ppm	None, 0 - 1000ppm,2000ppm,2500ppm,3000ppm,5000ppm
0 - 1000ppm	None, 0 - 2000ppm,2500ppm,3000ppm,5000ppm,1%
0 - 2000ppm	None, 0 - 2500ppm,3000ppm,5000ppm,1%,2%
0 - 2500ppm	None, 0 - 3000ppm,5000ppm,1%,2%
0 - 3000ppm	None, 0 - 5000ppm,1%,2%
0 - 5000ppm	None, 0 - 1%,2%,3%,5%
0 - 1%	None, 0 - 2%,3%,5%,10%
0 - 2%	None, 0 - 3%,5%,10%,20%
0 - 3%	None, 0 - 5%,10%,20%,25%
0 - 5%	None, 0 - 10%,20%,25%,40%,50%
0 - 10%	None, 0 - 20%,25%,40%,50%,70%,100%
0 - 20%	None, 0 - 25%,40%,50%,70%,100%
0 - 25%	None, 0 - 40%,50%,70%,100%
0 - 40%	None, 0 - 50%,70%,100%
0 - 50%	None, 0 - 70%,100%
0 - 70%	None, 0 - 100%
0 - 100%	None

2-component analyzer : NO/SO₂

1-component : NO		2-component : SO ₂	
1st range	2nd range (max.)	1st range	2nd range (max.)
0 - 200ppm	0 - 2000ppm	0 - 200ppm	0 - 2000ppm
0 - 250ppm	0 - 2500ppm	0 - 250ppm	0 - 2500ppm
0 - 300ppm	0 - 2500ppm	0 - 300ppm	0 - 2500ppm
0 - 500ppm	0 - 5000ppm	0 - 500ppm	0 - 5000ppm
0 - 1000ppm	0 - 5000ppm	0 - 1000ppm	0 - 5000ppm
0 - 2000ppm	0 - 5000ppm	0 - 2000ppm	0 - 5000ppm
0 - 2500ppm	0 - 5000ppm	0 - 2500ppm	0 - 5000ppm
0 - 3000ppm	0 - 5000ppm	0 - 3000ppm	0 - 5000ppm
0 - 5000ppm	None	0 - 5000ppm	None

- The 2nd component should be selected as shown in the right table.

2-component analyzer : NO/CO

1-component : NO		2-component : CO	
1st range	2nd range (max.)	1st range	2nd range (max.)
0 - 200ppm	0 - 2000ppm	0 - 200ppm	0 - 2000ppm
0 - 250ppm	0 - 2500ppm	0 - 250ppm	0 - 2500ppm
0 - 300ppm	0 - 2500ppm	0 - 300ppm	0 - 2500ppm
0 - 500ppm	0 - 5000ppm	0 - 500ppm	0 - 5000ppm
0 - 1000ppm	0 - 5000ppm	0 - 1000ppm	0 - 5000ppm
0 - 2000ppm	0 - 5000ppm	0 - 2000ppm	0 - 5000ppm
0 - 2500ppm	0 - 5000ppm	0 - 2500ppm	0 - 5000ppm
0 - 3000ppm	0 - 5000ppm	0 - 3000ppm	0 - 5000ppm
0 - 5000ppm	None	0 - 5000ppm	None

- The 2nd component should be selected as shown in the right table.

2-component analyzer: CO₂/CH₄

1-component: CO ₂		2-component: CH ₄	
1st range	2nd range (max.)	1st range/2nd range (max.)	
0-100ppm	0-1000ppm	0-500/5000ppm, 0-1000/5000ppm, 0-2000/5000ppm, 0-2500/5000ppm, 0-3000/5000ppm, 0-5000ppm	
0-200ppm	0-2000ppm	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/1%, 0-2500ppm/1%, 0-3000ppm/1%, 0-5000ppm/1%, 0-1%	
0-250ppm	0-2500ppm		
0-300ppm	0-2500ppm		
0-500ppm	0-2500ppm	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/2%, 0-1/2%, 0-2/10%, 0-3/10%, 0-5/10%, 0-10%	
0-500ppm	0-5000ppm	0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/2%, 0-1/2%, 0-2/10%, 0-3/10%, 0-5/10%, 0-10%	
0-1000ppm	0-2500ppm	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/3%, 0-1/3%, 0-2/20%, 0-3/20%, 0-5/20%, 0-10/20%, 0-20%	
0-1000ppm	0-5000ppm	0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/3%, 0-1/3%, 0-2/20%, 0-3/20%, 0-5/20%, 0-10/20%, 0-20%	
0-1000ppm	0-1%	0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/3%, 0-1/3%, 0-2/20%, 0-3/20%, 0-5/20%, 0-10/20%, 0-20%	
0-2000ppm	0-2500ppm	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/5%, 0-1/5%, 0-2/20%, 0-3/20%, 0-5/20%, 0-10/20%, 0-20%	
0-2000ppm	0-5000ppm	0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/5%, 0-1/5%, 0-2/20%, 0-3/20%, 0-5/20%, 0-10/20%, 0-20%	
0-2000ppm	0-2%	0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/5%, 0-1/5%, 0-2/20%, 0-3/20%, 0-5/20%, 0-10/20%, 0-20%	
0-2500ppm	0-5000ppm	0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/5%, 0-1/5%, 0-2/20%, 0-3/20%, 0-5/25%, 0-10/25%, 0-20/25%, 0-25%	
0-2500ppm	0-2%	0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/5%, 0-1/5%, 0-2/20%, 0-3/20%, 0-5/25%, 0-10/25%, 0-20/25%, 0-25%	
0-3000ppm	0-2%	0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/5%, 0-1/5%, 0-2/20%, 0-3/20%, 0-5/25%, 0-10/25%, 0-20/25%, 0-25%	
0-5000ppm	0-3%	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/2%, 0-1/10%, 0-2/20%, 0-3/20%, 0-5/50%, 0-10/50%, 0-20/50%, 0-25/50%, 0-40/50%, 0-50%	
0-5000ppm	0-5%	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/2%, 0-1/10%, 0-2/20%, 0-3/20%, 0-5/20%, 0-10/50%, 0-20/50%, 0-25/50%, 0-40/50%, 0-50%	
0-1%	0-10%	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/2%, 0-1/10%, 0-2/20%, 0-3/25%, 0-5/50%, 0-10/50%, 0-20/50%, 0-25/50%, 0-40/50%, 0-50%	
0-2%	0-20%	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/2%, 0-1/10%, 0-2/10%, 0-3/10%, 0-5/25%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%	
0-2%	0-10%	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/2%, 0-1/10%, 0-2/20%, 0-3/25%, 0-5/50%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%	
0-3%	0-25%	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/2%, 0-1/10%, 0-2/20%, 0-3/25%, 0-5/25%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%	
0-3%	0-25%	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/2%, 0-1/10%, 0-2/20%, 0-3/25%, 0-5/25%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%	
0-5%	0-20%	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/2%, 0-1/10%, 0-2/20%, 0-3/25%, 0-5/50%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%	
0-5%	0-50%	0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/2%, 0-1/10%, 0-2/20%, 0-3/25%, 0-5/50%, 0-10/50%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%	
0-10%	0-20%	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/2%, 0-1/10%, 0-2/20%, 0-3/25%, 0-5/50%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%	
0-10%	0-50%	0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/2%, 0-1/10%, 0-2/20%, 0-3/25%, 0-5/50%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%	
0-20%	0-100%	0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/2%, 0-1/10%, 0-2/10%, 0-3/10%, 0-5/50%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%	
0-25%	0-100%	0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/2%, 0-1/10%, 0-2/20%, 0-3/25%, 0-5/50%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%	
0-40%	0-100%		
0-50%	0-100%		
0-70%	0-100%		
0-100%	None		

3-component analyzer: NO/SO₂/CO >>> Combination of 1st component NO and 2nd component SO₂ / 3rd component CO

1-component: NO		+	2-component: SO ₂		3-component: CO	
1st range	2nd range (max.)		1st range	2nd range (max.)	1st range/2nd range (max.)	
0-200ppm	0-2000ppm		0-200ppm	0-2000ppm	0-200/2000ppm, 0-250/2500ppm, 0-300/2500ppm, 0-500/2500ppm, 0-1000/2500ppm, 0-2000/2500ppm, 0-2500ppm	
0-250ppm	0-2500ppm		0-250ppm	0-2500ppm		
0-300ppm	0-2500ppm		0-300ppm	0-2500ppm		
0-500ppm	0-5000ppm		0-500ppm	0-2500ppm	0-200/2000ppm, 0-250/2500ppm, 0-300/2500ppm, 0-500/5000ppm, 0-1000/5000ppm, 0-2000/5000ppm, 0-5000ppm	
0-1000ppm	0-5000ppm		0-1000ppm	0-2500ppm		
0-2000ppm	0-5000ppm		0-2500ppm	None		
0-2500ppm	0-5000ppm		0-1000ppm	0-5000ppm	0-500/5000ppm, 0-1000/5000ppm, 0-2000/5000ppm, 0-2500/5000ppm, 0-3000/5000ppm, 0-5000ppm	
0-3000ppm	0-5000ppm		0-2000ppm	0-2500ppm		
0-5000ppm	None		0-3000ppm	0-2500ppm		
			0-5000ppm	None		

3-component analyzer: CO₂/CO/CH₄ >>> Combination of 1st component CO₂ / 2nd component CO and 3rd component CH₄

1-component: CO ₂		2-component: CO		+	3-component: CH ₄		Availability of product
1st range	2nd range (max.)	1st range/2nd range (max.)			1st range	2nd range (max.)	
0-5000ppm	0-3%	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/5%, 0-1/10%, 0-2/20%, 0-3/25%, 0-5/50%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%			0-5000ppm	0-5%	Product available only when CO analyzer measuring range is 50% or less
0-1%	0-5%				0-1%	0-10%	
0-2%	0-5%				0-2%	0-20%	Product available
0-5000ppm	0-5%	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/2%, 0-2500ppm/2%, 0-3000ppm/2%, 0-5000ppm/5%, 0-1/10%, 0-2/20%, 0-3/25%, 0-5/50%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%			0-3%	0-25%	
0-1%	0-10%	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/1%, 0-2500ppm/1%, 0-3000ppm/2%, 0-5000ppm/5%, 0-1/10%, 0-2/20%, 0-3/25%, 0-5/50%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%			0-5%	0-10%	Product available only when CO analyzer measuring range is 0 to 1000ppm or more.
0-2%	0-20%	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/1%, 0-2500ppm/1%, 0-3000ppm/2%, 0-5000ppm/5%, 0-1/10%, 0-2/20%, 0-3/25%, 0-5/50%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%			0-10%	0-20%	
0-2%	0-10%	0-500/5000ppm, 0-1000ppm/1%, 0-2000ppm/1%, 0-2500ppm/1%, 0-3000ppm/2%, 0-5000ppm/5%, 0-1/10%, 0-2/20%, 0-3/25%, 0-5/50%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%			0-20%	0-25%	Product available only when CO analyzer measuring range is 0 to 5000ppm or more.
0-3%	0-25%	0-3/25%, 0-5/50%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%			0-40%	0-50%	
0-5%	0-50%				0-50%	0-70%	Product available only when CO analyzer measuring range is more than 5000ppm or CO ₂ analyzer range is more than 2%.
0-10%	0-100%	0-1000ppm/1%, 0-2000ppm/1%, 0-2500ppm/1%, 0-3000ppm/2%, 0-5000ppm/5%, 0-1/10%, 0-2/20%, 0-3/25%, 0-5/50%, 0-10/100%, 0-20/100%, 0-25/100%, 0-40/100%, 0-50/100%, 0-70/100%, 0-100%			0-70%	0-100%	
0-20%				0-100%	None		

4-component analyzer: NO/SO₂/CO₂/CO >>> Combination of 1st component NO /4th component CO and component 2nd component SO₂/3rd component CO₂

1-component: NO		4-component: CO
1st range	2nd range (max.)	1st range/2nd range (max.)
0-200ppm	0-2000ppm	0-200/2000ppm, 0-250/2500ppm, 0-300/2500ppm, 0-500/2500ppm, 0-1000/2500ppm, 0-2000/2500ppm, 0-2500ppm, None
0-250ppm	0-2500ppm	
0-300ppm	0-2500ppm	
0-500ppm	0-2000ppm	
0-1000ppm	0-2000ppm	
0-2000ppm	None	
0-500ppm	0-5000ppm	0-500/2500ppm, 0-1000/2500ppm, 0-2000/2500ppm, 0-2500ppm, None
0-1000ppm	0-5000ppm	
0-2000ppm	0-5000ppm	
0-2500ppm	0-5000ppm	
0-3000ppm	0-5000ppm	
0-5000ppm	None	

+

2-component analyzer: SO ₂		3-component analyzer: CO ₂
1st range	2nd range (max.)	1st range/2nd range (max.)
0-200ppm	0-2000ppm	0-1/10%, 0-2/20%, 0-3/20%, 0-5/50%, 0-10/50%, 0-20/50%, 0-25/50%, 0-40/50%, 0-50%/None
0-250ppm	0-2500ppm	
0-300ppm	0-2500ppm	
0-500ppm	0-5000ppm	
0-1000ppm	0-5000ppm	
0-2000ppm	0-5000ppm	
0-2500ppm	0-5000ppm	
0-3000ppm	0-5000ppm	
0-5000ppm	None	

9.3 Code symbols

Digit	Description	note	Digit																								
			1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
4	<Specification/Structure> Horizontal type (Terminal block for power supply) Horizontal type (Power inlet, with lock)	note1	Z	P	A	B	1																				
5	<Mounting> 19inch rack mounting type EIA conformity					B																					
6	<Measurable component (NDIR)> 1st component	note2																									
	None																										Y
	NO																										P
	SO ₂																										A
	CO ₂																										D
	CO																										B
	CH ₄																										E
	NO																										F
	NO																										G
	CO ₂																										C
	CO																										J
	CH ₄																										K
	CO ₂																										L
	NO																										N
CO ₂	T																										
NO	V																										
	Z																										
7	<Measurable component (O ₂)> None External O ₂ analyzer External zirconia O ₂ analyzer (ZFK7) Built-in fuel cell O ₂ analyzer Built-in paramagnetic O ₂ analyzer	note3																									
8	<Revision code>																										
9	<Measuring range (NDIR)>1st component, 1st range	note4																									
10	<Measuring range (NDIR)>1st component, 2nd range	note4																									
11	<Measuring range (NDIR)>2nd component, 1st range	note4																									
12	<Measuring range (NDIR)>2nd component, 2nd range	note4																									
13	<Measuring range (NDIR)>3rd component, 1st range	note4																									
14	<Measuring range (NDIR)>3rd component, 2nd range	note4																									
15	<Measuring range (NDIR)>4th component, 1st range	note4																									
16	<Measuring range (NDIR)>4th component, 2nd range	note4																									
17	<Measuring range (O ₂)> None 0-5/10vol% 0-5/25vol% 0-10/25vol% 0-5vol% 0-10vol% 0-25vol% 0-50vol% 0-100vol% 100-95vol% Others																										
		Y																									
		A																									
		B																									
		C																									
		L																									
		M																									
		V																									
		P																									
		F																									
		R																									
		S																									
		N																									
		Z																									
18	<Gas connection> Rc1/4 NPT1/4 Rc1/4, with purging NPT1/4, with purging																										
19	<Output> DC0-1V DC4-20mA DC0-1V+Communication function DC4-20mA+Communication function																										
20	<Indication/power supply cord> In Japanese, cord rated 125V (PSE) In English, cord rated 125V (UL) In English, cord rated 250V (CEE) In Chinese, cord rated 250V (CCC)	note5 note5 note5 note5																									
21	<O ₂ correction and O ₂ correction average output> None O ₂ correction O ₂ correction average O ₂ correction and O ₂ correction average	note6																									
22	<Optional function (DIO)> FAULT A. Cal. H/L Alarm Rangeld/Remote range	note7																									
	None																										Y
	○																										A
	○																										B
	○																										C
	○																										D
	○																										E
	○																										F
○	G																										
○	H																										

Digit	Description	note	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	← Digit		
23	<Pressure compensation> None Pressure compensation		Z	P	A					1																Y				
24	<Unit> ppm, vol% mg/m ³ , g/m ³	note8																								A	B			
25	<Adjustment> For standard For heat treatment furnace For converter Others	note9																								A	C	D	Z	

RANGE CODE

Range	Code	Range	Code
None	Y	0~1vol%	J
0~100ppm	B	0~2vol%	K
0~200ppm	C	0~3vol%	Q
0~250ppm	D	0~5vol%	L
0~300ppm	S	0~10vol%	M
0~500ppm	E	0~20vol%	N
0~1000ppm	F	0~25vol%	V
0~2000ppm	G	0~40vol%	W
0~2500ppm	U	0~50vol%	P
0~3000ppm	T	0~70vol%	X
0~5000ppm	H	0~100vol%	R
		Others	Z

O₂ measurement range

Measurement range	Range code	Fuel cell O ₂ analyzer (built - in)	Paramagnetic O ₂ analyzer (built - in)	Zirconia O ₂ analyzer (external)
0~5/10 vol%	A		○	○
0~5/25 vol%	B		○	○
0~10/25 vol%	C	○	○	○
0~5 vol%	L		○	○
0~10 vol%	M	○	○	○
0~25 vol%	V	○	○	○
0~50 vol%	P		○	
0~100 vol%	R		○	
100~95 vol%	S		○	

note1)When "D" is specified at 4th digit, Power supply cord is supplied in the scope of supply. Cord specification should be specified at the 20th digit.

note2)When only O₂ measurement is necessary, "Y" should be specified at 6th digit.

note3)When "1" is specified at 7th digit, O₂ pt analyzer signal has to be set as 0-1V DC linear corresponding to full scale. External zirconia O₂ analyzer and external O₂ analyzer are not included in the scope of supply, and has to be separately ordered.

note4)Refer to Table 1 for possible combination of measuring components and ranges in this manual. When "Y" is specified at 6th digit, "Y" should be specified at 9th to 16th digit. For fuel cell O₂ analyzer, range is 0-10vol% or more.

note5)Select the type of voltage rating, plug type and applicable standard of the power supply cord by 20th digit. Select a power supply cord for using at the location of end-user. When "A" is specified at 4th digit, Power supply cord will not be included in scope of delivery. When English is specified for display language, "E" should be selected at 20th digit.

note6)O₂ correction is calculated only for NO, SO₂ and CO.

note7)When 5 components measurement is specified, "H" must not be specified at 22nd digit.

When 4 components measurement is specified and "H" is specified at 22nd digit, 3 points is maximum for alarm output function.

note8) When "B" is specified at 24th digit, measuring range should be specified by ppm range code. In this case NO, SO₂ and CO measuring range are corresponding range in mg/m³. Please refer to the table shown below for the corresponding range code based on "mg/m³".

note9) When A to D is specified at 25th digit, the analyzer will be adjusted and delivered with the following gasses.

Standard "A": balance gas N₂.

For heat treatment furnace "C": balance gas 30vol% H₂/remaining N₂.

For converter "D": balance gas CO, CO₂.

When other adjustment is required, please specify "Z".

When "Z" is specified, please attach a list of gas composition contained in the measuring gas.

Corresponding mg/m³

Range code	Unit : ppm	Corresponding range in mg/m ³		
		NO	SO ₂	CO
B	0-100ppm	0-130mg/m ³	0-280mg/m ³	0-125mg/m ³
C	0-200ppm	0-260mg/m ³	0-570mg/m ³	0-250mg/m ³
D	0-250ppm	0-325mg/m ³	0-700mg/m ³	0-300mg/m ³
S	0-300ppm	0-400mg/m ³	0-850mg/m ³	0-375mg/m ³
E	0-500ppm	0-650mg/m ³	0-1,400mg/m ³	0-600mg/m ³
F	0-1,000ppm	0-1,300mg/m ³	0-2,800mg/m ³	0-1,250mg/m ³
G	0-2,000ppm	0-2,600mg/m ³	0-5,600mg/m ³	0-2,500mg/m ³
U	0-2,500ppm	0-3,300mg/m ³	0-7,100mg/m ³	0-3,000mg/m ³
T	0-3,000ppm	0-4,000mg/m ³	0-8,500mg/m ³	0-3,750mg/m ³
H	0-5,000ppm	0-6,600mg/m ³	0-14.00g/m ³	0-6,250mg/m ³

The conversion formula "ppm" unit into "mg/m³" unit.

NO (mg/m³) = 1.34 × NO (ppm)

SO₂ (mg/m³) = 2.86 × SO₂ (ppm)

CO (mg/m³) = 1.25 × CO (ppm)

9.4 Outline diagram

<Analyzer main unit>

(Unit : mm)

